


BEEFCAKE

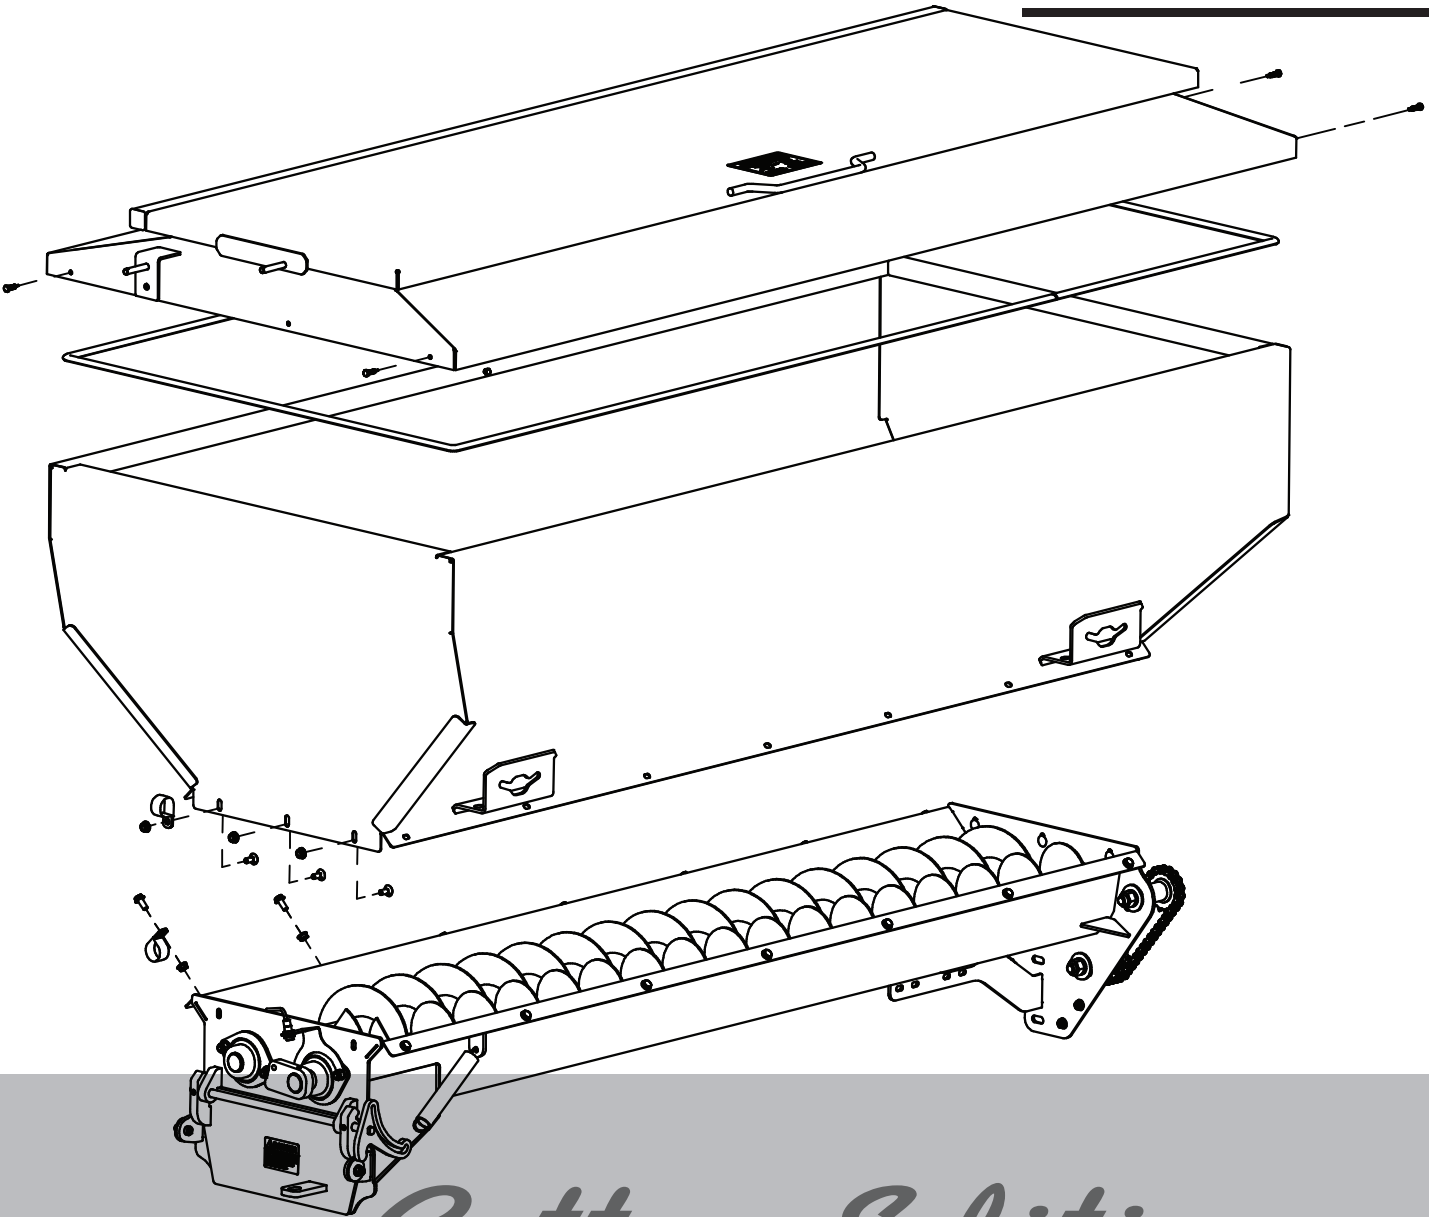

Cotton Edition OPERATOR'S & PARTS MANUAL

Thank you for purchasing a Harper Beefcake.

TO THE OWNER OR OPERATOR:

As with all Harper products, the Harper Beefcake has been developed through tough design and testing procedures to produce a machine that can be relied on. This manual gives assembly, operating, and service information for models **BC1000, BC1500, and BC2000**. Please read and understand all instructional material included with the Beefcake and its components before assembling and operating the equipment.

A Beefcake cake feeder can present hazards to an operator who follows unsafe procedures in either the operation or maintenance of the unit. Therefore, **SAFETY WARNINGS** are presented at certain locations in the text.

SYMBOL:



SAFETY WARNING!



MEANING: Failure to understand and obey this warning may result in injury to you or others. Whenever this symbol is used, please pay very close attention to the information presented, and make sure you fully understand. If you do not, contact your dealer or Harper Industries for clarification.



SAFETY WARNING!



All shields and guards must be in place for proper and safe operation of this equipment. Where they are shown removed in this manual, it is for purposes of illustration and instruction only. Do not operate this equipment unless all shields and guards are in place.

Harper Industries, Inc. is continually striving to improve the design and performance of its products. We reserve the right to make changes in specifications and design without thereby incurring any obligation relative to previously manufactured products.

© 2026 Harper Industries, Inc.

The Harper and Beefcake names are registered trademarks of Harper Industries, Inc. All other brand and product names are trademarks or registered trademarks of their respective companies.

LIMITED WARRANTY

Harper Industries, Inc. (HII) warrants to each purchaser of a new Harper Beefcake from an authorized dealer or representative, that such equipment is free of manufacturer's defects in workmanship and materials which appear while in normal service for a period of ONE YEAR commencing with delivery to the original user.

The obligation of HII under this warranty is expressly limited, at our option, to replacement or repair at a service facility designated by Harper Industries or at the manufacturing plant in Harper, KS. A part will be replaced after inspection discloses it to have been defective. This warranty does not apply to defects caused by damage or unreasonable use (including failure to provide reasonable and necessary maintenance, or by performing functions without genuine Harper Beefcake accessories) while in the possession of the consumer.

Warranty is limited to parts, labor and ground freight delivery of replacement parts. HII shall not be liable for the consequential damages of any kind, including but not limited to consequential labor costs or transportation charges in connection with replacement or repair of defective parts.

This warranty does not apply to parts subjected to misuse, abuse, alteration, improper or inadequate maintenance, or normal wear (including chains, augers).

Harper Industries makes no warranty with respect to trade accessories. They are subject to the warranties of their respective manufacturers.

ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING ANY WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. HII makes no other express warranty, nor is anyone authorized to make any on behalf of HII.

For further information please contact your nearest Harper Beefcake dealer.

Date of Purchase _____/_____/_____

Dealer's Name _____

Dealer's Phone _____

Serial Number _____

Table of Contents

OPERATOR SECTION

To the Owner or Operator.....	1
Warranty Statement.....	2
Table of Contents.....	3
Specifications.....	4
Feature Identification.....	4-5
General Safety Guidelines	
Equipment and Controls.....	6
Guards and Shields.....	6
Replacement Parts.....	6
Safety Decals.....	6
Hydraulics.....	6
Installation	7
Operating Instructions	
Before Operating.....	8
Transporting.....	8
Operating	
Hydraulic BC.....	8
Electric BC.....	9
Optional Door Operations	
Door Lifting Mechanism.....	10
Kicker.....	10
Optional Chute Operations	
Method 1 - Manual Chute Operations.....	11
Method 2 - Actuator.....	11
Electric Models	12

PARTS SECTION

Structure

Cake Feeder Assy.....	16
Cake Feeder Stand (2017).....	17
Auger & Trough Assy (2021).....	18-19
Auger Orientation.....	20
Drive Chains Adjustment & Tension.....	21
Lid & Frame Assy.....	22
Lift Handle & Latch/Drive Shield.....	23
Agitator Drive Assy.....	24
Agitator Assy.....	25
Chute Extension Assy.....	26
Cake Feeder Dummy Arms.....	27
Drive Shield.....	28
Decals.....	29

Hydraulic/Electric

Hydraulic Drive (2021).....	30
Electric Drive (2021).....	31
Electric Drive (2017).....	32
Hand Control & Harness (2017).....	33-34
Hand Control & Harness (2020).....	35-36
Electrical Schematic.....	37

Optional


Door Operation Options (Kicker).....	38
Electric Actuator.....	39
Light Bar Option (800/900 Beds).....	40
Light Bar (Non-800/900 Beds).....	41

Specifications

Power	Hydraulic Electric Motor - Leeson 3/4 hp
Capacity	BC2000 - 46 cu. ft. - about 2000 lbs. w/ 3/4" range cubes or 900 lbs. of cotton seed
Dimensions	BC2000 - Length: 80 in Width: 42 in Height: 50.3 in
Paint	Durable 2-part Polyurethane
Augers	Two 6 inch diameter augers Left - 76 3/4 in long Right - 78 in long
Options	- Electronic Actuator for chute - Kicker for chute door

NOTE: Following publication of this manual, certain changes in standard equipment and options may have occurred which would not be included in these pages. Your Harper dealer is the best source for up-to-date information.

Feature Identification

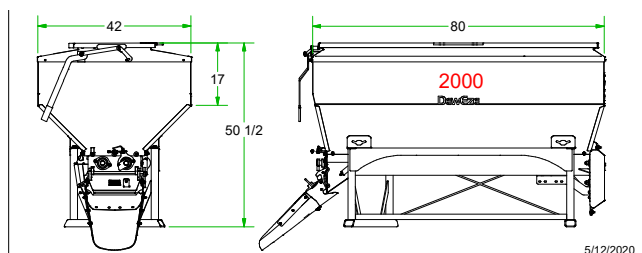


AGITATOR

**AGITATOR
PIN**

Agitator - when rotating, it keeps seed from bridging, and breaks up bunches before it is fed into the augers.

Agitator Pin - when inserted, the agitator is engaged. This should only be engaged when feeding cotton seeds.

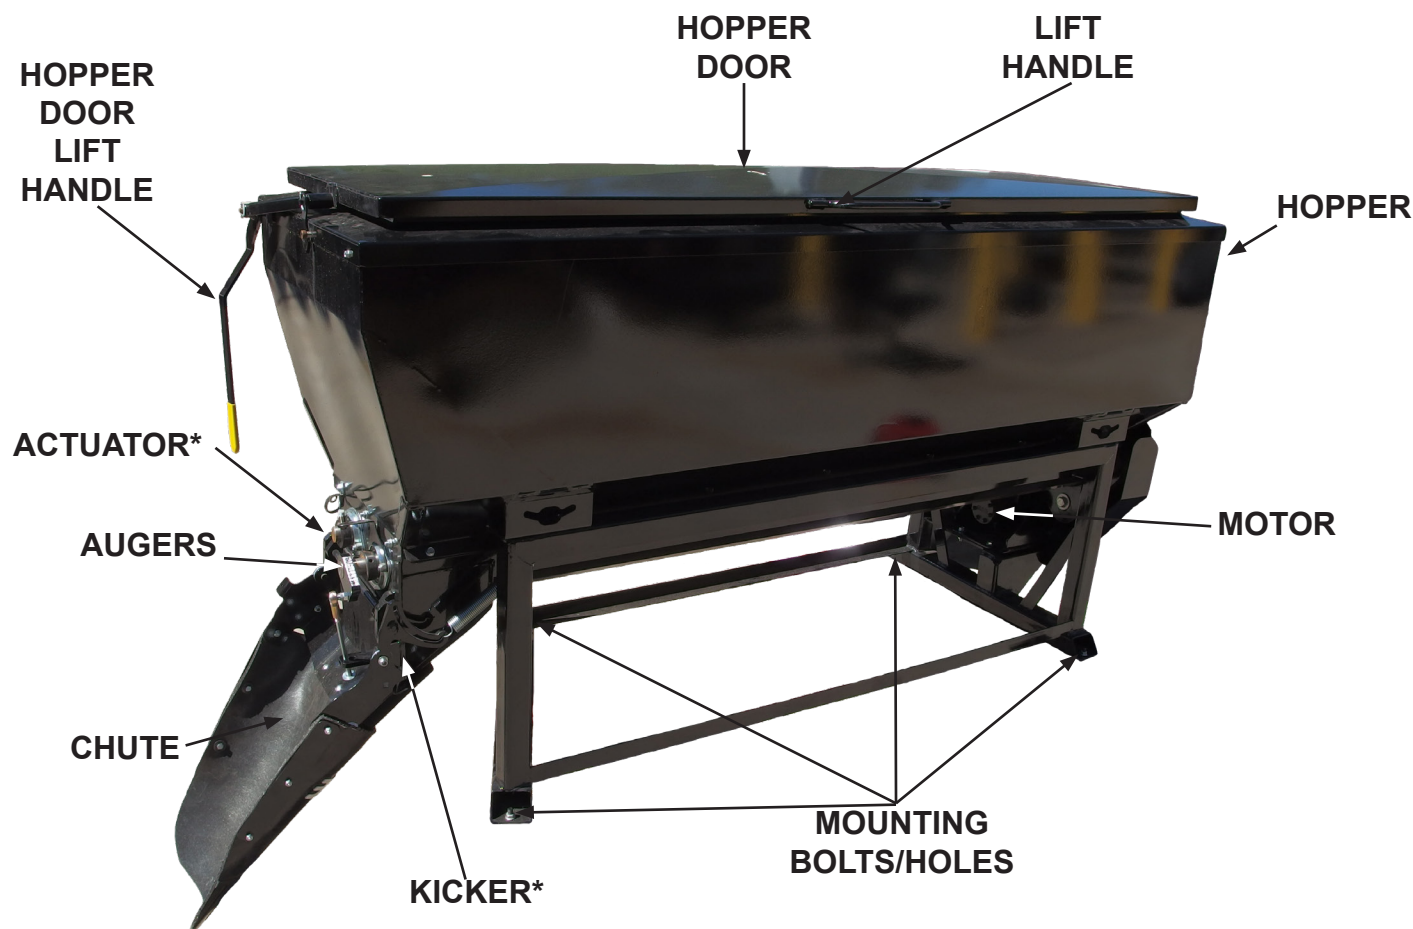

Hopper Door Lift Handle - used to open the hopper from the ground.

Actuator* - raises and lowers the chute.

Augers - when rotating, push the feed out of the hopper and down chute.

Chute - made of rubber and can be raised for transport or lowered for distribution of feed.

Kicker* - when attached it allows the door for the feed to be held in an open position.

Mounting Holes/Bolts - for mounting the Beefcake to the flatbed.

Motor - is a Leeson 3/4 hp used to power the dual augers.

Hopper - has three options of capacity: 1000, 1500, or 2000 lb limits based on choice of BC.

Hopper Door - has a weather proof strip on the inside edge of door to keep moisture out.

Lift Handle - used to open hopper when on the bale bed.

* denotes optional attachments of the **Beefcake**.

General Safety Guidelines

Equipment & Controls

- Before operating this equipment, read and understand the Operator's Manual.
- Altering the unit in any way that adversely affects its safe operation, performance or durability will void the warranty and may cause hazardous conditions.
- Know the location and function of all controls and how to stop the equipment quickly in an emergency before you operate the unit.
- Keep all bolts, screws and fittings tight to ensure safe operation of equipment.

Guards & Shields

- Keep all safety devices in place and in good operating condition.
- Replace all worn, damaged, unusable, missing or lost safety shields and guards before operating unit.

Replacement Parts

- Use genuine factory parts or parts with equivalent characteristics including: type, strength and material.
- Replace locknuts and locking screws if they cannot be tightened without considerable resistance for several turns before they are completely tight.
- If hardware is not secure, or if fasteners are over-tightened, equipment failure may result posing possible safety hazards.
- Use proper torque specifications for all fasteners when they are replaced.



SAFETY WARNING!

Failure to use genuine factory parts may result in voiding of the warranty, product malfunction or possible injury.

Safety Decals

- If safety related or instructional decals become illegible or are removed, replace them immediately.
- If parts are replaced, make sure all safety related or instructional decals are present before the equipment is operated again.
- New decals may be obtained from your local Harper Dealer.

Hydraulics

To prevent serious injury or death:

- Relieve pressure on system before repairing, adjusting or disconnecting any hydraulic hose or fitting.
- Wear proper hand and eye protection when searching for leaks.
- Use wood or cardboard instead of hands when looking for leaks.
- Keep all hoses, fittings and components in good operating condition.
- Do not use any type of heat or flame (welding, soldering, cutting torch, etc.) near pressurized hydraulic lines.



SAFETY WARNING!

HIGH-PRESSURE FLUID HAZARD!

Escaping fluid under pressure can penetrate skin causing serious injury or death.

Installation

You can use select Deweze Balebeds to lift your new **Beefcake** on to the bed or one of many other options as long as safety, precaution and common sense are used.



SAFETY WARNING!

Keep any objects or body extremities from beneath the Beefcake when loading and do not stand under the feeder when it is raised.


Next, position the Beefcake into place so that you can mark on the flatbed floor the location of the mounting holes for attaching the **Beefcake**. Align the mounting holes with stringers of the flatbed, and mark the (4) mounting holes for drilling, rotate the Beefcake to the back of your flatbed, and drill the (4) mounting holes.




Put the Beefcake back in place where you marked and drilled the mounting holes. Attach with either the (4) mounting bolts included in your purchase or your own preferred size of mounting bolt that can fit into the predrilled mounting points on the Beefcake.

The final step depends on whether you have purchased the hydraulic or electric motor version of the Beefcake.

For the hydraulic, connect the hydraulic hoses that are attached to the Beefcake to your bed's hydraulic hookups located on the right side of the headache rack. There is a check valve pre-installed on your Beefcake. If by chance the augers do not run when activated, switch the hoses on the bed location. This will allow it to run correctly. There is also an electrical harness that will need positive and negative leads run from the feeder to the battery under the hood of the truck.

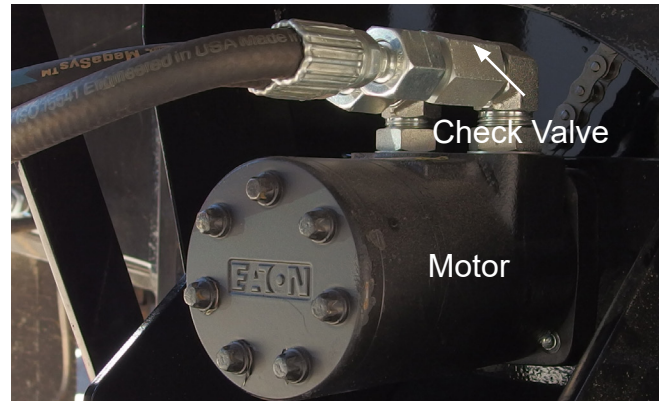


For the electric, attach the positive cable to the solenoid as depicted below, and run it to the positive end of the battery on the truck, and be sure to put the 200 Amp fuse on with the cable (this will protect the motor).

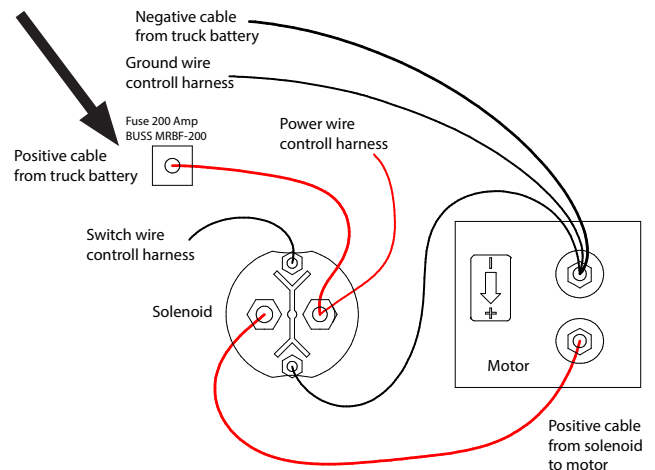


Also, If you prefer to operate either of the version (hydraulic or electric) from inside your truck, run the Beefcake controller to the inside of your truck.

DewEze Flatbed Stringer Locations

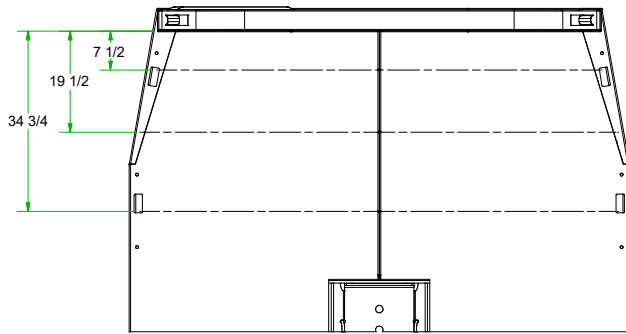

684 & 784

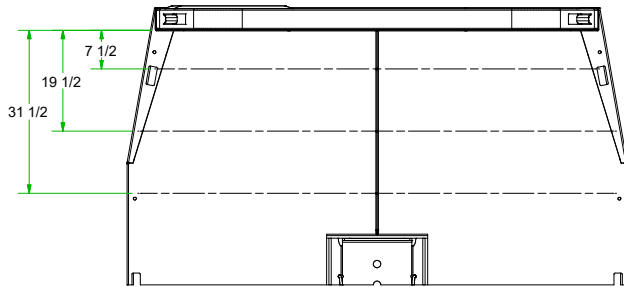

676 & 776
688 & 788

Operating Instructions

Before Operating

- Inspect inside the hopper and around the chain drive for the augers for any foreign objects. If any are found remove it/them.
- Be sure to check that all shields are in place and that all bolts or fasteners are tightened.

Transporting

- When transporting the Beefcake, be sure that the hopper lid's lift handle has the safety latch in place so that the lid does not rise during transport due to wind.



Operating

When feeding cotton seed, insert agitator pin, and for any other feed remove pin. See page 4 for location.

Hydraulic Powered Beefcake

- Fill Beefcake with desired amount of feed or grain product.
- Lower the rubber chute to feeding position.
- Activate the hydraulic motor with the balebed's remote.

Due to the check valve on this product, if it becomes clogged or stalls, it cannot be reversed to dislodge it. You must stop the feeder, shut off the units power, and disconnect the hydraulic hoses to relieve any pressure on the system before seeing to the problem.




Do not put hands into a plugged auger when there is pressure on the system. It can result in harm.

- Do not use the hopper for long term storage of feed. It could create a corrosive environment and cause unwarranted wear on your machine.

Electric Powered Beefcake


- Fill Beefcake with desired amount of feed or grain product.
- Lower the rubber chute to feeding position.
- Activate the electric motor with the Beefcake's remote.

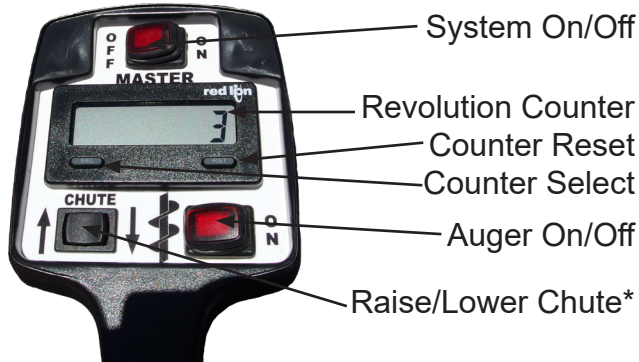

*Only available with the chute actuator option otherwise this switch serves no purpose.

For Your Information

The controller for the Beefcake is used in both the hydraulic and electric version of the feeder. Currently, the only difference is that the auger is activated differently between the two options. The electric uses the auger on/off switch on the Beefcake remote, and the hydraulic uses the flatbeds hydraulic function to activate the auger. Aside from the auger, everything else on the Beefcake remote is universal.

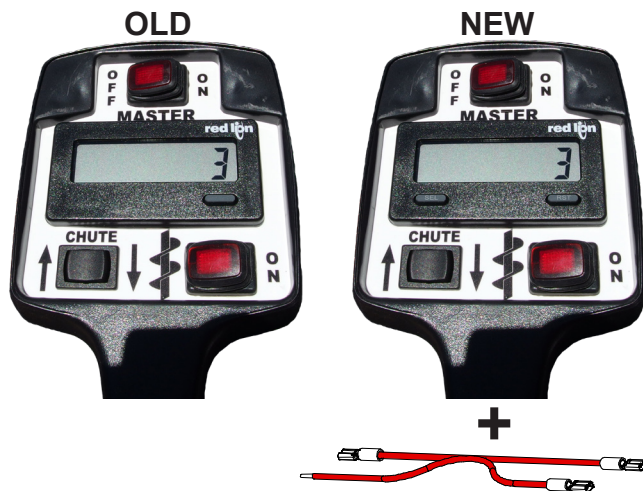

NOTE: Old ONE BUTTON counters had a soldered battery and are obsolete. New counters have TWO BUTTONS and require a jumper wire to add constant power: **Page 32**

Red Lion Cub5B Counter Factory Reset

RESET:

Press RST and hold for 3 seconds & release.

Press SEL 1 time.

REPROGRAM:

Power off hand control then turn back on.

Hold SEL for 3 seconds.

>>>> Screen will display "Pro No"

Press RST 3 times.

>>>> Screen will display "3-dsplay"

Press SEL 8 times.

>>>> Screen will display "Fact Set", "No"

Press RST 1 time.

>>>> Screen will display "Yes"

Press SEL 1 time.

>>>> Screen will display "Pro No"

Press SEL 1 time.


Done

NOTE: Error code EE means an error occurred between the counter and the sensor. Ensure all wires are tightend and free of corrosion. Also look for nicks that could cause intermittent ground faults.


Optional Door Operations

Method #1

Door Lifting Mechanism and Operation

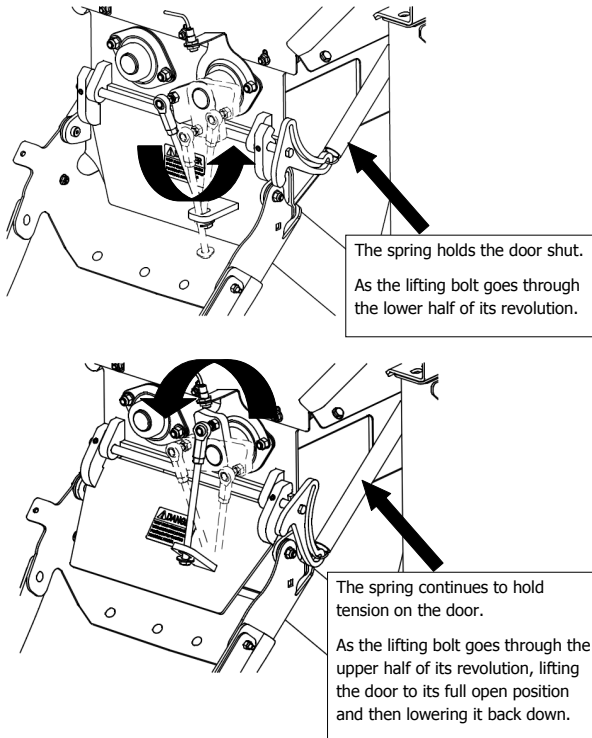


When it is in the closed position, it will create piles while operating. Whereas if it is in the open position, it will create a row while operating.

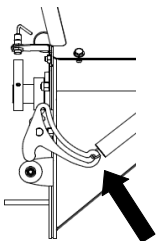


Changing the position of this spring holds the door **OPEN** or **CLOSED**

This is located on the right side of the chute as depicted by the image.

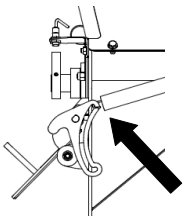

Reference **page 38** for optional door lift parts

Method #2 Kicker

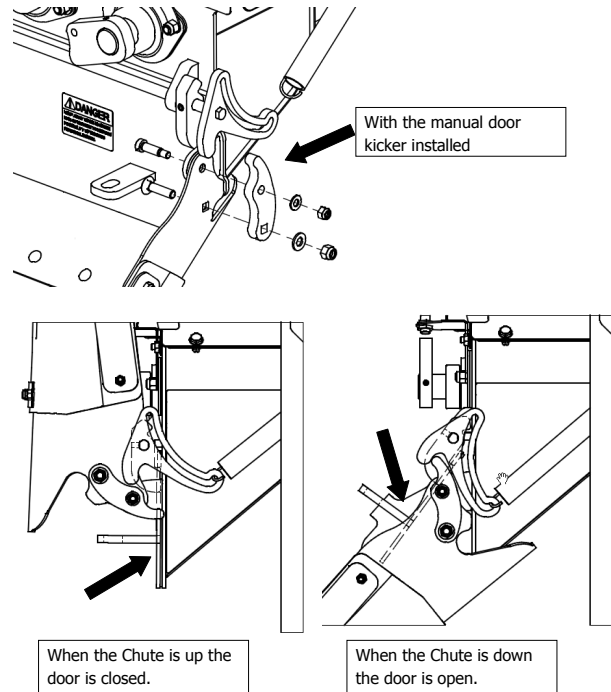

The kicker is a great option for when you will always be making rows rather than piles with your feed.

NOTE: USE ONLY ONE METHOD.




CAUTION!




Using both optional methods at the same time will cause either the chain or actuator to fail.

Optional Chute Operations

Method #1 Standard

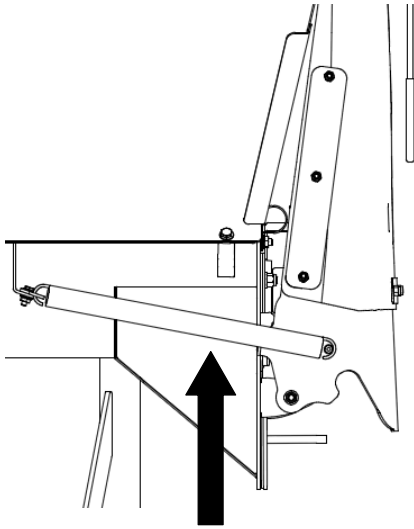


This spring holds the Chute
either **UP** or **DOWN**

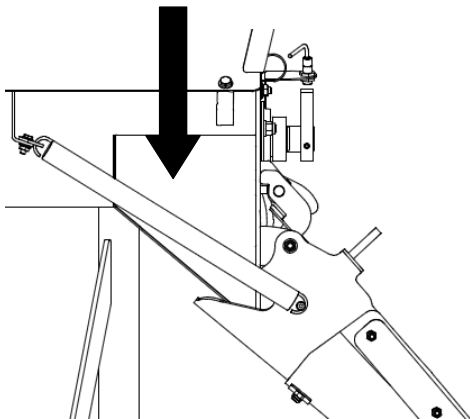

This is located on the left side of the chute as depicted by the image.

This is used for transportation so that the chute is not damaged in any way due to protruding from the side of the truck.

Method #2 Actuator

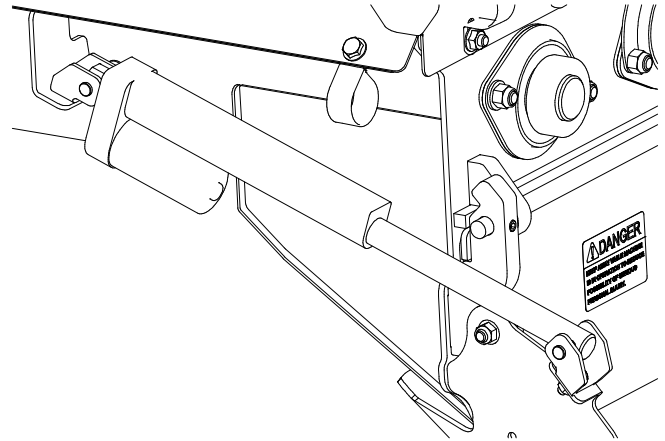

The actuator replaces the spring that holds the chute either an up or down position. It allows the operator to manage the chute from the comfort of the seat or whatever their location is. See page 7 for details on the switch for the actuator.

DewEze Electric Beefcake

Electrical Minimum Requirements

Cable Requirements

All Electric Beefcake models are supplied with 18FT 2GA welding cable leads for hook-up to truck battery — This is maximum length for this cable

If a longer length is desired refer to chart below for minimum cable size

18FT	25FT	30FT	35FT	40FT
Supplied	"0" Gauge	"00" Gauge	"00" Gauge	"000" Gauge

Cables of new length must be built from single cables without splices or connections — Cable ends must be properly crimped or soldered

Electrical Supply Requirements

Beefcake electric feeders require a stable power source:

- Batteries must be in good condition and should be fully charged (12.7V standing)
- Truck Charging System must operational (14V+ if engine running)
- All electrical connections must be good (checked with voltmeter, not visually)

Batteries at 12.1 Volts are not fully charged they are actually 50% discharged

Battery Standing Voltage @ Percent Charge

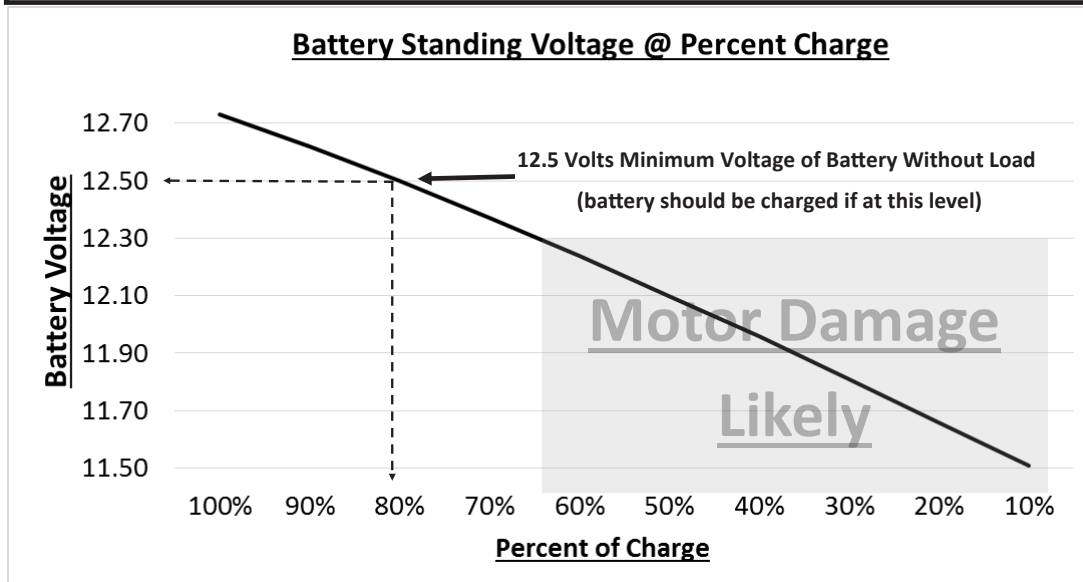


Chart Shows the unloaded voltage of a good battery at a particular charge level this is for reference only — actual battery charge and capacity should be determined by load testing of the battery

2/12/19

PARTS

Table of Contents

PARTS SECTION

Structure

Cake Feeder Assy.....	16
Cake Feeder Stand (2017).....	17
Auger & Trough Assy (2021).....	18-19
Auger Orientation.....	20
Drive Chains Adjustment & Tension.....	21
Lid & Frame Assy.....	22
Lift Handle & Latch/Drive Shield.....	23
Agitator Drive Assy.....	24
Agitator Assy.....	25
Chute Extension Assy.....	26
Cake Feeder Dummy Arms.....	27
Drive Shield.....	28
Decals.....	29

Hydraulic/Electric


Hydraulic Drive (2021).....	30
Electric Drive (2021).....	31
Electric Drive (2017).....	32
Hand Control & Harness (2017).....	33-34
Hand Control & Harness (2020).....	35-36
Electrical Schematic.....	37

Optional

Door Operation Options (Kicker).....	38
Electric Actuator.....	39
Light Bar Option.....	40

Cake Feeder Assembly Cotton Edition


Parts List		
ITEM	QTY	PART # DESCRIPTION
1	6	102074 Clamp, Adel .75w x 1.25id x .406 Hole
2	5	110020 Bolt, 5/16-18 X 0.75 in Carriage
3	14	110444 BOLT, 5/16-18 LOCK (NYLON)
4	6	110603 NUT, 5/16-18 WIZ FLANGE
5	14	110606 NUT, 5/16-18 WIZ FLANGE
6	1	110871 Bolt, 5/16-18 X 1 in Carriage
7	6	111155 Washer, 5/16 Flat, Large Dia. 1-1/4 Zinc
8	7	710586 SCREW, 1/4 X 1 TEK SELF-TAP

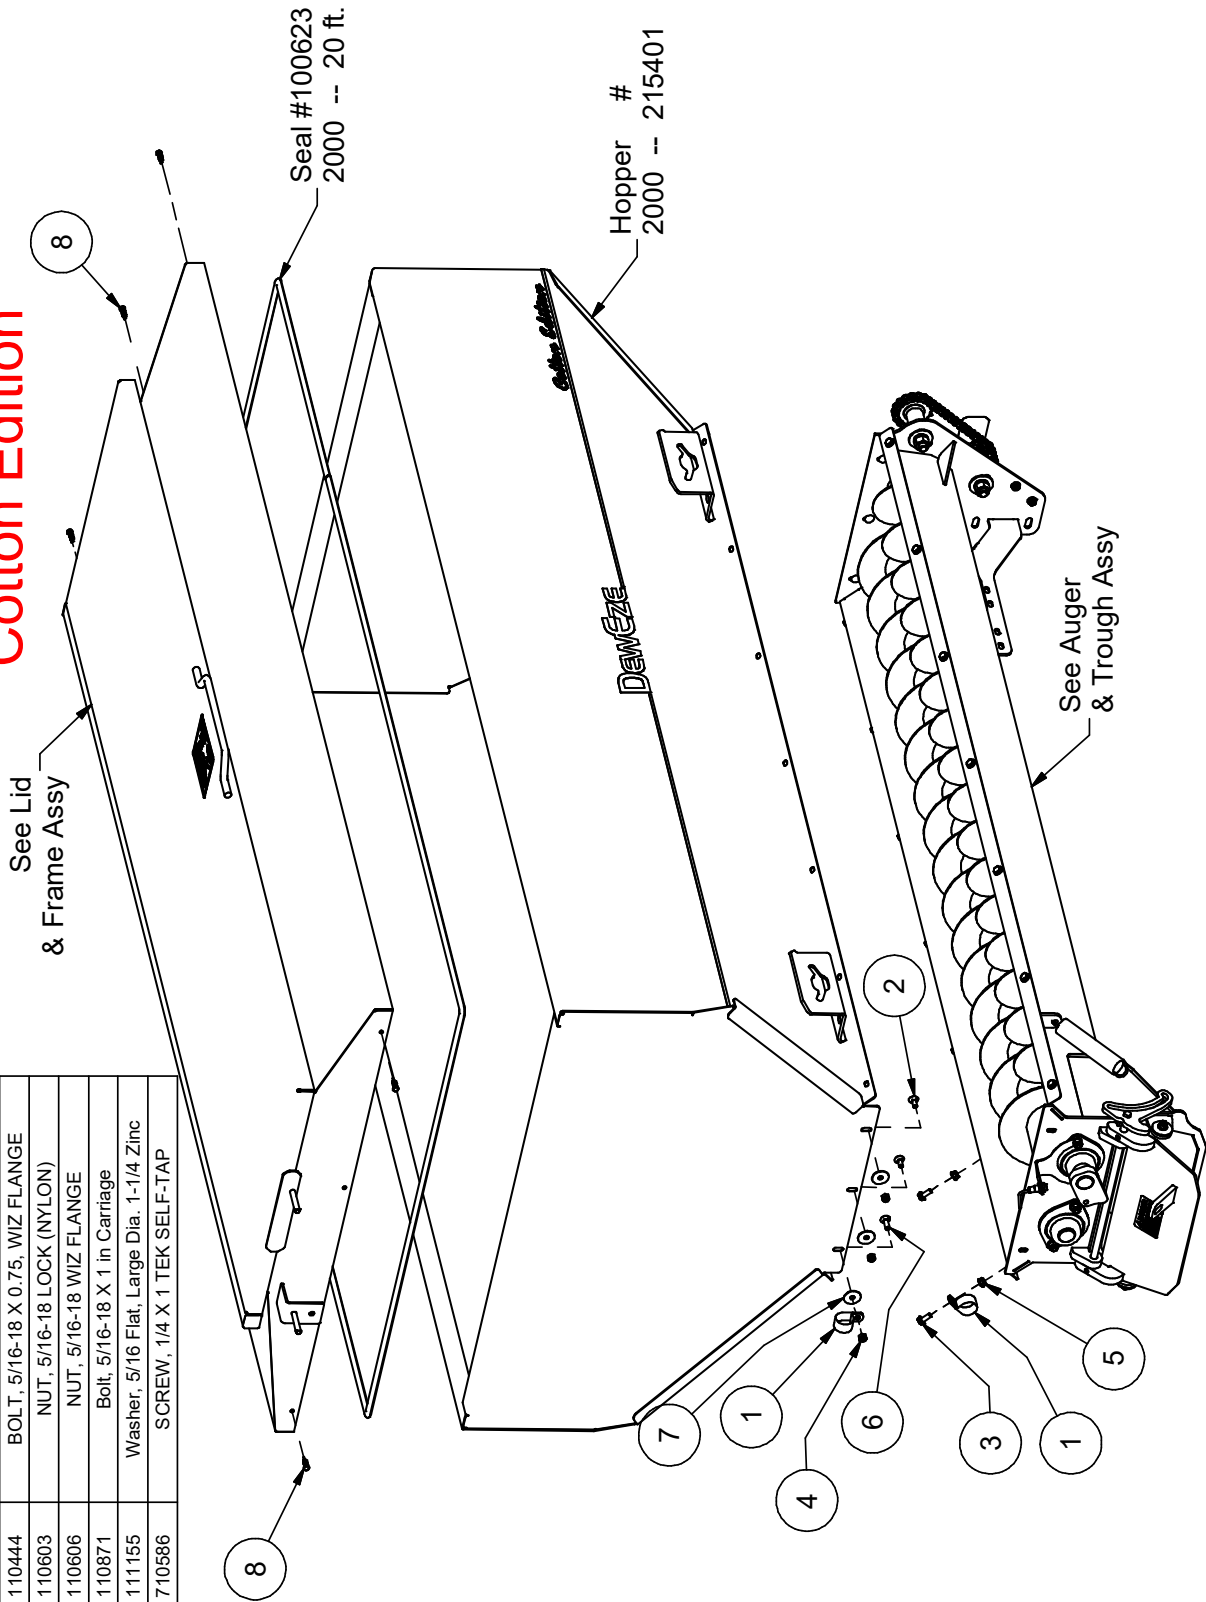

1/3/2019


Cake Feeder Stand 2017

Parts List			
ITEM	QTY	PART #	DESCRIPTION
1	4	110220	BOLT, 1/2-13 X 1, WIZ FLANGE
2	4	110588	NUT, 1/2-13 WIZ FLANGE
3	1	215376	Weldment, Cake Feeder Stand, 2017
4	4	205136	Kit, Mounting Bolts

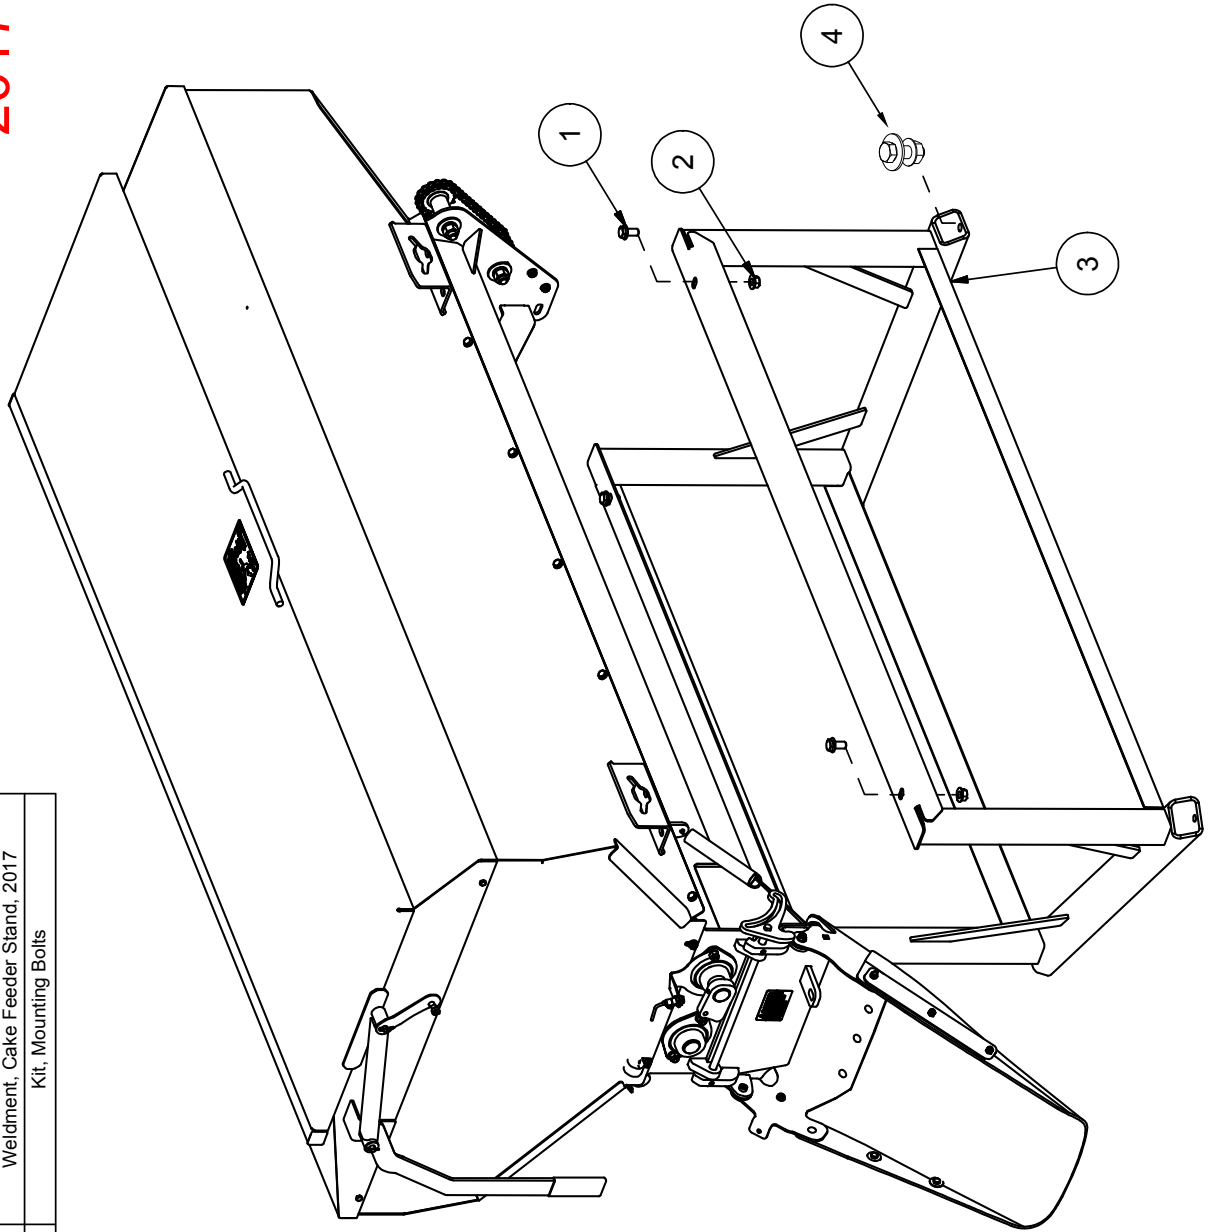

Auger & Trough Cotton Edition Assembly 2021



Parts List		
ITEM	QTY	DESCRIPTION
1	3 ft	Lid Seal, .50 x .187 x 36
2	6	WASHER, 3/8" FLAT SAE
3	8	Bolt, 3/8-16 X 1 in Carriage
4	2	BOLT, 5/8-11 X 4.5
5	2	NUT, 5/8-11 HEX
6	8	NUT, 3/8-16 LOCK NYLON INSERT
7	2	WASHER, 5/8" FLAT STANDARD
8	2	WASHER, 5/8" LOCK
9	3.2 ft.	Chain, #40 Roller, 38 Links
10	2.7 ft.	Chain, #40 Roller, 32 Links
11	1	Connecting Link, #40 Chain
12	1	Connecting Link, #40 Chain
13	1	Offset Link, #40 Chain
14	3	Sprocket, 4017 Idler, 5/8
15	1	Sprocket, DS40A24 x 1-1/4
16	1	ROLL PIN, 1/4 X 2

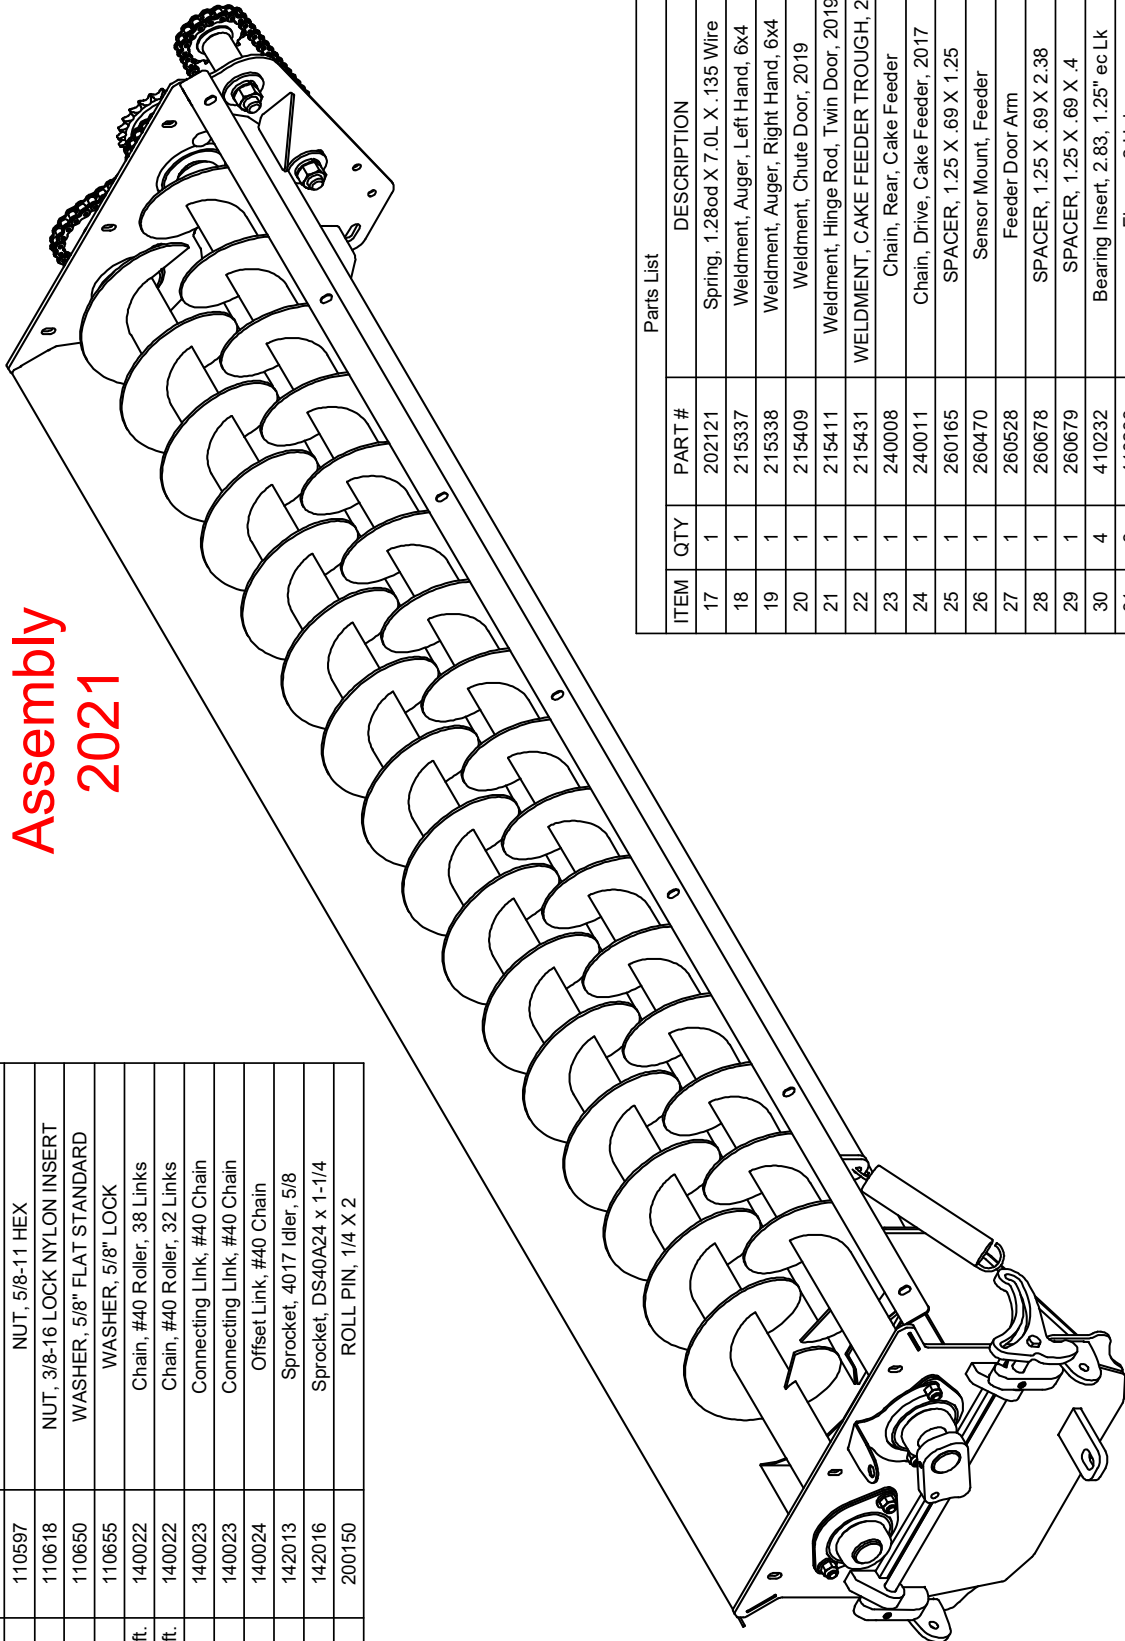

Parts List		
ITEM	QTY	DESCRIPTION
17	1	Spring, 1.280d X 7.0L X .135 Wire
18	1	Weldment, Auger, Left Hand, 6x4
19	1	Weldment, Auger, Right Hand, 6x4
20	1	Weldment, Chute Door, 2019
21	1	Weldment, Hinge Rod, Twin Door, 2019
22	1	WELDMENT, CAKE FEEDER TROUGH, 2021
23	1	Chain, Rear, Cake Feeder
24	1	Chain, Drive, Cake Feeder, 2017
25	1	SPACER, 1.25 X .69 X 1.25
26	1	Sensor Mount, Feeder
27	1	Feeder Door Arm
28	1	SPACER, 1.25 X .69 X 2.38
29	1	SPACER, 1.25 X .69 X .4
30	4	Bearing Insert, 2.83, 1.25" ec Lk
31	8	Flange, 2 Hole
32	2	Key, 1/4 X 1/4 X 1.25, Under
33	2	SetScrew, 5/16-18 X 0.5

11/18/2021


Auger & Trough Cotton Edition Assembly 2021

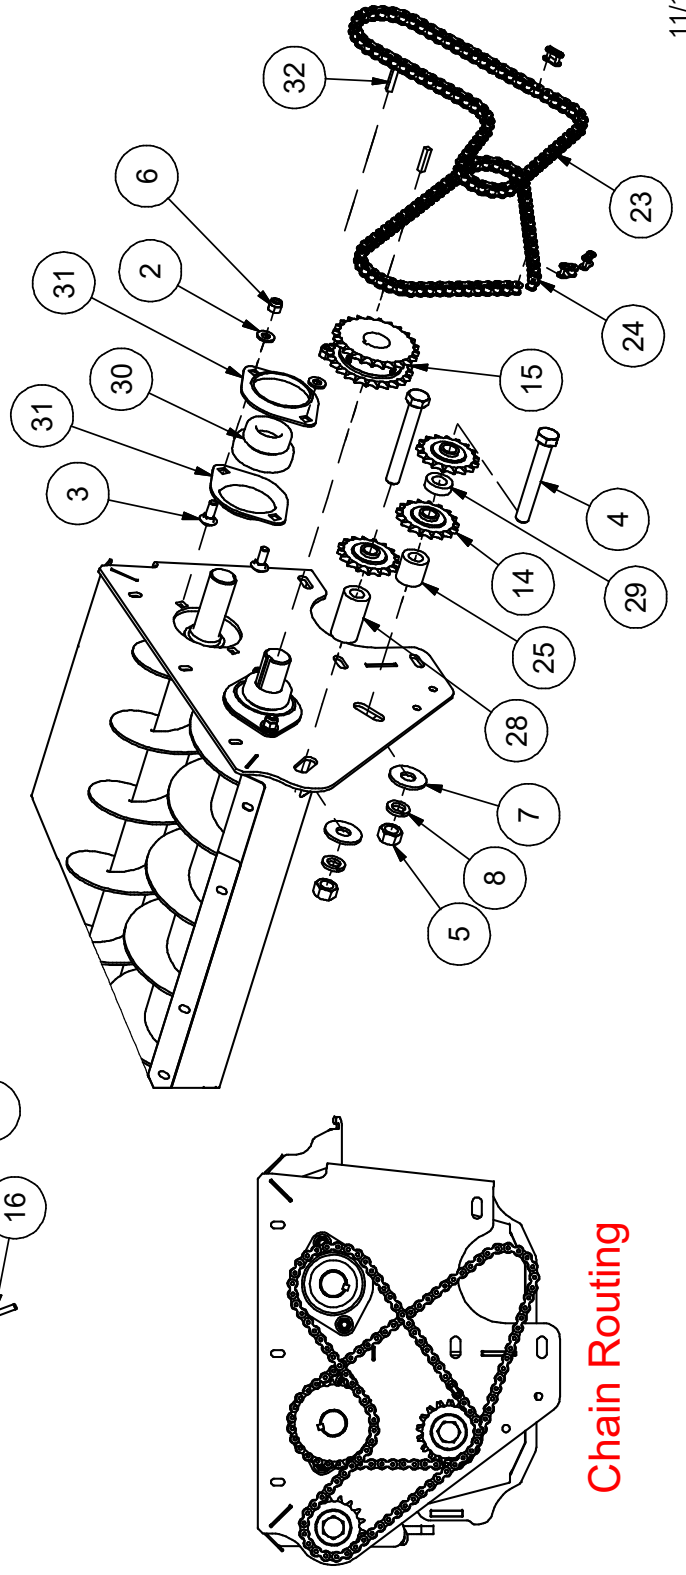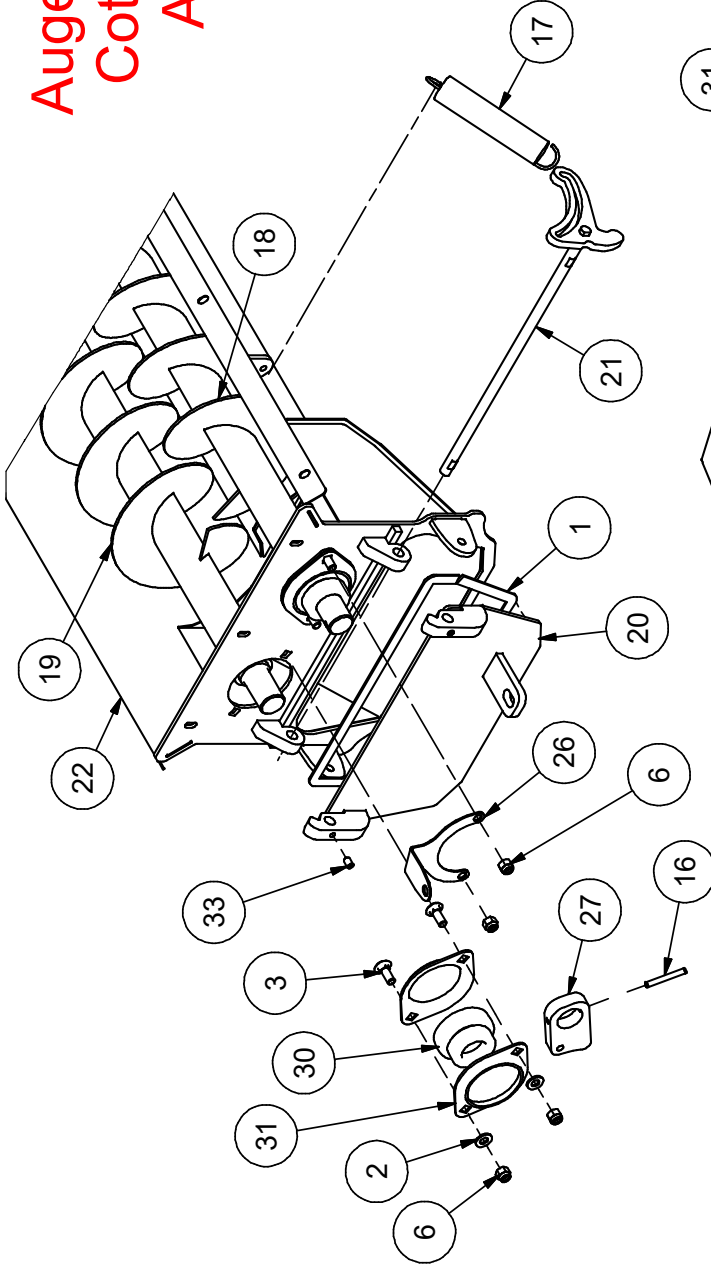

Chain Routing



11/18/2021

Auger Orientation Beefcake Feeder

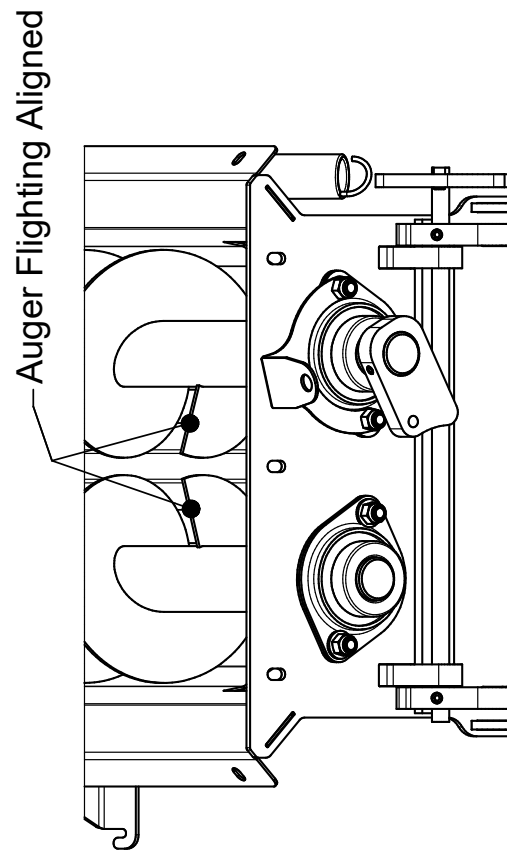


4/22/2021

Drive Chains Adjustment & Tension

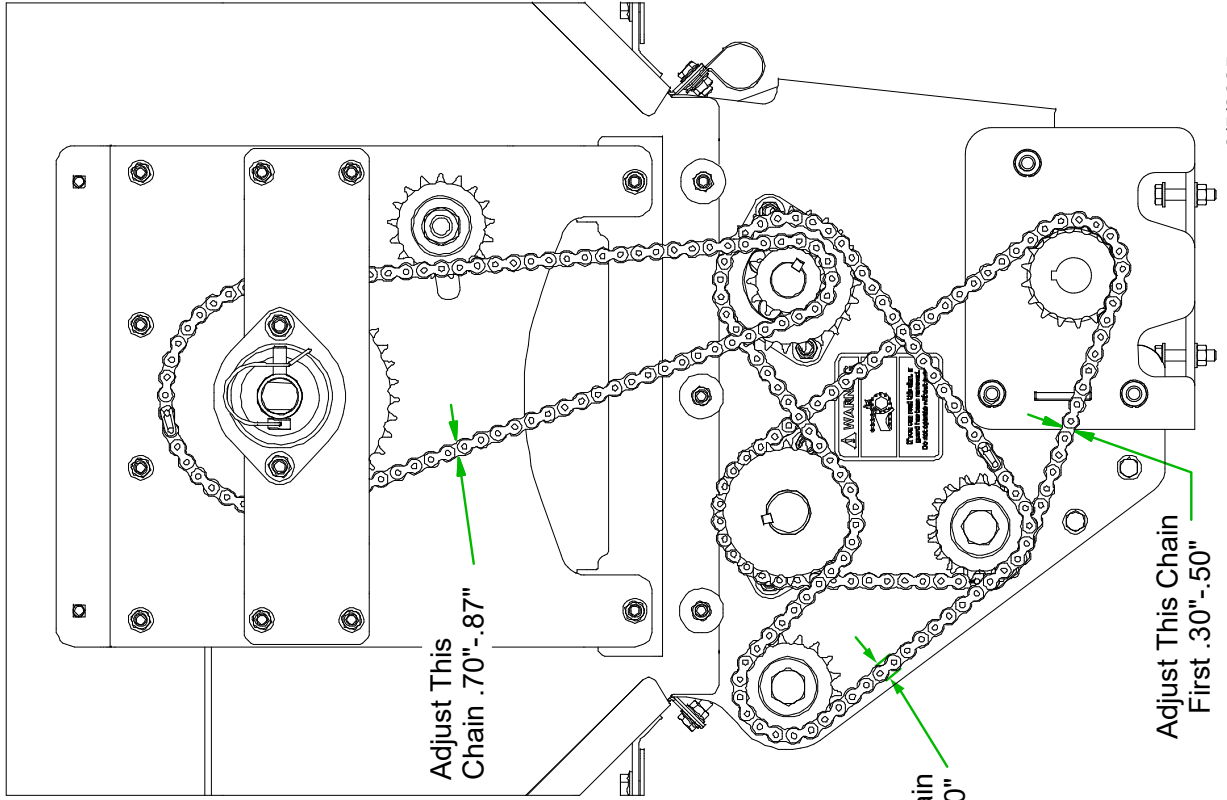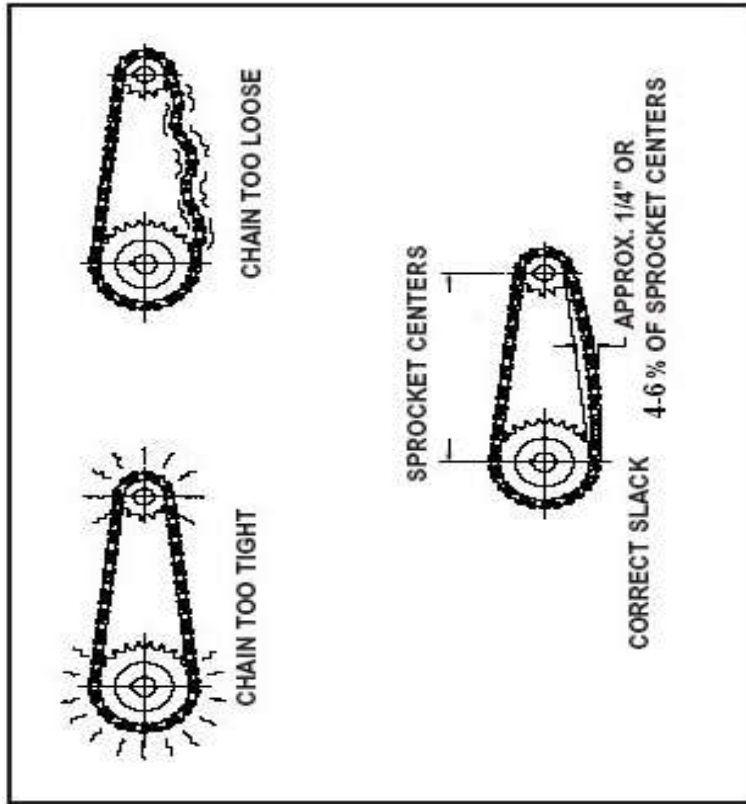

6/5/2025

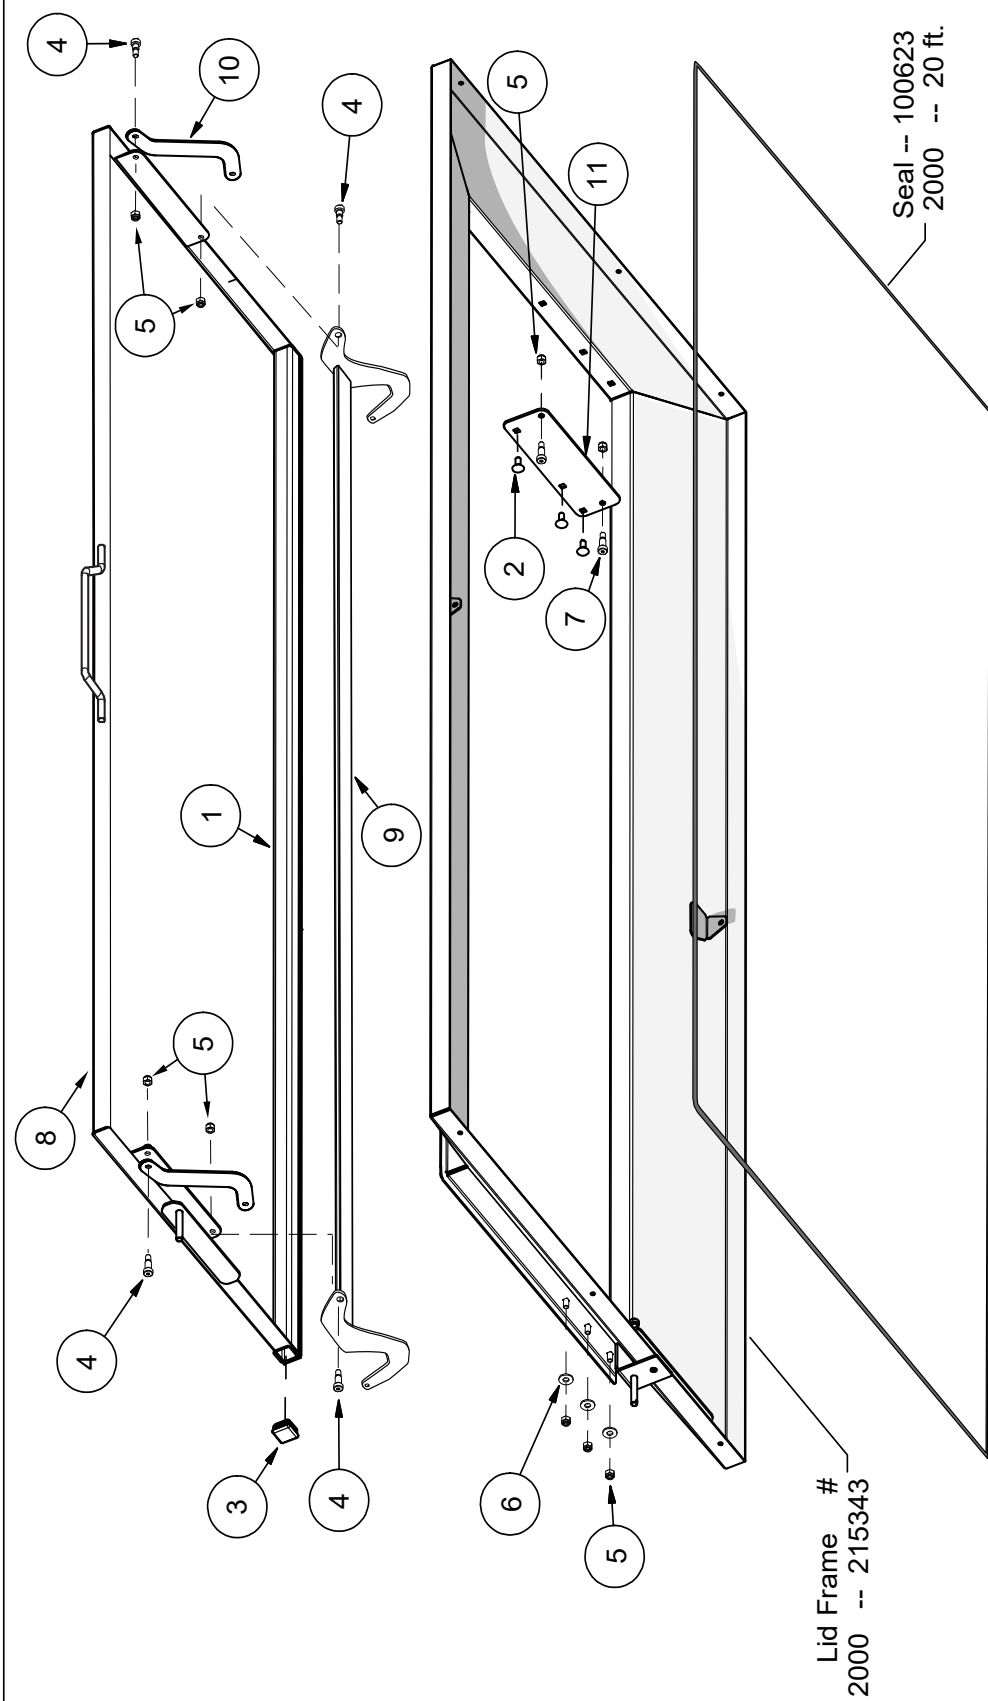


Lid & Frame Assembly

View looking up from underneath

Parts List			
ITEM	QTY	PART #	DESCRIPTION
1	16 ft	100613	Lid Seal, .50 x .187 x .192
2	6	110020	Bolt, 5/16-18 X 0.75 in Carriage
3	2	110313	1-1/4 SQ PLUG
4	4	110439	BOLT, 3/8 X 3/8 SHOULDER SHCS
5	14	110603	NUT, 5/16-18 LOCK (NYLON)
6	6	110665	WASHER, 5/16" FLAT STANDARD
7	4	111070	BOLT, 3/8 X .625 SHOULDER SHCS
8	1	215334	Weldment, Feeder Lid
9	1	215335	Weldment, Lid Hinge
10	2	260459	Lid Hinge, Short
11	2	260460	Lid Hinge, Side Mount


NOTE: #4 & #7 Shoulder Bolts are Different Lengths

Lift Handle & Latch

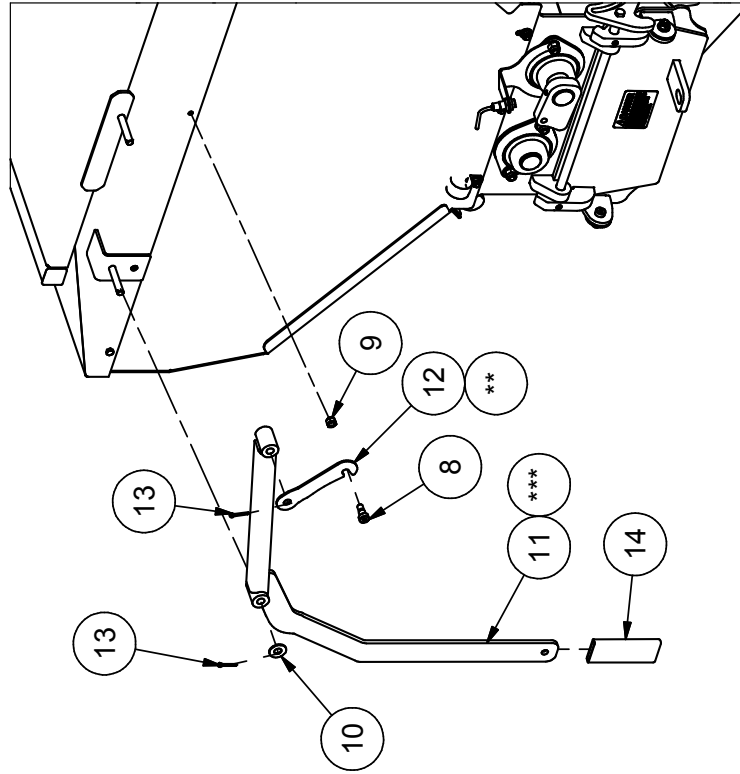

Parts List			DESCRIPTION
ITEM	QTY	PART #	
8	1	110439	BOLT, 3/8 X 3/8 SHOULDER SHCS
9	1	110603	NUT, 5/16-18 LOCK (NYLON)
10	1	110676	WASHER, 3/8" FLAT STANDARD
11	1	215318	Weldment, Lid Lift Bar, External, 1000 & 1500
***	1	215346	Weldment, Lid Lift Bar, External, 2000
12	1	260549	Lid Latch, 1500 & 2000
**	1	260529	Lid Latch, 1000
13	2	510249	COTTER PIN, 1/8 X 0.75
14	1	910044	COVER, VINYL .25 X 1.5 X 4 GRIP


Drive Shield 2017

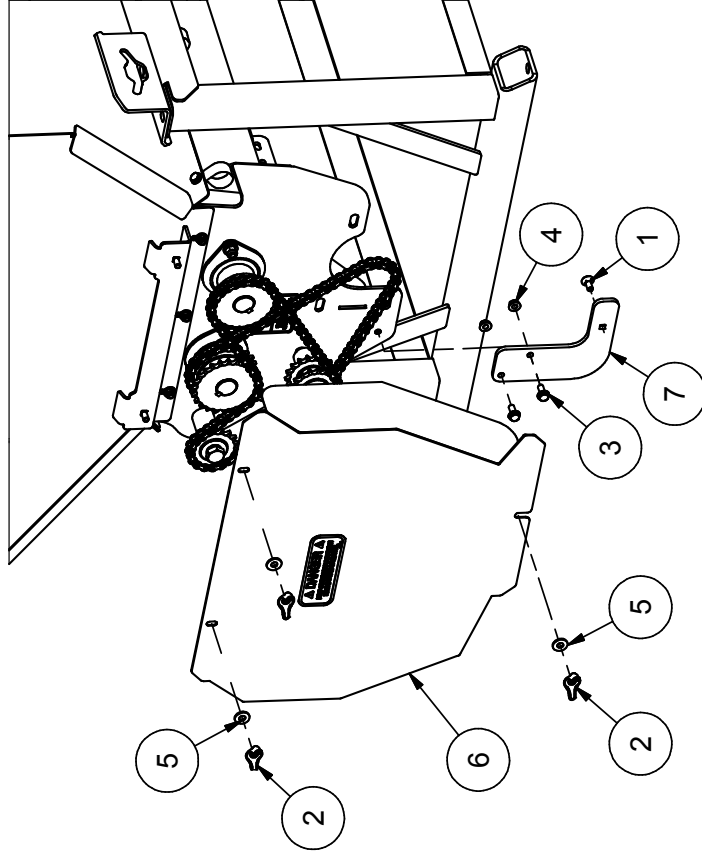


Parts List			DESCRIPTION
ITEM	QTY	PART #	
1	1	110020	Bolt, 5/16-18 X 0.75 in Carriage
2	3	110327	NUT, 5/16-18 WING
3	2	110444	BOLT, 5/16-18 X 0.75, WIZ FLANGE
4	2	110606	NUT, 5/16-18 WIZ FLANGE
5	3	110665	WASHER, 5/16" FLAT STANDARD
6	1	215379	Weldment, Shield, Feeder, 2017
7	1	260670	Shield Support

2/20/2017

Parts List			Parts List		
ITEM	QTY	PART #	DESCRIPTION	ITEM	QTY
1.1	1	102118	Pin, Lock .375 X 1.5, Rnd Wire	1.12	2
1.2	8	110069	WASHER, 5/16" FLAT SAE	1.13	1
1.3	1	110087	BOLT, 5/8-11 X 2.75	1.14	1
1.4	4	110155	WASHER, 3/8" FLAT SAE	1.15	1
1.5	4	110328	BOLT, 5/16-18 X 1 FLT HD SKT	1.16	1
1.6	4	110556	Bolt, 3/8-16 X 1 in Carriage	1.17	1
1.7	1	110597	NUT, 5/8-11 HEX	1.18	1
1.8	8	110603	NUT, 5/16-18 LOCK (NYLON)	1.19	1
1.9	4	110618	NUT, 3/8-16 LOCK NYLON INSERT	1.20	2
1.10	1	110650	WASHER, 5/8" FLAT STANDARD	1.21	1
1.11	1	110655	WASHER, 5/8" LOCK	1.22	1
				1.23	4
				1.24	1
				1.25	1

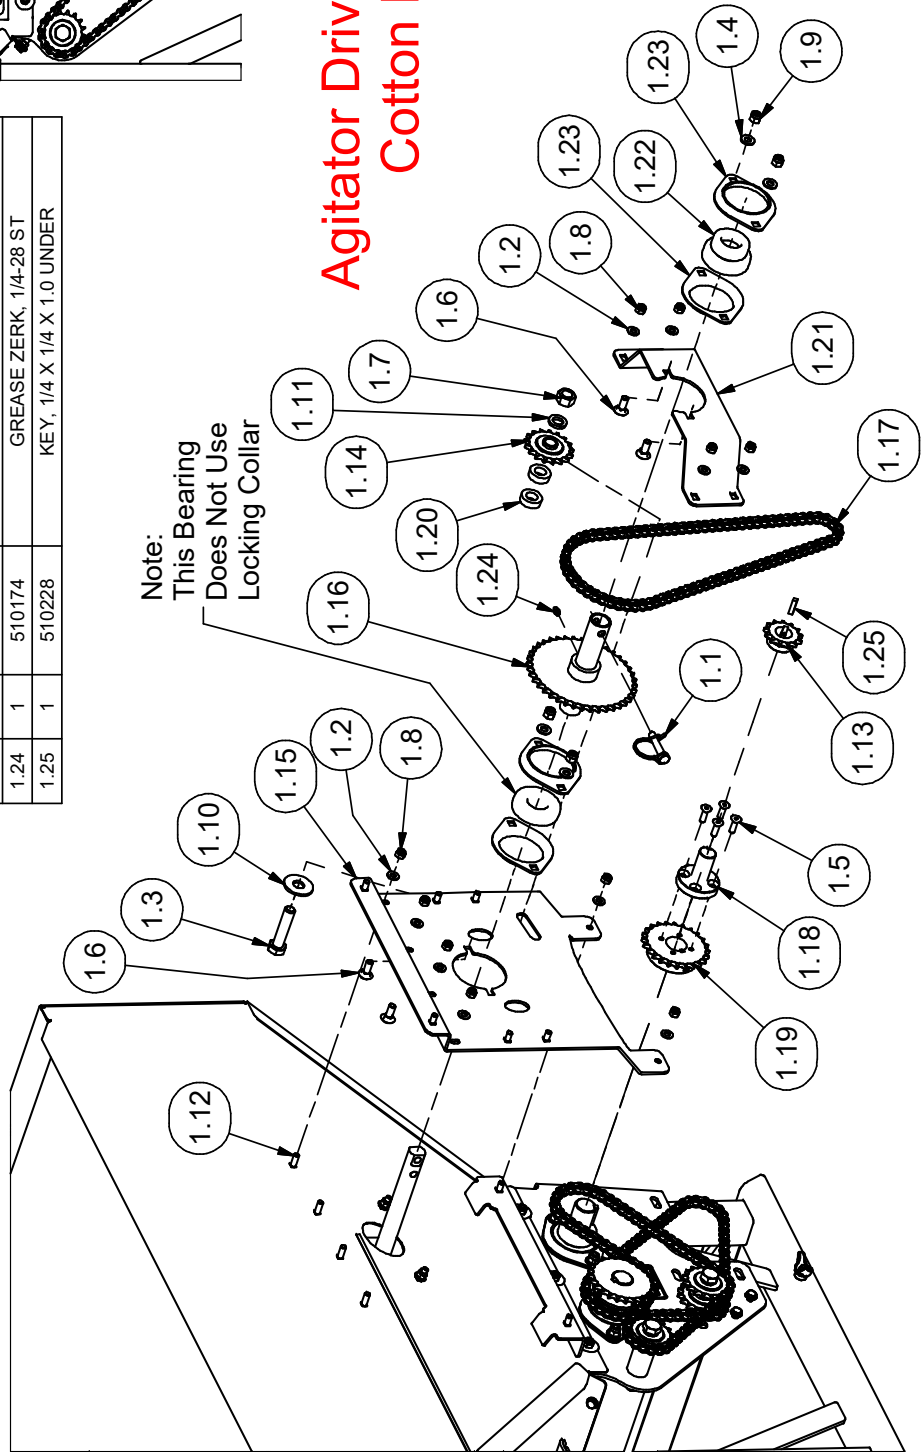


Agitator Drive Assembly Cotton Edition

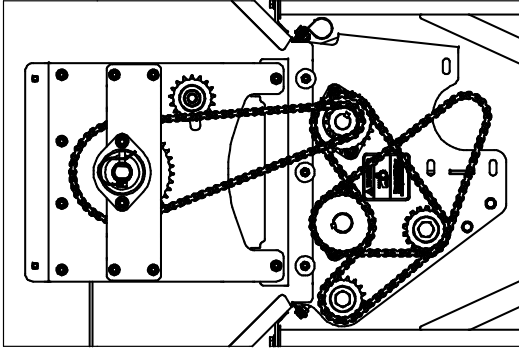

3/11/2019

Agitator Assembly Cotton Edition

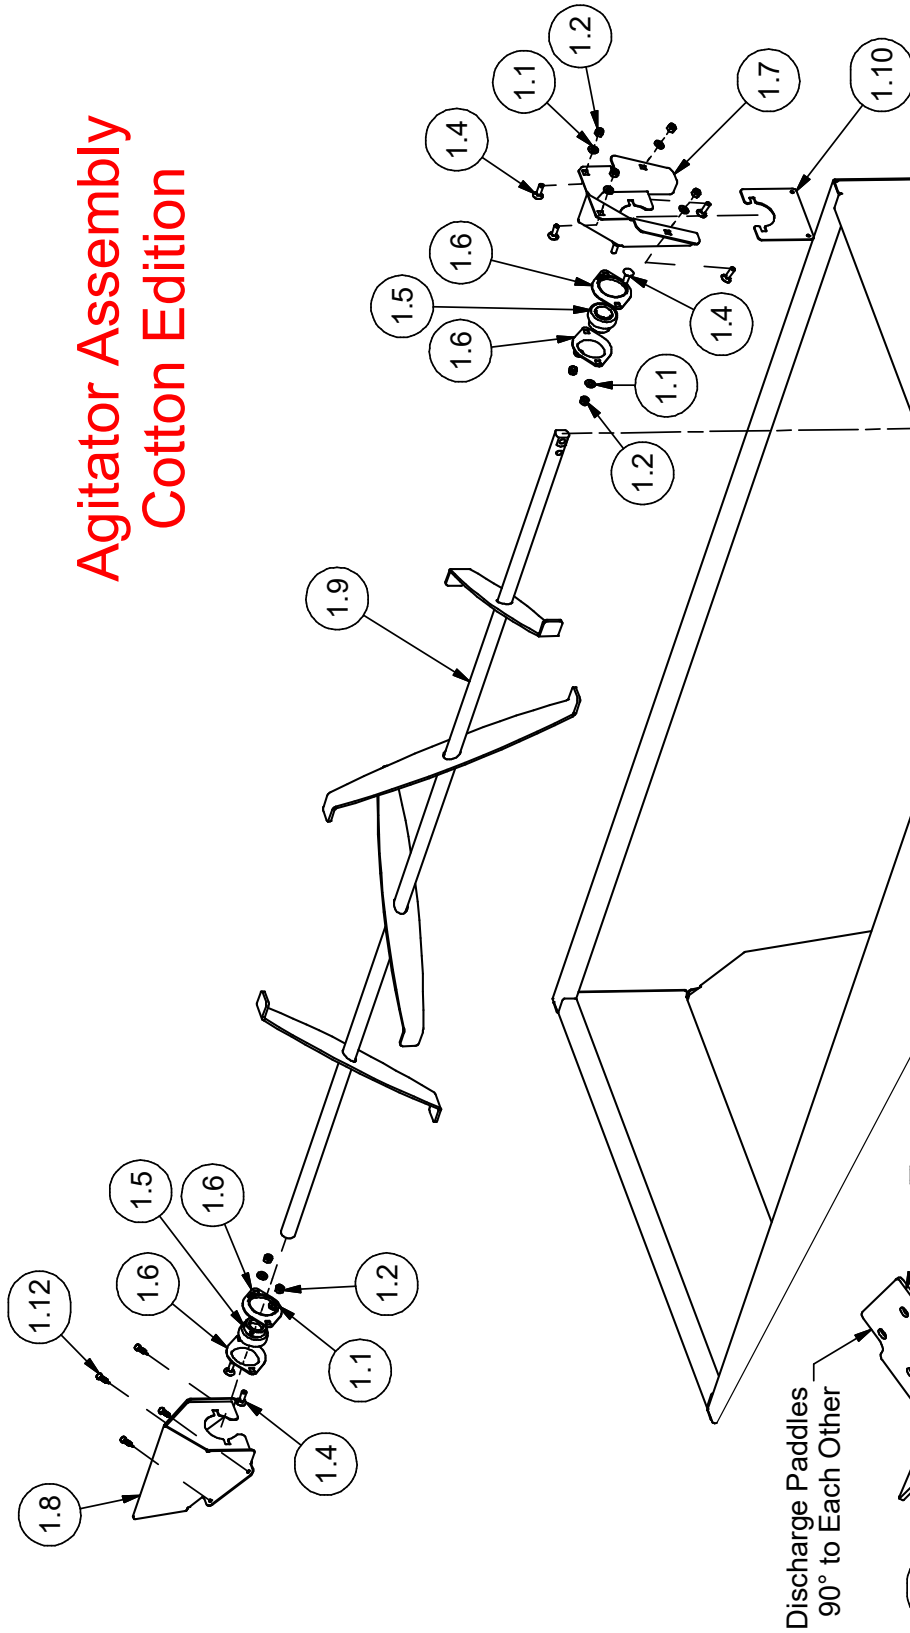


Discharge Paddles
90° to Each Other


Use Blue
Loctite

Parts List			
ITEM	QTY	PART #	DESCRIPTION
1.1	8	110069	WASHER, 5/16" FLAT SAE
1.2	8	110603	NUT, 5/16-18 LOCK (NYLON)
1.3	4	110757	CLAMP, 1 3/4" EXHAUST
1.4	8	110871	Bolt, 5/16-18 X 1 in Carriage
1.5	2	142018	Bearing, 52mm Spherical O.D., 1.0 I.D., Ecc Lock
1.6	4	142019	Flange, 52mm, 2 Bolt
1.7	1	215403	Weldment, Bearing Mnt Right, Agitator Shaft
1.8	1	215404	Weldment, Bearing Mnt Left, Agitator Shaft
1.9	1	215405	Weldment, Agitator Shaft
1.10	1	260750	Bearing Shield
1.11	2	260751	Agitator, Discharge Plate
1.12	4	710586	SCREW, 1/4 X 1 TEK SELF-TAP

Chute Extension Assembly 2017

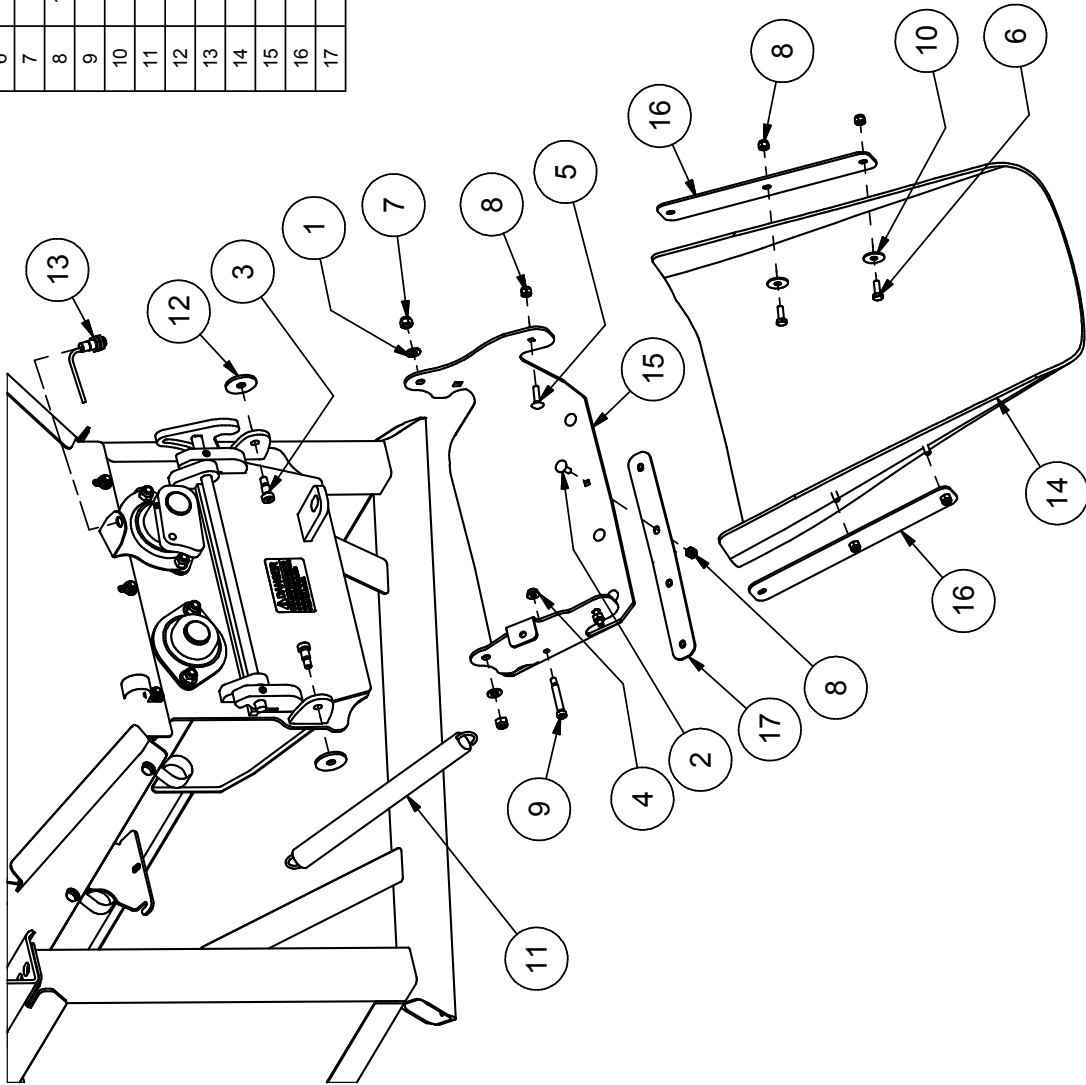

Proximity
Sensor
Part #235027

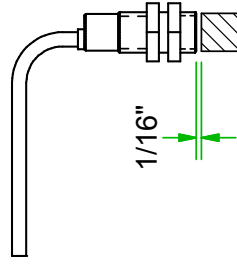


Parts List			
ITEM	QTY	PART #	DESCRIPTION
1	2	110069	WASHER, 5/16" FLAT SAE
2	4	110154	Bolt, 1/4-20 X 0.75 in Carriage
3	2	110289	BOLT, 3/8 X 1/2 SHOULDER SHCS
4	1	110290	NUT, 1/4-20 WIZ FLANGE
5	2	110326	Bolt, 1/4-20 X 1 in Carriage
6	4	110561	BOLT, 1/4-20 X .75
7	2	110603	NUT, 5/16-18 LOCK (NYLON)
8	10	110630	NUT, 1/4-20 LOCK (NYLON INSERT)
9	1	110767	BOLT, 5/16 X 1.5 SHOULDER SHCS
10	4	111033	WASHER, 1/4" X 1" OD, Plain
11	1	202088	Spring, 1.060d X 12L X .135 Wire
12	2	211747	FRICION WASHER 1.5"
13	1	235027	Sensor, Proximity, With Plug
14	1	260473	Rubber Chute
15	1	260534	Chute Extension
16	2	260536	Chute Extension, Side Support
17	1	260537	Chute Extension, Doubler Plate

2/20/2017

Flatbed Model #	Standard Dummy Arm	Cake Feeder Dummy Arms			
		2000			
		Front Half	Back Half		
675	215150	NA	NA		
676	215249	NA	NA		
677	215191	NA	NA		
679	215208	215355	215356		
682	215145	NA	NA		
684	215193	215360	215356		
687	215198	215360	215361		
688	215200	215360	215362		
778	215160	NA	NA		
776	215257	NA	NA		
782	215158	NA	NA		
784	215202	215367	215372		
787	215204	215367	215373		
788	215206	215367	215374		

Decals Must Be
Purchased Separately


Decals	
Model #	Part #
675	202095
676	202096
677	202097
679	202098
682	202099
684	202100
687	202101
688	202102
778	202105
776	202104
782	202106
784	202107
787	202108
788	202109

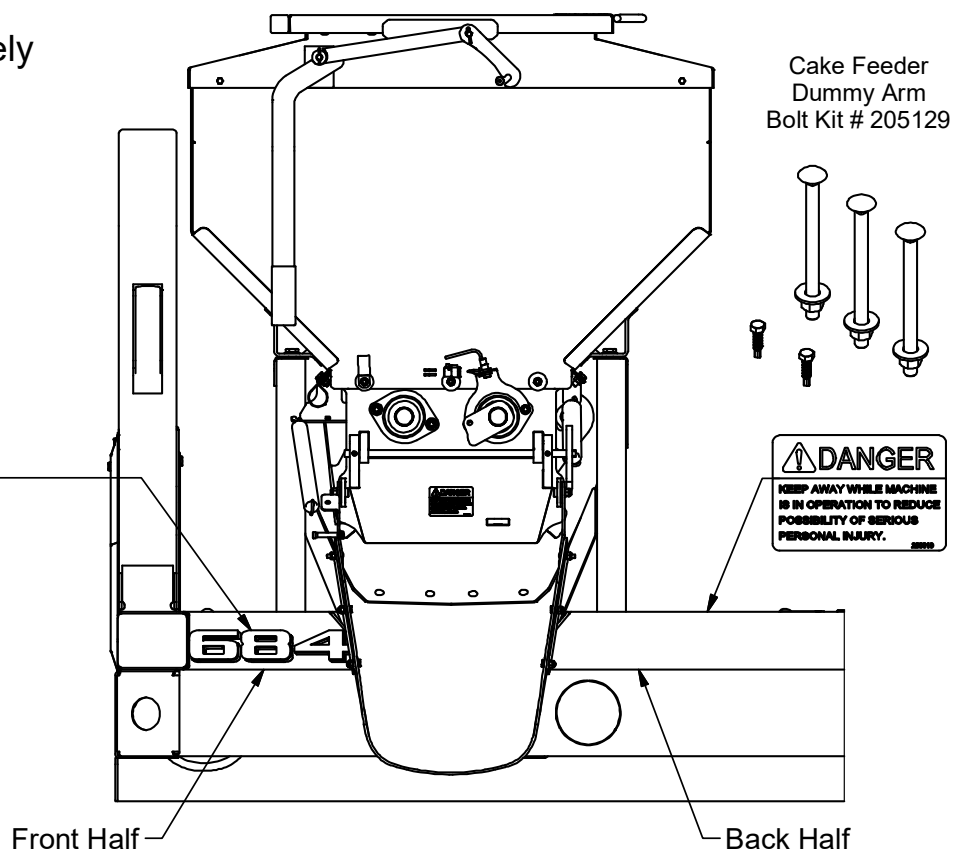

6/6/2018

Drive Shield Cotton Edition

Parts List			
ITEM	QTY	PART #	DESCRIPTION
1	1	110020	Bolt, 5/16-18 X 0.75 in Carriage
2	3	110327	NUT, 5/16-18 WING
3	2	110444	BOLT, 5/16-18 X 0.75, WIZ FLANGE
4	2	110606	NUT, 5/16-18 WIZ FLANGE
5	3	110665	WASHER, 5/16" FLAT STANDARD
6	1	215407	Weldment, Shield, Agitator Drive
7	1	260670	Shield Support

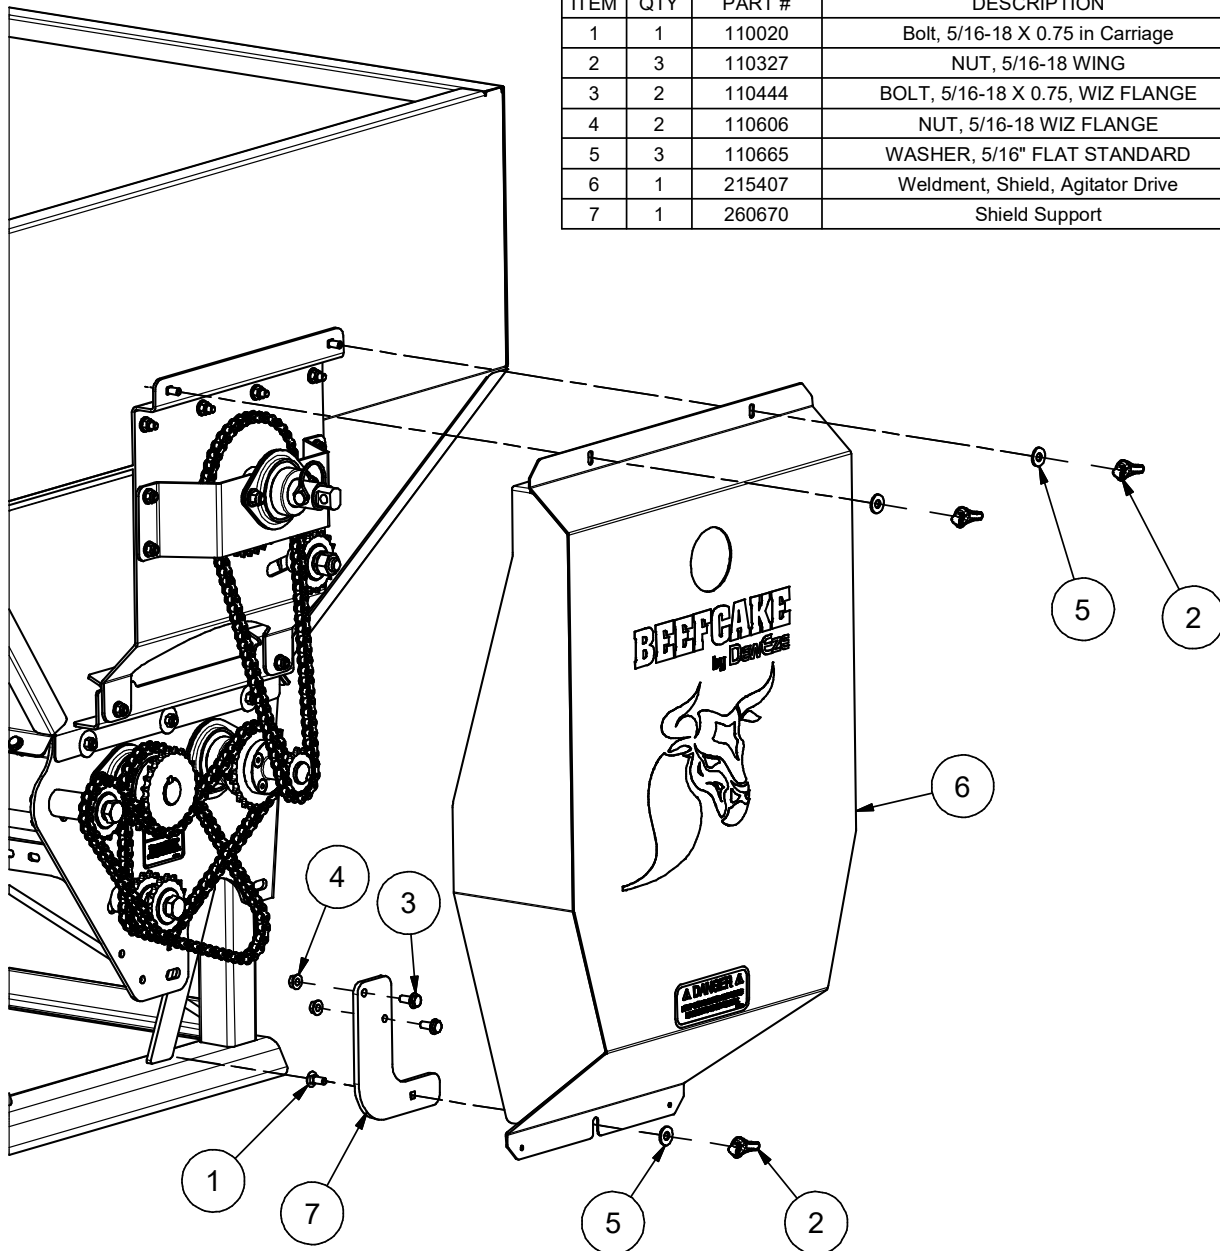

1/3/2019

Decal Page
DewEze **BEEFCAKE**
Cotton Edition

1

2

3

4

5

6

7

8

DANGER
Rotating Auger
DO NOT ENTER

DANGER
KEEP AWAY WHILE MACHINE IS IN OPERATION TO REDUCE POSSIBILITY OF SERIOUS PERSONAL INJURY.

DANGER
KEEP COVERS IN PLACE WHILE MACHINE IS IN OPERATION.

BEEFCAKE

DewEze

Cotton Edition

Cotton Edition


DANGER

WARNING
If you can read this sign, a guard has been removed. Do not operate without guard.

Parts List		
ITEM	QTY	PART # DESCRIPTION
1	1	160002 Decal, Guard Removed, Graphic
2	1	200010 DANGER DECAL
3	1	202090 Decal, Danger, Rotating Auger
4	1	202091 Decal, Beefcake & Bull 21.87 X 8.75
5	1	202092 Decal, DewEze, 11.5 X 1.8
6	11.25	202093 Decal, Pin stripe
7	1	202135 Decal, Cotton Edition
8	1	500038 Decal, Danger Keep Covers In Place

Hydraulic Drive 2021

Kit, Hyd Drive (14.1) #205127		
ITEM	QTY	PART # DESCRIPTION
1	2	110254 BOLT, 7/16-14 X 1.25, WIZ FLANGE
2	2	110337 NUT, 7/16-14 WIZ FLANGE
3	4	110420 BOLT, 3/8-16 X 1.0
4	1	110444 BOLT, 5/16-18 X 0.75, WIZ FLANGE
5	3	110539 BOLT, 7/16-14 X 1.25
6	1	110606 NUT, 5/16-18 WIZ FLANGE
7	3	110641 NUT, 7/16-14
8	3	110670 WASHER, 7/16" FLAT STANDARD
9	3	110671 WASHER, 7/16" LOCK
10	4	110672 WASHER, 3/8" LOCK
11	2	120245 ADAPTER, 8MJ-10MB90
12	1	120535 Valve, Check, 8fj-8mj
13	2	120582 Coupler, Pioneer Male, ORB
14	2	120718 Adapter, 8mb-6fjx90
15	1	142017 Sprocket, 40BS17 x 1.0
16	2	220745 Hose, .375 x 36.0 6-8fj/6mj
17	1	260669 Drive Mount, Hydraulic
18	1	260680 Hydraulic Mount Gusset
19	1	420128 Motor, Eaton 101-1014 (14.1 Cl)

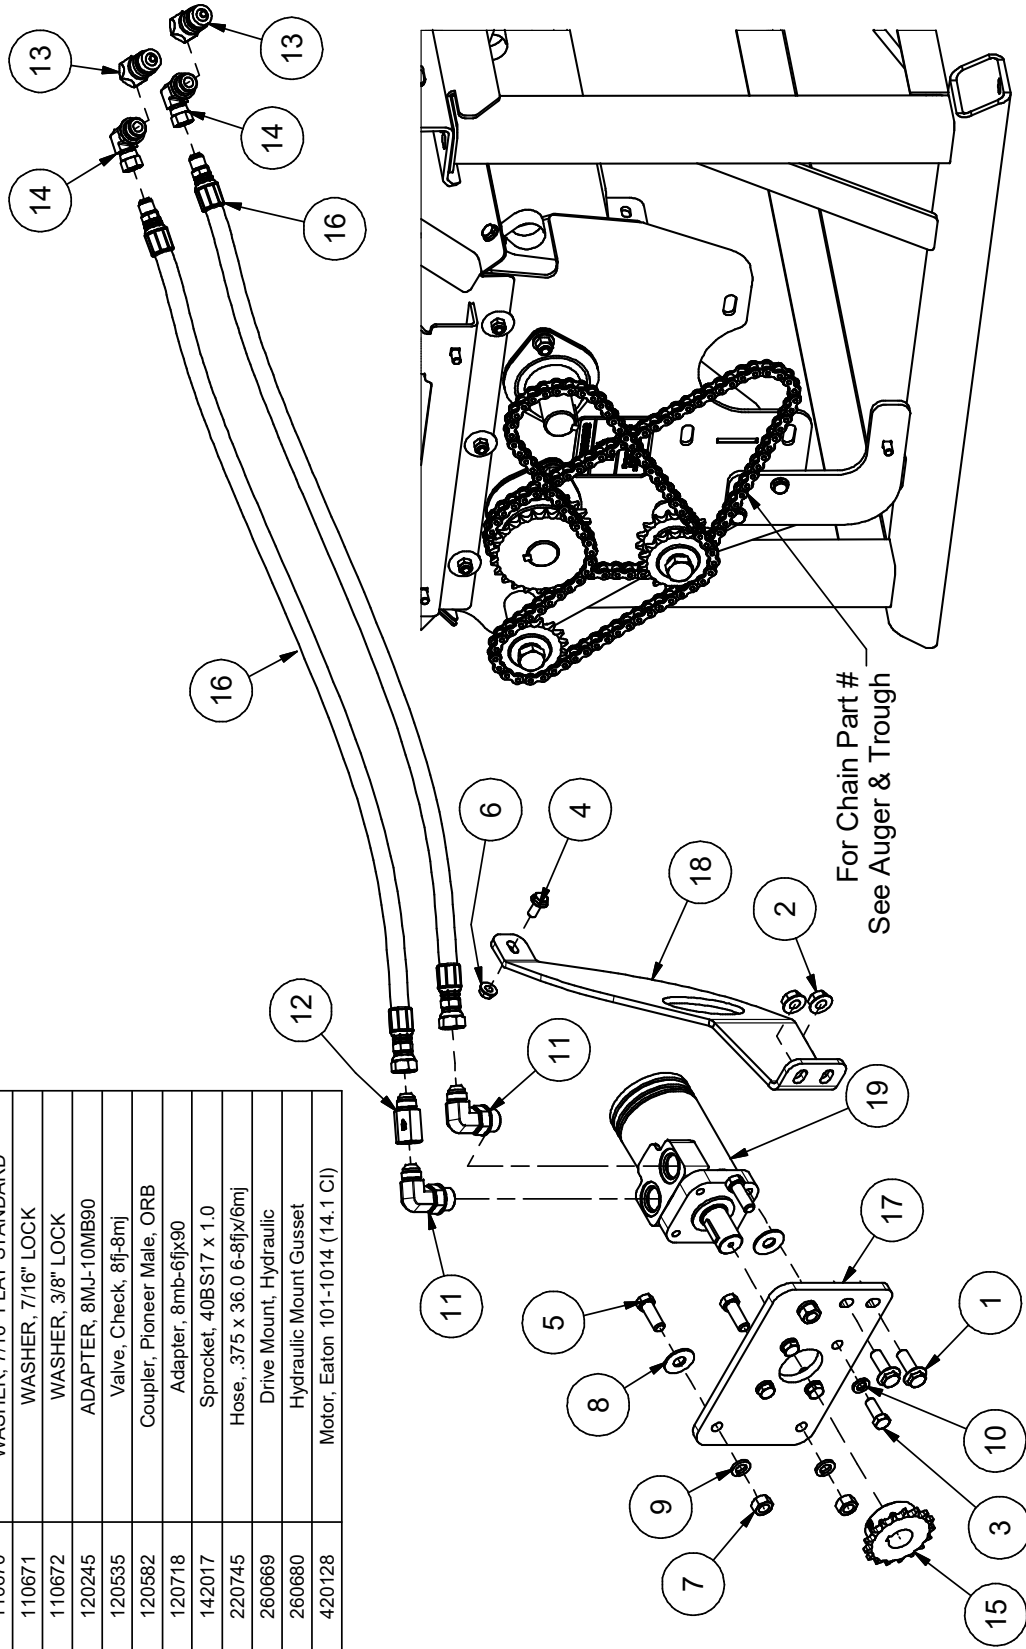

3/31/2022

Kit, Electric Drive #205374


ITEM	QTY	PART #	DESCRIPTION
1	8	110069	WASHER, 5/16" FLAT SAE
2	4	110155	WASHER, 3/8" FLAT SAE
3	2	110319	NUT, 5/16-18 U-TYPE .75L
4	4	110377	BOLT, 5/16-18 X 1-1/2
5	4	110420	BOLT, 3/8-16 X 1.0
6	4	110444	BOLT, 5/16-18 X 0.75, WIZ FLANGE
7	3	110539	BOLT, 7/16-14 X 1.25
8	2	110600	NUT, 5/16-18, UNITORQUE LOCK
9	4	110608	NUT, 5/16-18
10	3	110641	NUT, 7/16-14
11	2	110665	WASHER, 5/16" FLAT STANDARD
12	3	110670	WASHER, 7/16" FLAT STANDARD
13	3	110671	WASHER, 7/16" LOCK
14	4	110672	WASHER, 3/8" LOCK
15	1	130068	Terminal Protector, Red, 1-2ga
16	1	132163	Flyback Diode Assembly, Cake Feeder
17	1	142017	Sprocket, 40BS17 x 1.0
18	1	215429	BRACKET, GEAR REDUCER
19	1	230169	Battery Cable QC, 2ga Twin Lead, 30"
20	1	232103	Solenoid, 4 Post, 12VDC Contactor
21	1	232110	Motor, 12V DC, 3/4 HP
22	1	242013	GEAR REDUCER, INLINE, 30.55:1
23	1	260674	Motor Shield, Electric, 2017
24	1	532084	Cable, 4 ga. 9", Red
25	1	940028	CLAMP, HOSE #88 6.00"

Negative Cable
From Truck BatteryGround Wire
Control HarnessPower Wire
FUSE 200 Amp
BUSS MRBF-200
Control HarnessPositive Cable
From
Truck BatterySwitch Wire
Control HarnessFlyback
Diode
Harness


SOLENOID

Ground Wire
To SolenoidPositive Cable
From Solenoid to Motor

Electric Drive 2021

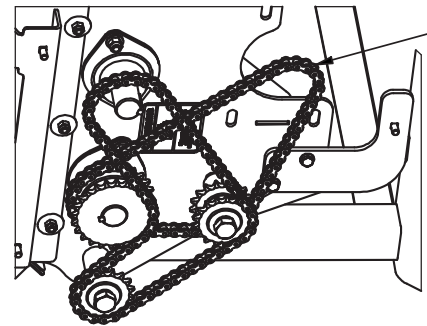For Chain Part #
See Auger & Trough


Brushes Springs & Retainers		
ITEM	QTY	DESCRIPTION
1	2	232189 Clip, Brush Leeson
2	2	232190 Spring, Brush Leeson
3	2	232191 Brush, Motor Leeson

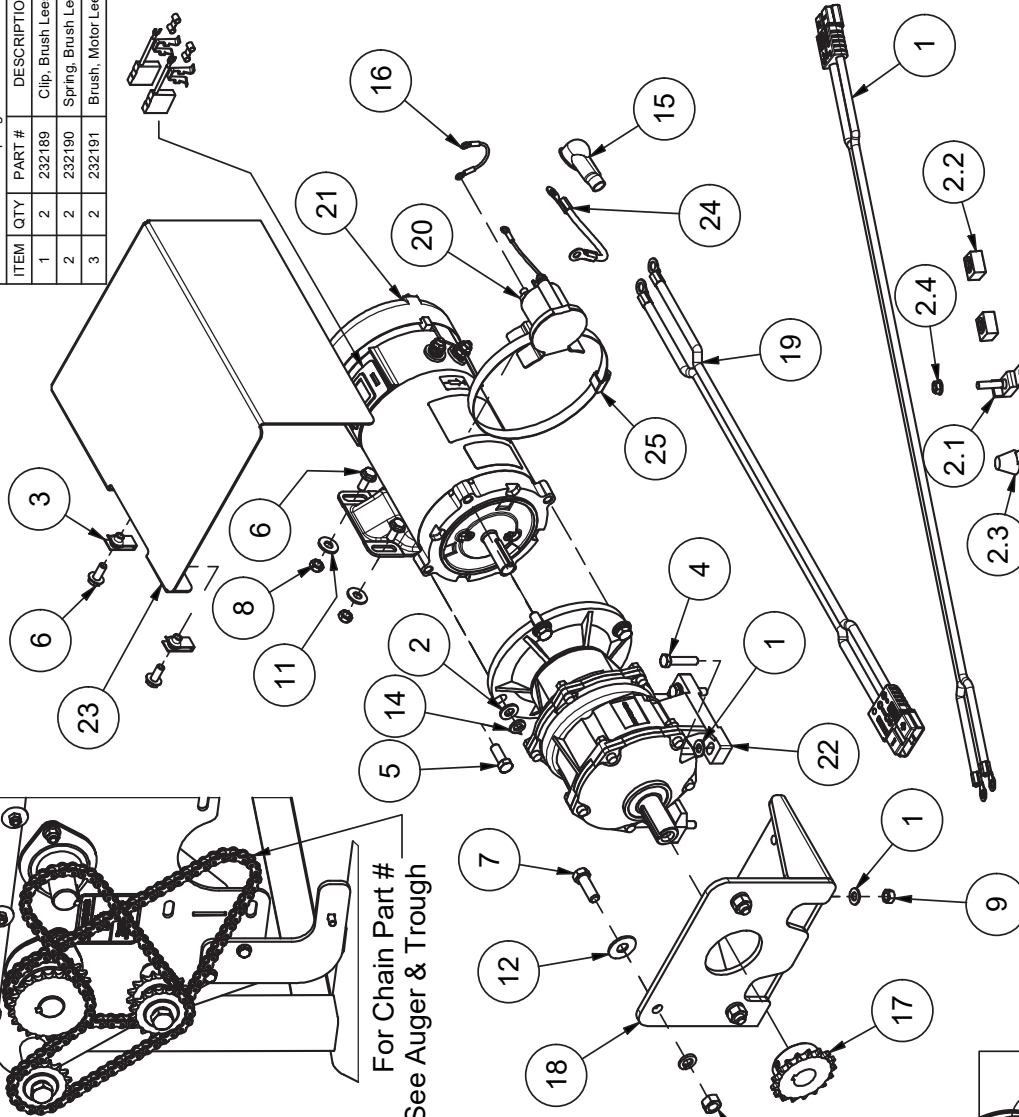


Parts List		
ITEM	QTY	DESCRIPTION
1	1	230168 Battery Cable QC, 2ga Twin Lead, 216"
2	1	205137 Kit, BeefCake Fuse and Holder
2.1	1	132093 FUSE HOLDER, BUSS CFBAR1-M8XSP
2.2	2	132094 FUSE 200 AMP, BUSS MRBF-200
2.3	1	132092 FUSE COVER, BUSS CFCOVER-1R
2.4	1	110141 NUT, M8 X 1.25 WIZFLANGE

9/27/2022

Kit, Electric Drive #205126		
ITEM	QTY	DESCRIPTION
1	5	BOLT, M8x1.25 x 25 Gr 10.9
2	2	NUT, 5/16-18 U-TYPE .75L
3	2	BOLT, 3/8-16 X 1.0
4	4	BOLT, 5/16-18 X 0.75, WIZ FLANGE
5	3	BOLT, 7/16-14 X 1.25
6	2	NUT, 5/16-18, UNITORQUE LOCK
7	3	NUT, 7/16-14
8	2	WASHER, 5/16" FLAT STANDARD
9	3	WASHER, 7/16" FLAT STANDARD
10	3	WASHER, 7/16" LOCK
11	2	WASHER, 3/8" LOCK
12	5	WASHER, 5/16" LOCK
13	1	Terminal Protector, Red, 1-2ga
14	1	Flyback Diode Assembly, Cake Feeder
15	1	Sprocket, 40BS17 x 1.0
16	1	Battery Cable QC, 2ga Twin Lead, 30"
17	1	Solenoid, 4 Post, 12VDC Contactor
18	1	Motor, 12V DC, 3/4 HP
19	1	Gear Reducer, Inline, 29.4:1
20	1	Drive Mount, Electric
21	1	Motor Shield, Electric, 2017
22	1	Cable, 4 ga. 9", Red
23	1	CLAMP, HOSE #88 6.00"

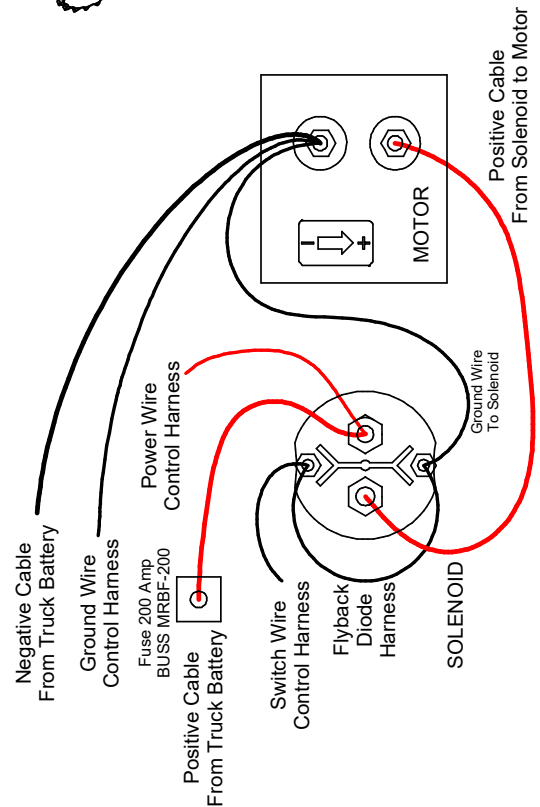


Electric Drive 2017

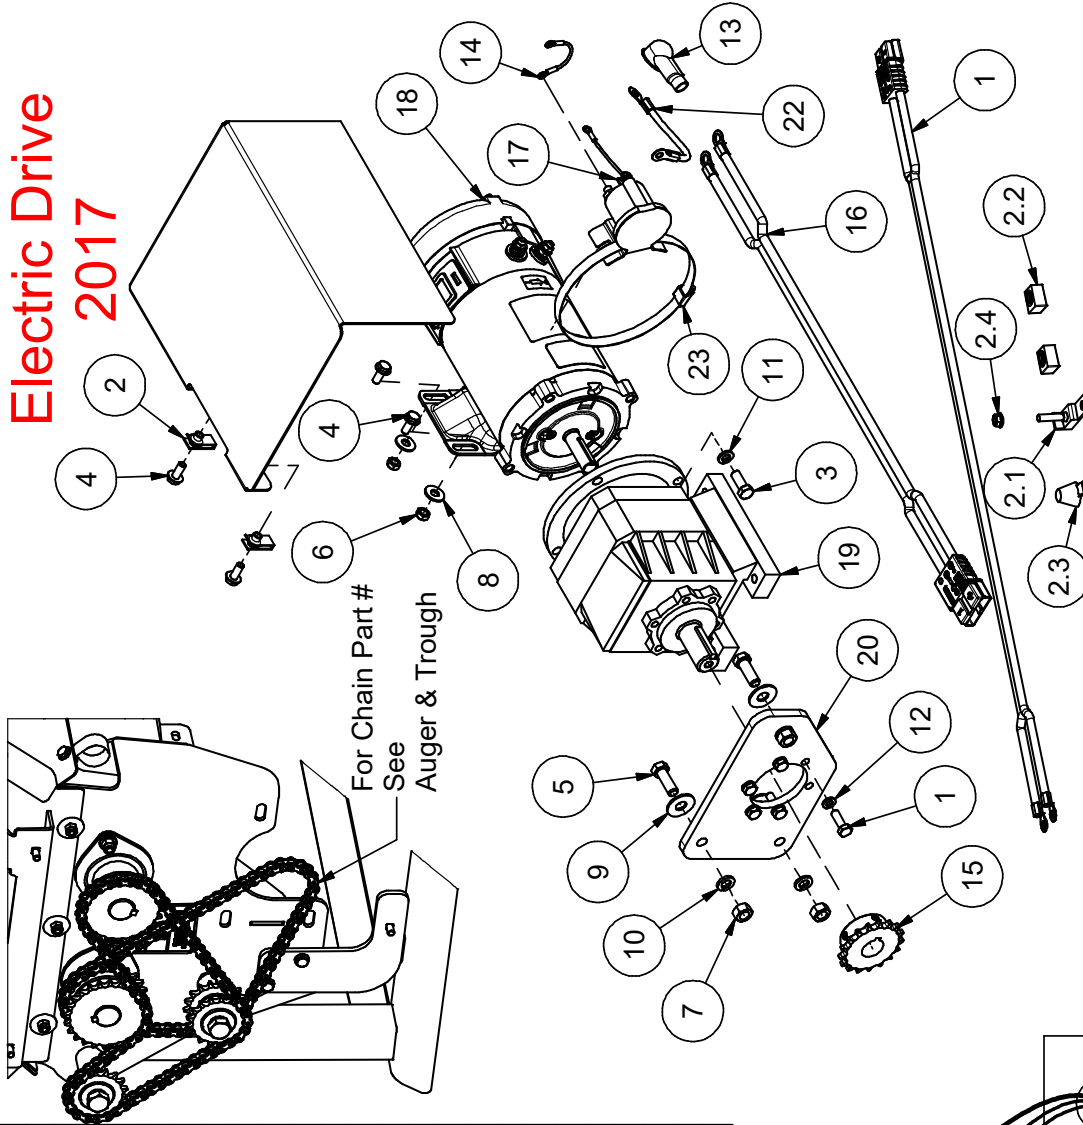



Parts List		
ITEM	QTY	DESCRIPTION
1	1	Battery Cable QC, 2ga Twin Lead, 216"
2	1	Kit, BeefCake Fuse and Holder
2.1	1	FUSE HOLDER, BUSS CFBAR1-M8XSP
2.2	2	FUSE 200 AMP, BUSS MRBF-200
2.3	1	FUSE COVER, BUSS CFCOVER-1R
2.4	1	NUT, M8 X 1.25 WIZFLANGE

3/5/2019



NOTE: All 3 DIP Switches Set to ON

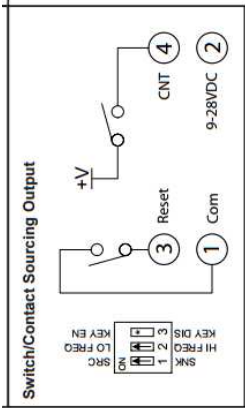

Hand Control
From Backside

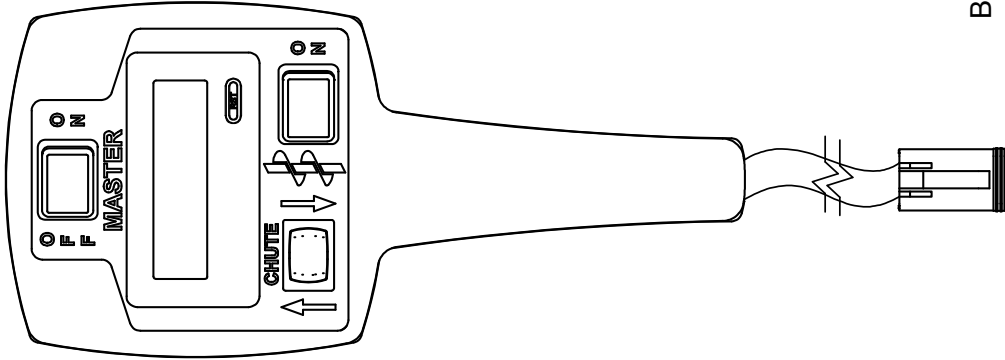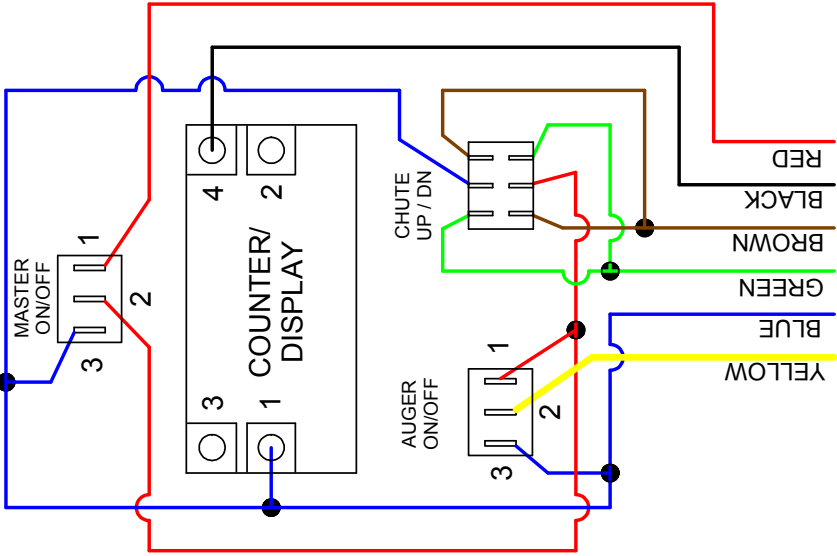


132132
3P SPST ON-OFF
ILLUM

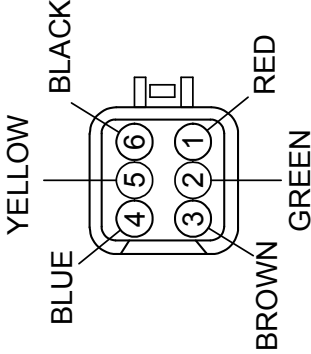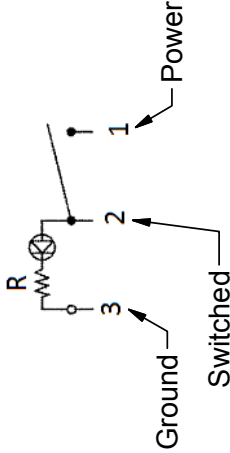

OLD COUNTER STYLE (COUNTER OBSOLETE)


Hand Control Assy, Part #150047		
ITEM	QTY	DESCRIPTION
1	1	Counter, Display
2	1	Switch, Rocker Min. DPDT, (On)-OFF-(ON)
3	2	Switch, Rocker Min. SPST, On-OFF, Illum.
4	1	TOP HOUSING, HAND CONTROL
5	1	BOTTOM HOUSING, HAND CONTROL
6	4	SCREW, #6 X 1/4 TYPE F
7	2	SCREW, #6 X 1 SHEETMETAL
8	2	SCREW, #6 X 1.5 SHEETMETAL
9	1	Switch Plate, Feeder, Hand Control
10	1	Decal, Cake Feeder Hand Control
11	1	Cable, Hand Control, Feeder

Hand Control & Harness

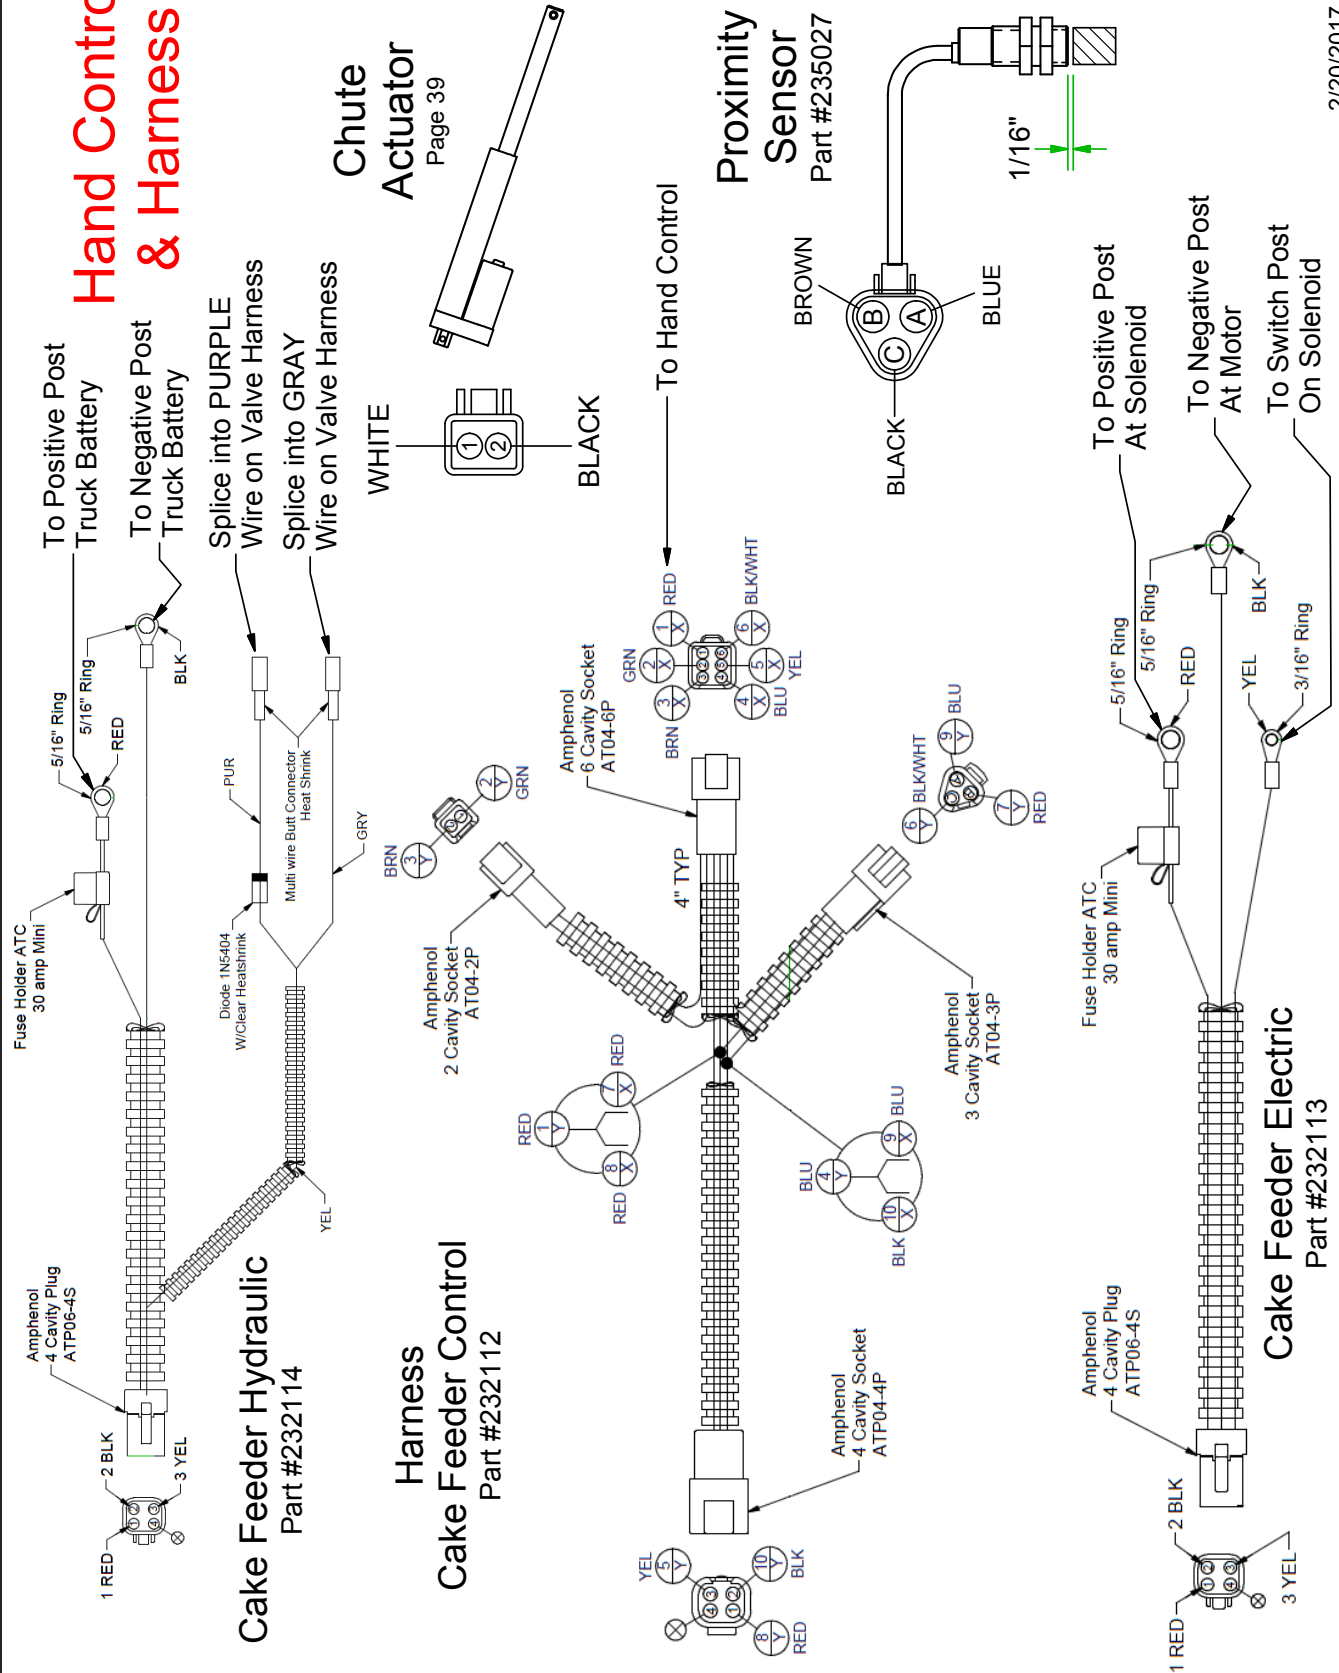


2/20/2017

NOTE: DIP Switch 1 OFF DIP Switch 2 ON

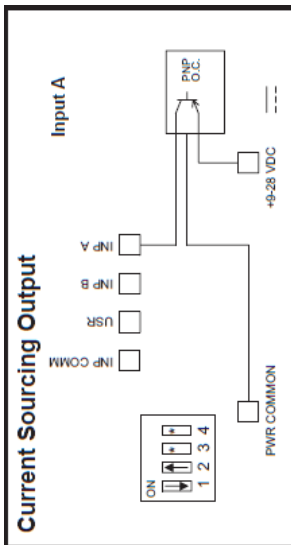


Hand Control
From Backside



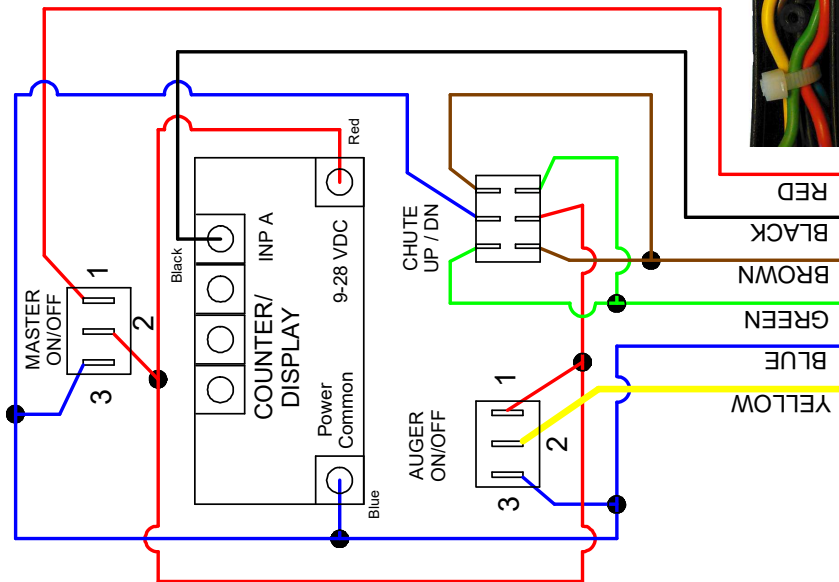


1000E S/N 20A56
1500E S/N 20A67
2000E S/N 20A34


Starting July 2020

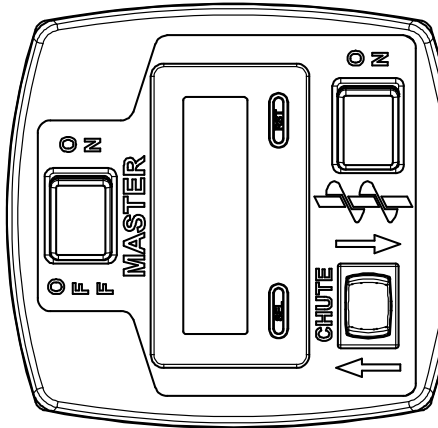

132132
3P SPST ON-OFF
ILLUM

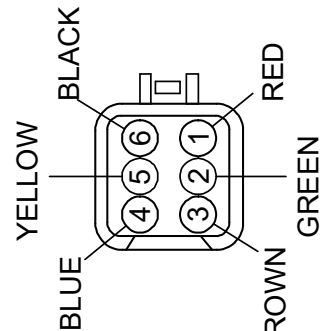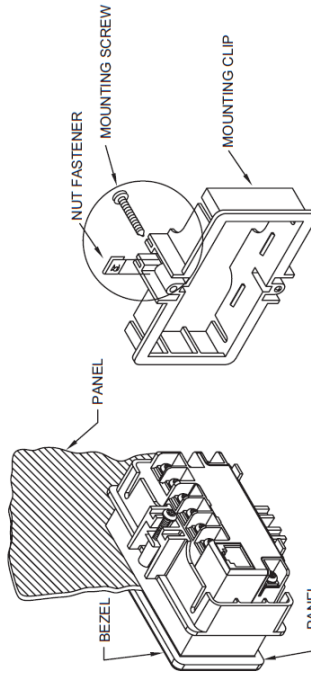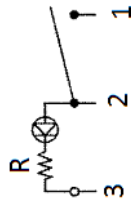

NEW = 2 BUTTON ON FACE
New displays ADD A POWER WIRE.
Deweze provides a pre-made JUMPER.

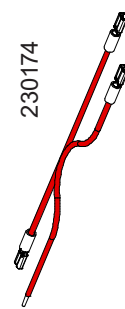


NEW COUNTER STYLE (CONSTANT POWER)

Hand Control Assy, Part #150048

ITEM	QTY	PART #	DESCRIPTION
1	1	132131	Switch, Rocker Min. DPDT, (On)-OFF, (ON)
2	2	132132	Switch, Rocker Min. SPST, On-OFF, Illum.
3	1	132176	Counter, Display, Backlight Display
4	1	150001	TOP HOUSING, HAND CONTROL
5	1	150003	BOTTOM HOUSING, HAND CONTROL
6	4	150013	SCREW, #6 X 1/4 TYPE F
7	2	150014	SCREW, #6 X 1 SHEETMETAL
8	2	150015	SCREW, #6 X 1.5 SHEETMETAL
9	1	150046	Switch Plate, Feeder, Hand Control
10	1	202089	Decal, Cake Feeder Hand Control
11	1	230173	Cable, Hand Control, Feeder
12	1	230174	Jumper, Hand Control, Feeder


Hand Control & Harness

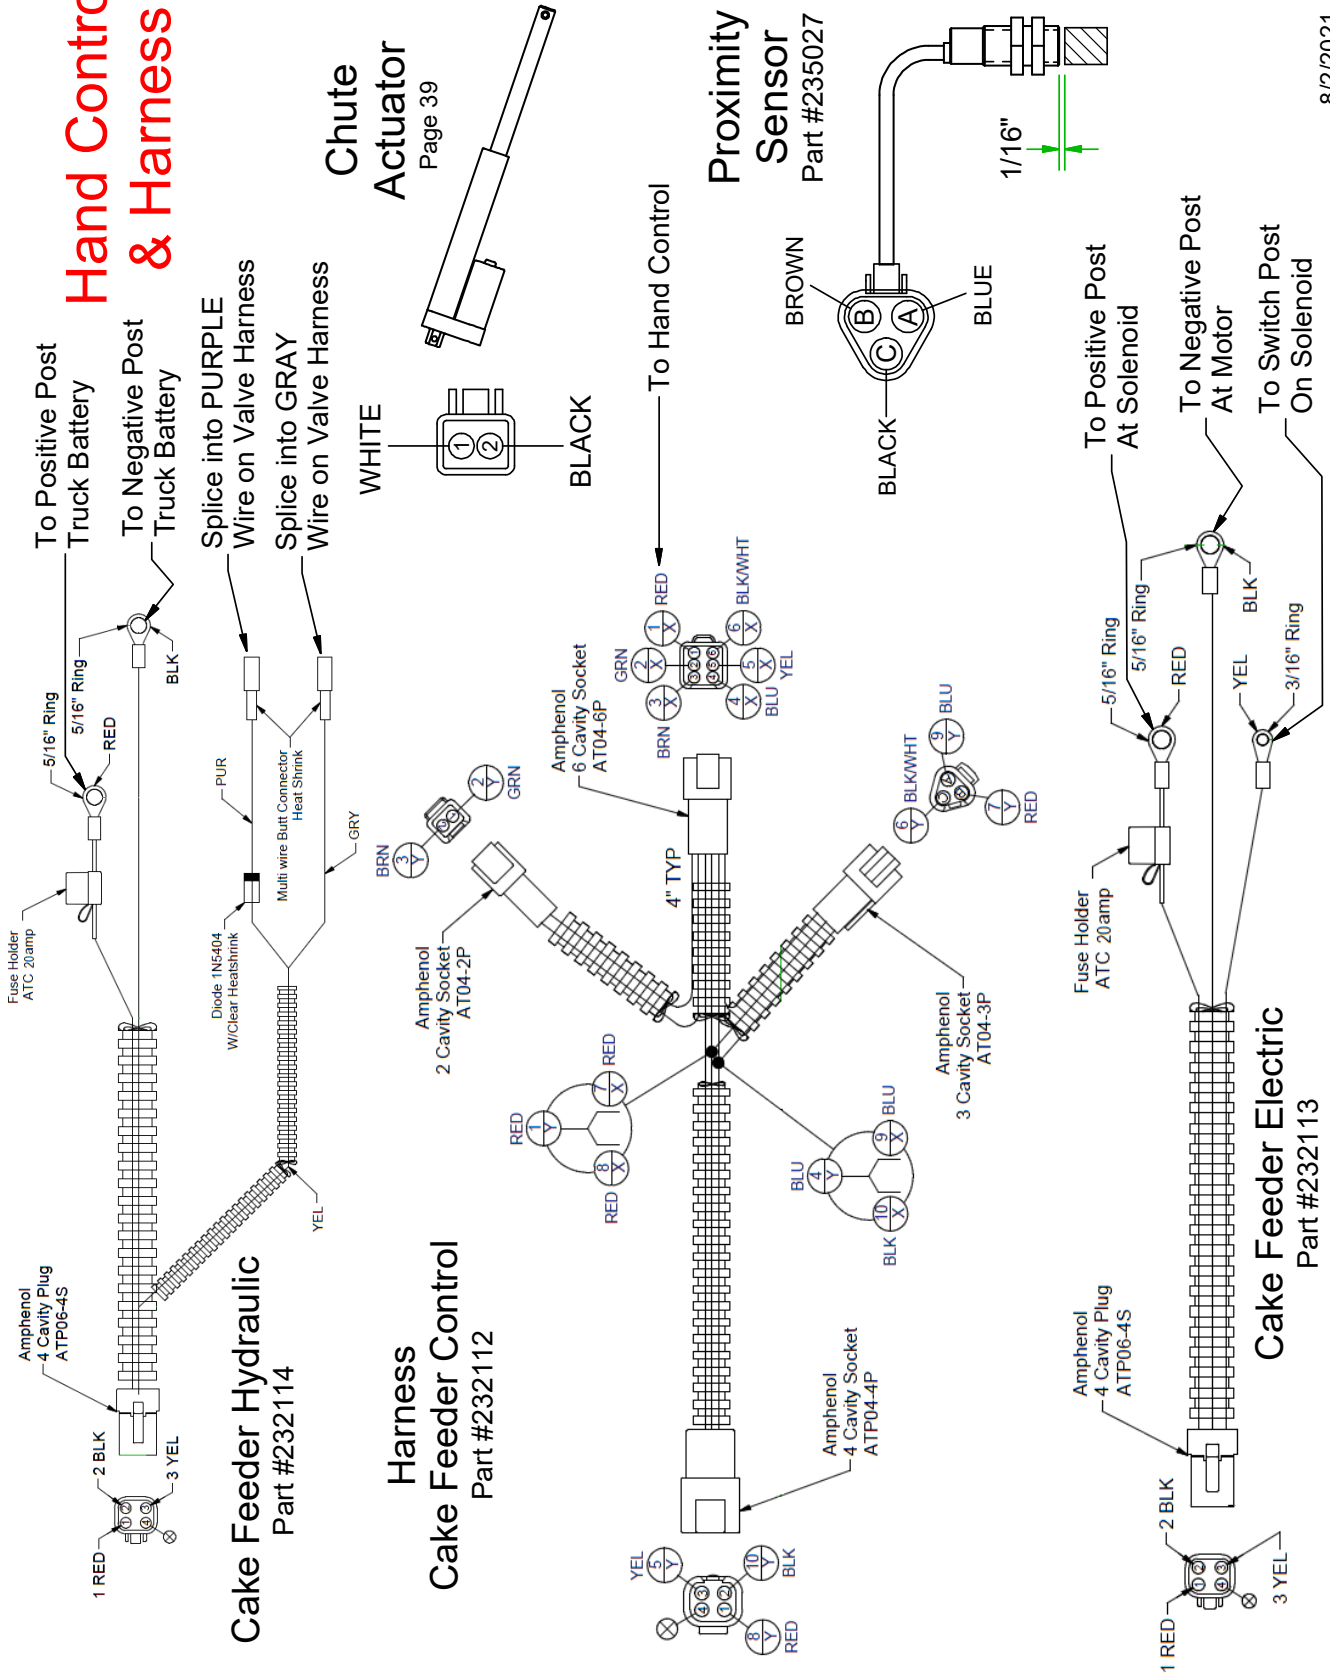

8/2/2021


Cake Feeder Electrical Schematic

Hand Control
From Backside

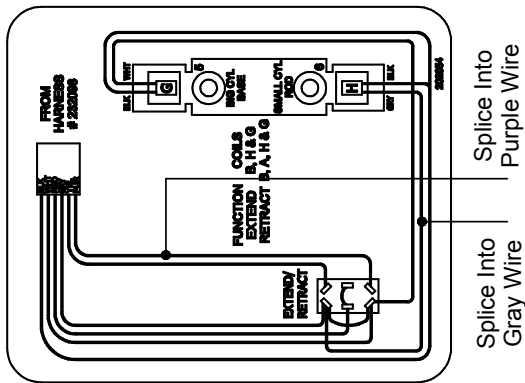


Hydraulic
Valve Control


PNP output type

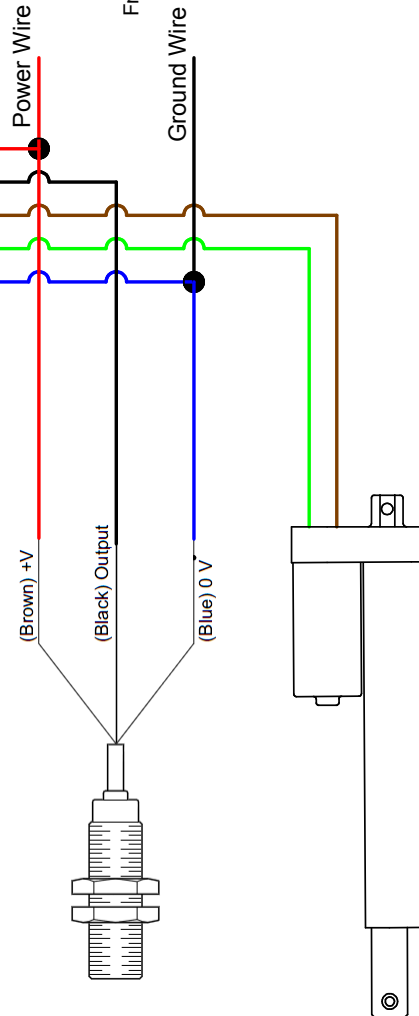

Hydraulic Drive
Power Supply

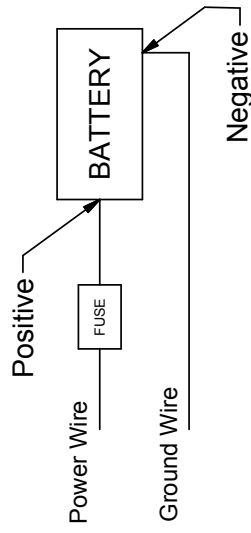

Electric Drive
Cable Hookup

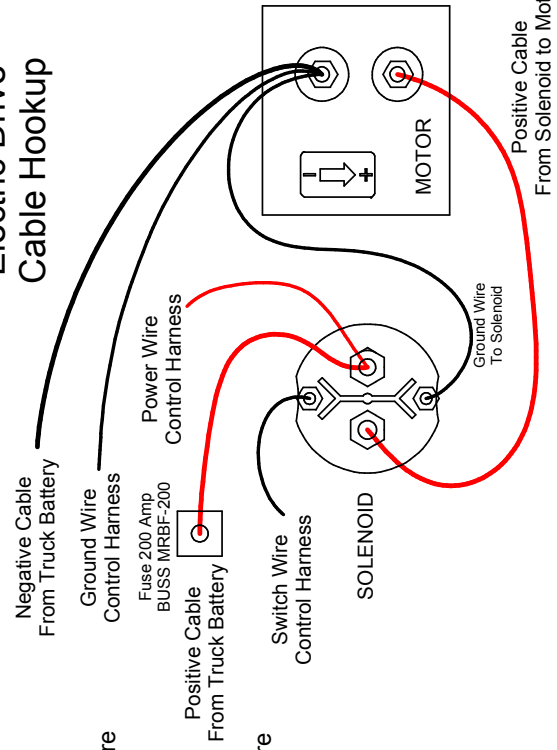


Door Operation Methods

***Note: Do not operate feeder with parts from both method one and two installed at the same time. Failure will result.


Parts for method two are installed from the factory

Method Two

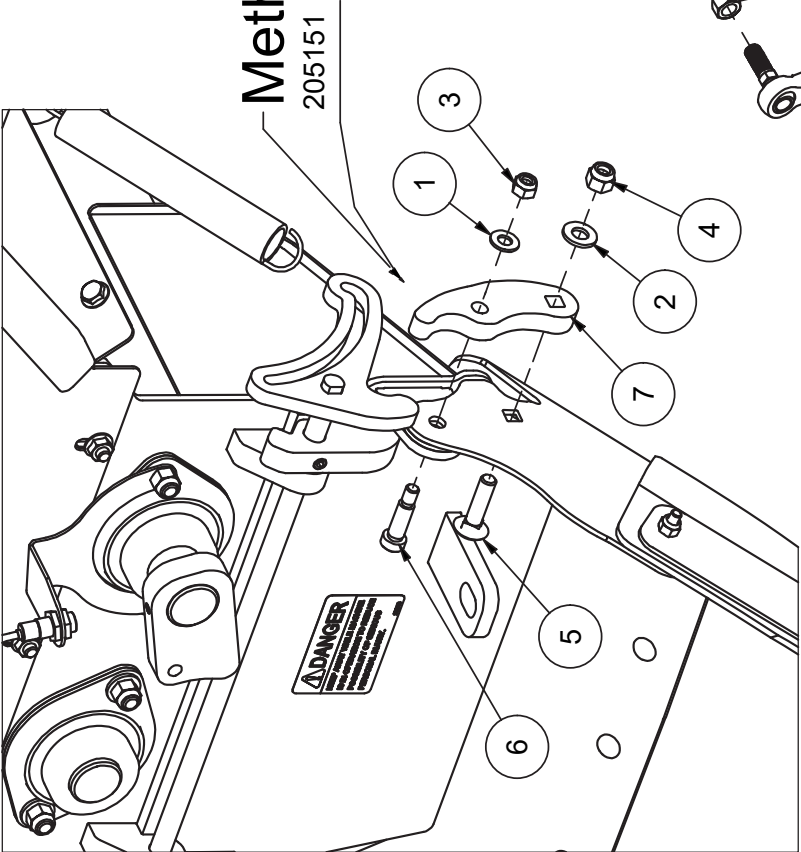


Method One

205134

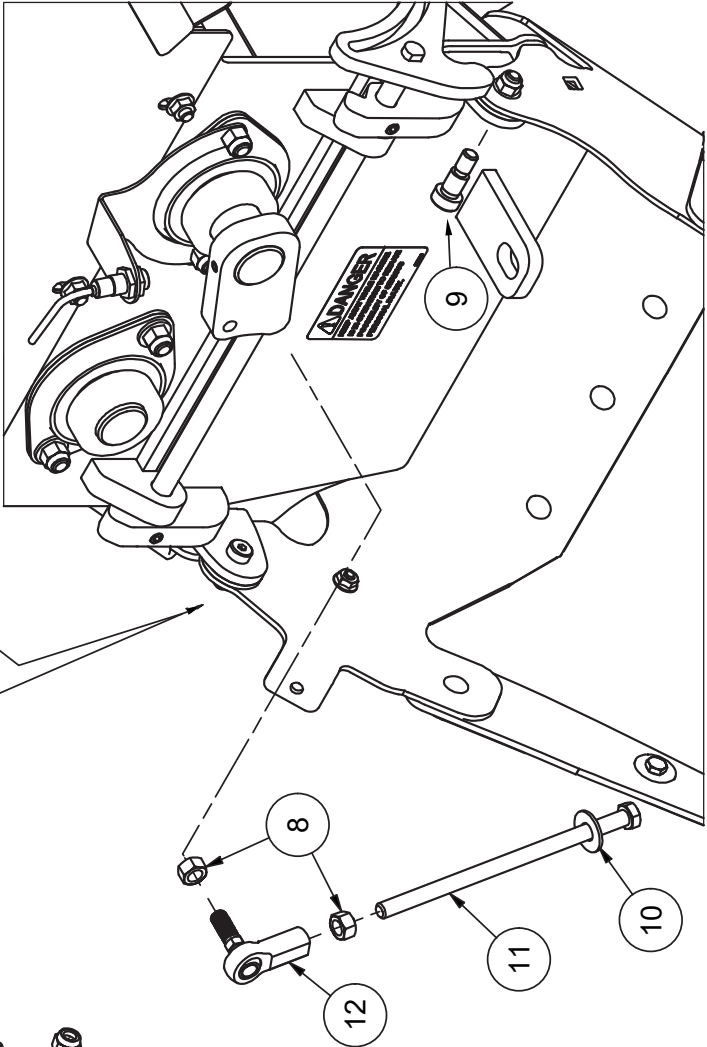


Parts List			DESCRIPTION
ITEM	QTY	PART #	
1	1	205151	Kit, BeefCake Manual Door Kicker
2	1	110069	WASHER, 5/16" FLAT SAE
3	1	110155	WASHER, 3/8" FLAT SAE
4	1	110603	NUT, 5/16-18 LOCK (NYLON)
5	1	110618	NUT, 3/8-16 LOCK NYLON INSERT
6	1	110916	Bolt, 3/8-16 X 1.5 in Carriage
7	1	111071	BOLT, 3/8 X 1.0 SHOULDER SHCS
8	2	260757	Manual Door Kicker
9	1	205134	Kit, BeefCake Ball Joint
10	1	110083	NUT, 3/8-24
11	1	110289	BOLT, 3/8 X 0.5 SHOULDER SHCS
12	1	110676	WASHER, 3/8" FLAT STANDARD
11	1	111068	Bolt, 3/8-24 X 7.0
12	1	142015	Ball Joint Linkage, 3/8-24 RH

Electric Actuator Option

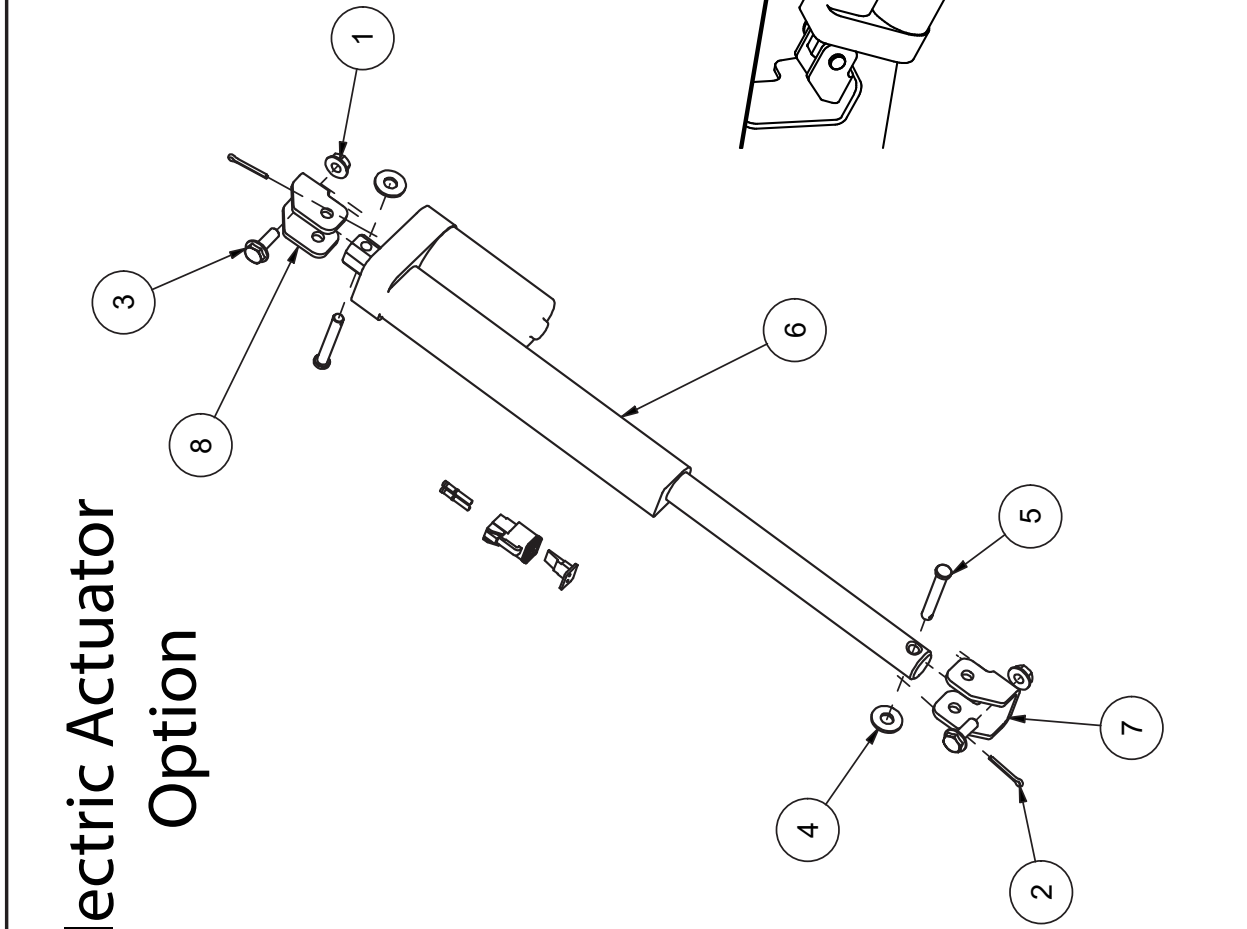


235029		REV: A	
ITEM	QTY	PART #	DESCRIPTION
	1	235029	Kit, Actuator
1	2	110290	Nut, 1/4-20 Wz Flange
2	2	110300	Cotter Pin, 3/32 X 0.75
3	2	110468	Bolt, 1/4-20 X 0.75, Wz Flange
4	2	110673	Washer, 1/4" Flat Standard
5	2	112095	Clevis Pin, Std Zp 1/4 X 1 5/8
6	1	235028	Actuator, 5.9", With Plug
7	1	270135	Tool Box Door Hinge, Outer Half
8	1	270139	Tool Box Door Hinge, Inner Half

LIGHT BAR KIT 800/900

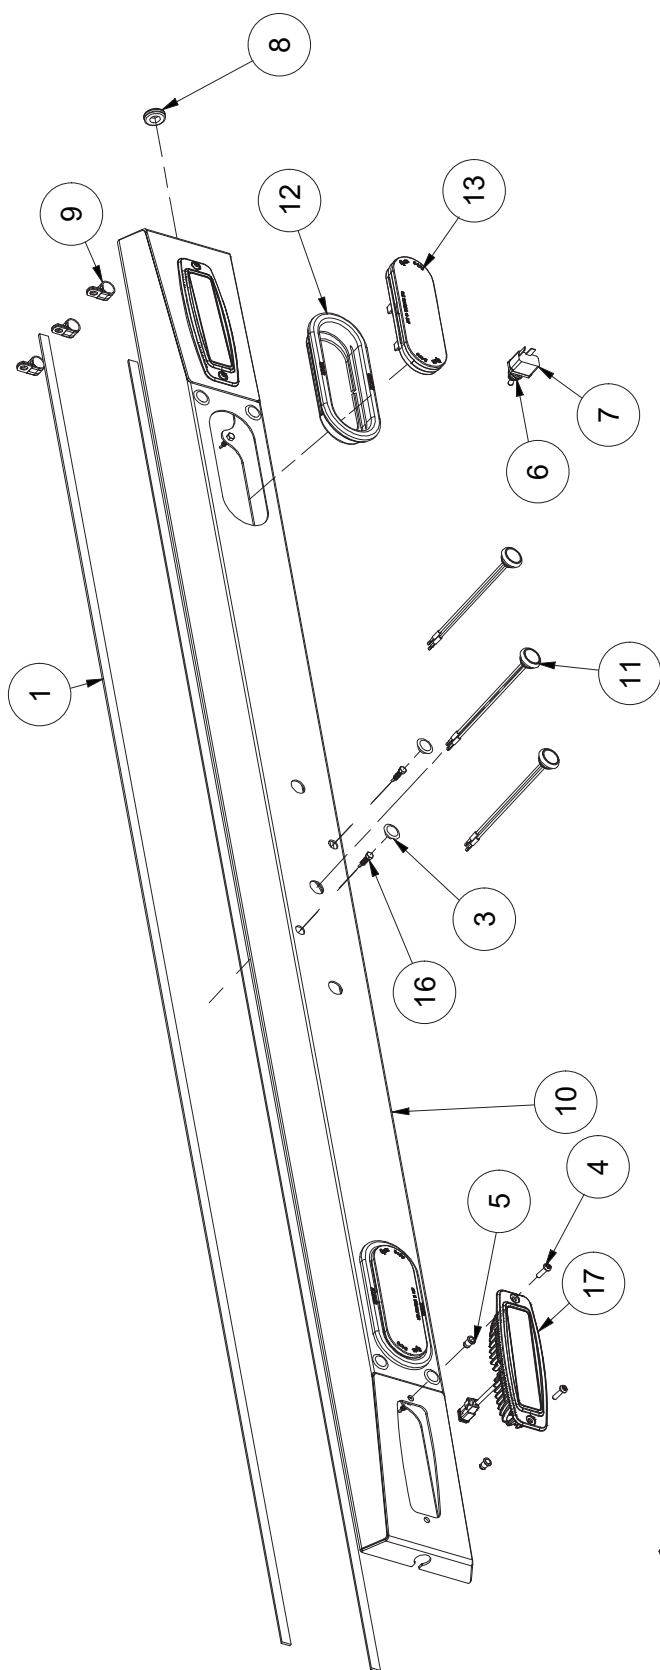


ITEM	QTY	PART #	DESCRIPTION
1	13ft	100613	Seal, .50 X .187 X .156
2	5	102117	Cable Tie, Edge Clip, Top Mount, 7.9" Black
3	6	110753	Plug, 1/2" Button Plastic
4	4	110834	Screw, 10-24 X 3/4 SS Phillips Pan Head
5	4	110835	Nut, 10-24 Rivet Aluminum
6	1	132035	Switch Boot
7	1	132135	Switch, Toggle, Spst, On-Off
8	1	150018	Grommet, 9/16 X 1" Od
9	3	200019	Clamp, Adel Ac10 .265 Hole
10	1	215399	Weldment, Light Bar, Cake Feeder
11	3	232091	Light, 3/4" Round, Led, Red
12	2	232125	Grommet, 6" Oval, Grote
13	2	232127	Light, Oval, S/7/T, Male Pin, Grote
14	1	232246	Harness, Light Bar Splice, 800/900
15	1	232247	Harness, Light Bar, 800/900
16	6	710587	Screw, 3/16 X .75 Tek Self-Tap
17	2	835027	Headlight Assembly, Flush Mount Led

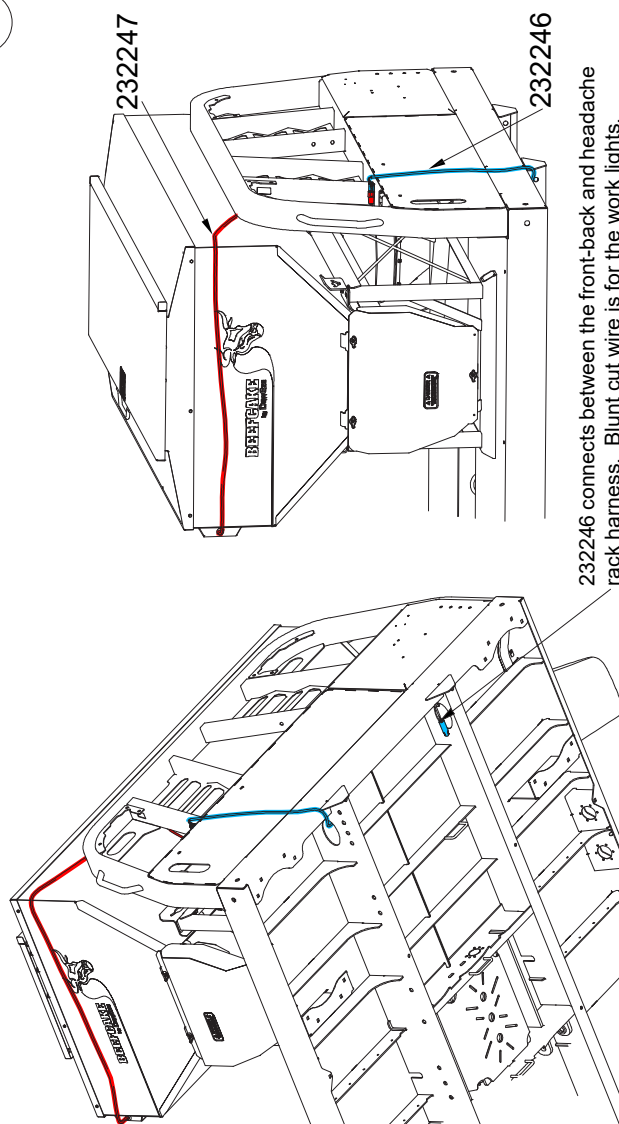

Cake Feeder Light Bar Option Part # 205142			
ITEM	QTY	PART #	DESCRIPTION
1	13 ft.	100613	Seal, .50 x .187 x 156
2	5	102117	Cable Tie, Edge Clip, Top Mount, 7.9" Black
3	6	110753	PLUG, 1/2" BUTTON PLASTIC
4	4	110834	SCREW, 10-24 X 3/4 STAINLESS PHILLIPS PAN HEAD
5	4	110835	NUT, 10-24 RIVET ALUMINUM
6	1	132035	SWITCH BOOT
7	1	132135	Switch, Toggle, SPST, On-Off
8	1	150018	GROMMET, 9/16 X 1" OD
9	3	200019	CLAMP, ADEL AC10 .265 HOLE
10	1	215399	Weldment, Light Bar, Cake Feeder
11	3	232091	LIGHT, 3/4" ROUND, LED, RED
12	2	232125	Grommet, 6" Oval, Grote
13	2	232127	Light, Oval, S/T/T, Male Pin, Grote
14	1	232142	Harness, Cake Feeder Light Bar
15	6	710587	SCREW, 3/16 X .75 TEK SELF-TAP
16	2	835027	HEADLIGHT ASSEMBLY, FLUSH MOUNT LED


Wiring Harness
Will Run Along
Right Side
Then Across
Headache Rack
and Plug Into
Place of Tail Lights

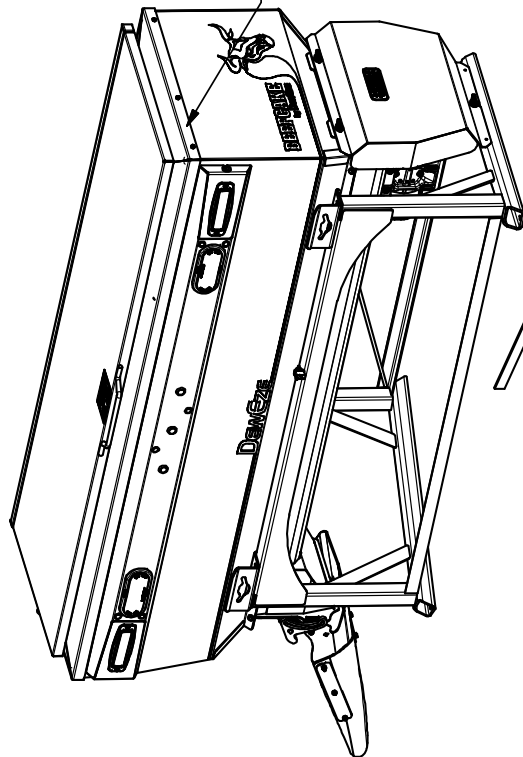

Light Bar for NON-800/900 Models

The Light Bar Option harness # 232142 plugs directly into the Grote harness on your DEWEZE flatbed after June 2018.

If you are putting in on an older bed you will need to order the Adapter Harness Kit part # 235033.

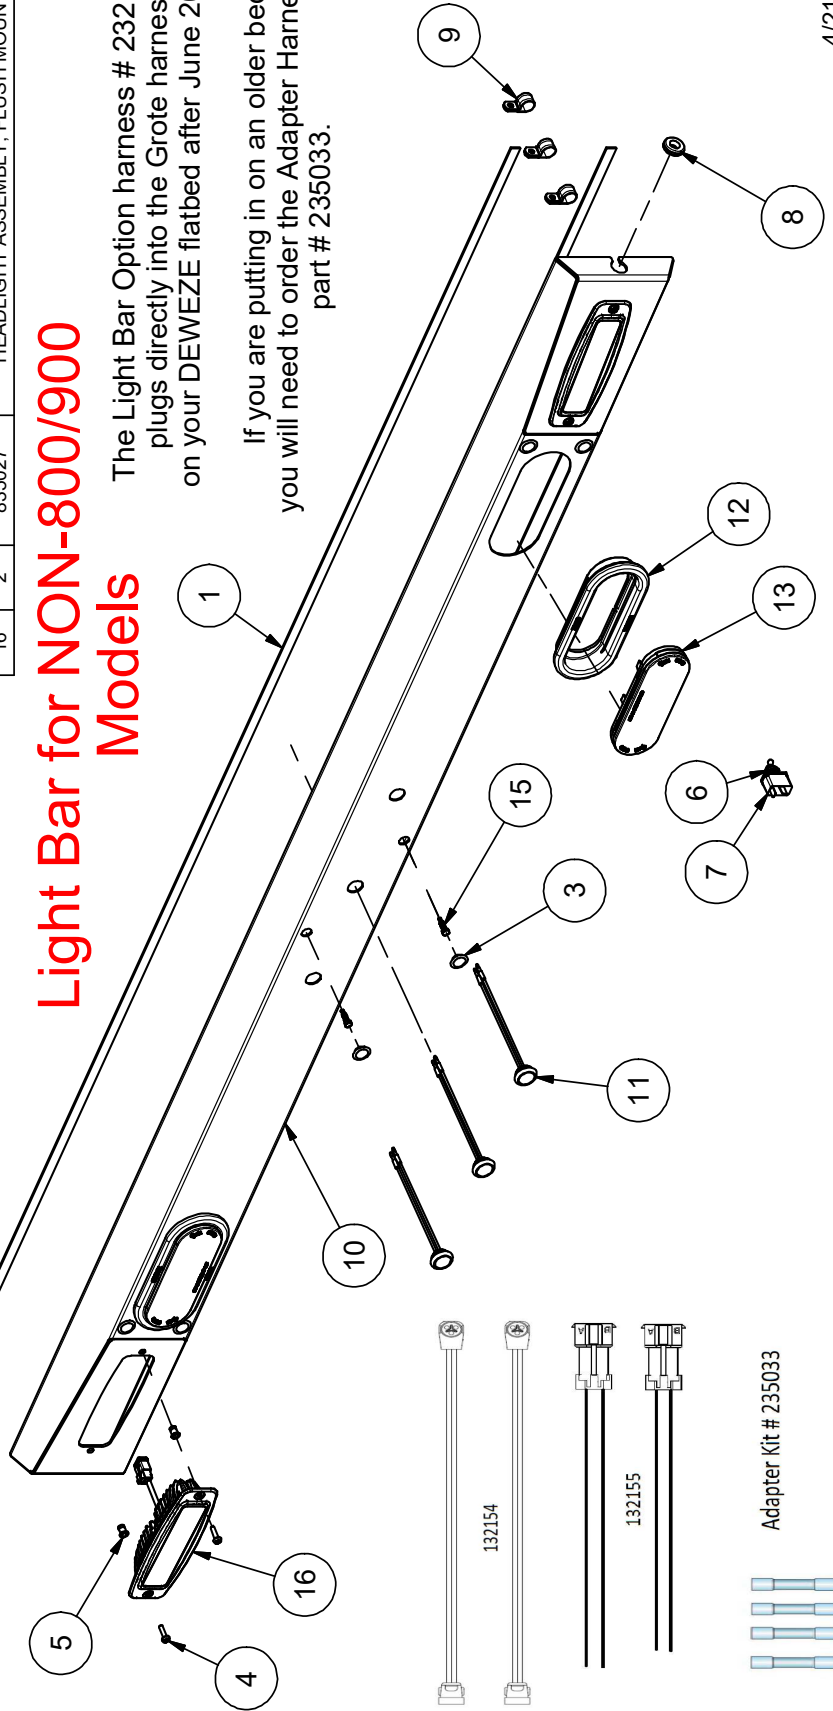

NOTES

Harper Industries, Inc.
151 E. Highway 160
Harper, KS 67058

Telephone: 620-896-7381
Toll-Free: 800-835-1042
Fax: 620-896-7129

Website: www.harperindustries.com

E-mail: info@harperindustries.com