


BEEFCAKE

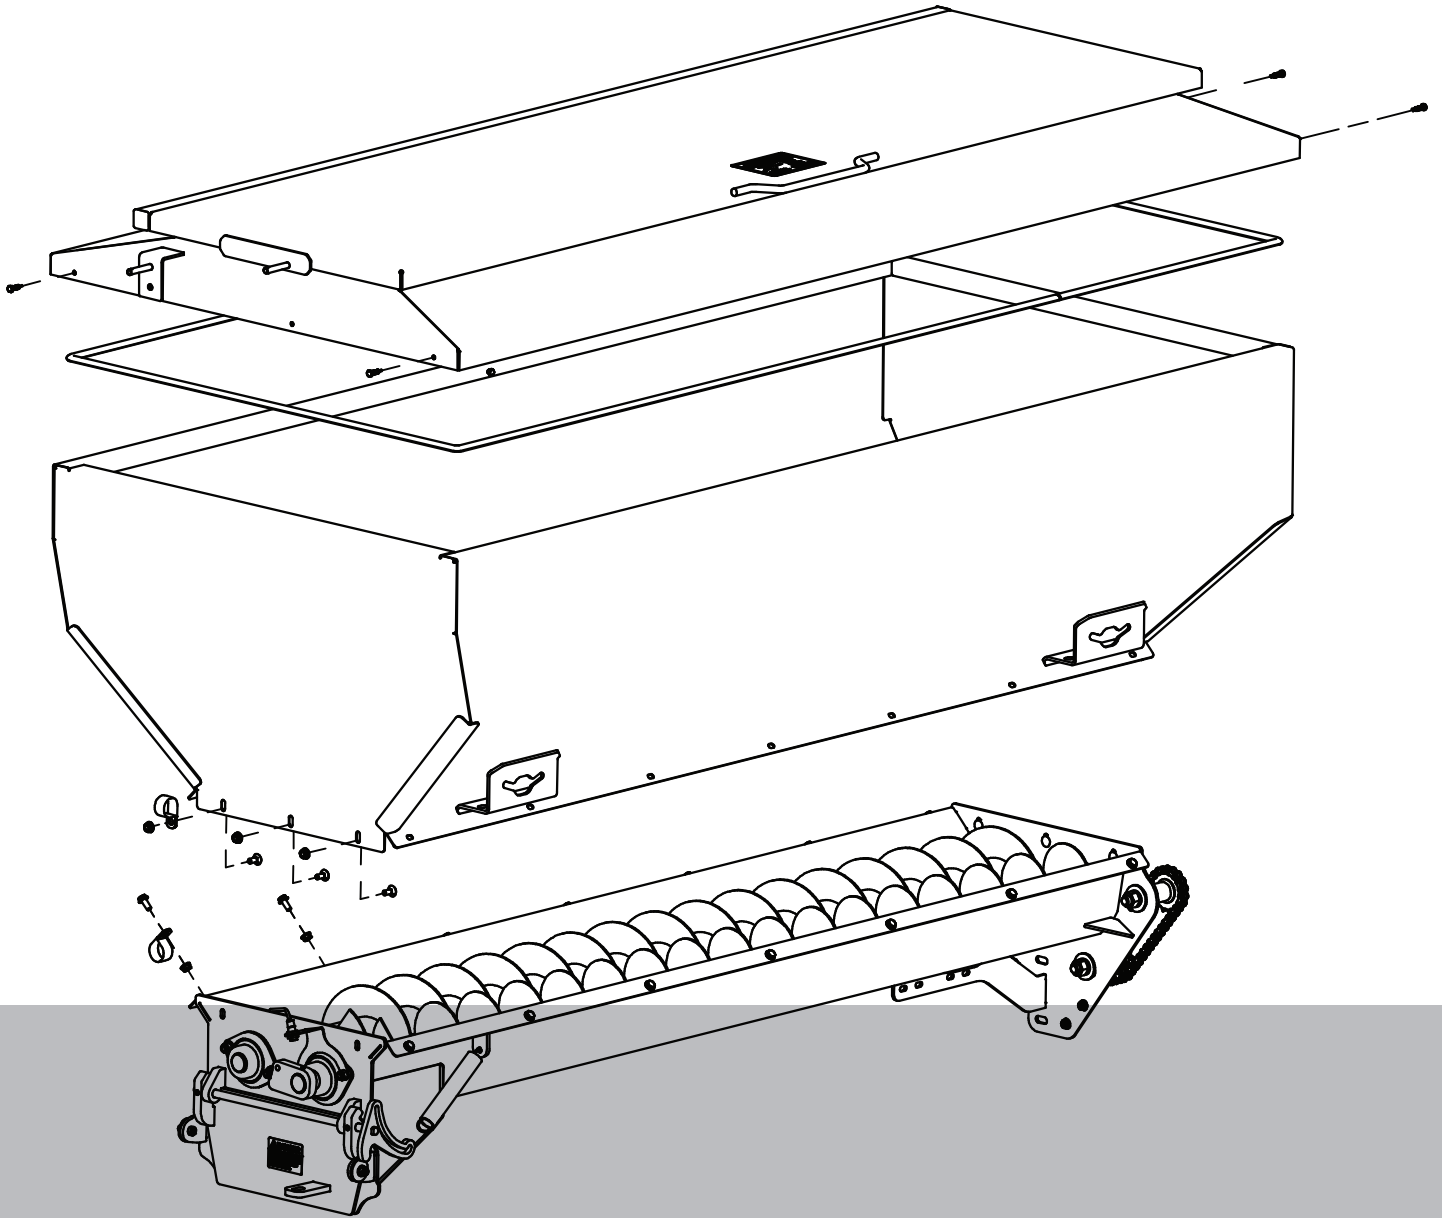

OPERATOR'S & PARTS MANUAL

Thank you for purchasing a Harper Beefcake.

TO THE OWNER OR OPERATOR:

As with all Harper products, the Harper Beefcake has been developed through tough design and testing procedures to produce a machine that can be relied on. This manual gives assembly, operating, and service information for models **BC1000, BC1500, and BC2000**. Please read and understand all instructional material included with the Beefcake and its components before assembling and operating the equipment.

A Beefcake cake feeder can present hazards to an operator who follows unsafe procedures in either the operation or maintenance of the unit. Therefore, **SAFETY WARNINGS** are presented at certain locations in the text.

SYMBOL:



SAFETY WARNING!



MEANING: Failure to understand and obey this warning may result in injury to you or others. Whenever this symbol is used, please pay very close attention to the information presented, and make sure you fully understand. If you do not, contact your dealer or Harper Industries for clarification.



SAFETY WARNING!



All shields and guards must be in place for proper and safe operation of this equipment. Where they are shown removed in this manual, it is for purposes of illustration and instruction only. Do not operate this equipment unless all shields and guards are in place.

Harper Industries, Inc. is continually striving to improve the design and performance of its products. We reserve the right to make changes in specifications and design without thereby incurring any obligation relative to previously manufactured products.

© 2026 Harper Industries, Inc.

The Harper and Beefcake names are registered trademarks of Harper Industries, Inc. All other brand and product names are trademarks or registered trademarks of their respective companies.

LIMITED WARRANTY

Harper Industries, Inc. (HII) warrants to each purchaser of a new Harper Beefcake from an authorized dealer or representative, that such equipment is free of manufacturer's defects in workmanship and materials which appear while in normal service for a period of ONE YEAR commencing with delivery to the original user.

The obligation of HII under this warranty is expressly limited, at our option, to replacement or repair at a service facility designated by Harper Industries or at the manufacturing plant in Harper, KS. A part will be replaced after inspection discloses it to have been defective. This warranty does not apply to defects caused by damage or unreasonable use (including failure to provide reasonable and necessary maintenance, or by performing functions without genuine Harper Beefcake accessories) while in the possession of the consumer.

Warranty is limited to parts, labor and ground freight delivery of replacement parts. HII shall not be liable for the consequential damages of any kind, including but not limited to consequential labor costs or transportation charges in connection with replacement or repair of defective parts.

This warranty does not apply to parts subjected to misuse, abuse, alteration, improper or inadequate maintenance, or normal wear (including chains, augers).

Harper Industries makes no warranty with respect to trade accessories. They are subject to the warranties of their respective manufacturers.

ANY IMPLIED OR STATUTORY WARRANTIES, INCLUDING ANY WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. HII makes no other express warranty, nor is anyone authorized to make any on behalf of HII.

For further information please contact your nearest Harper Beefcake dealer.

Date of Purchase _____/_____/_____

Dealer's Name _____

Dealer's Phone _____

Serial Number _____

Table of Contents

OPERATOR SECTION

To the Owner or Operator.....	1
Warranty Statement.....	2
Table of Contents.....	3
Specifications.....	4
Feature Identification.....	5
General Safety Guidelines	
Equipment and Controls.....	6
Guards and Shields.....	6
Replacement Parts.....	6
Safety Decals.....	6
Hydraulics.....	6
Installation	7
Operating Instructions	
Before Operating.....	8
Transporting.....	8
Operating	
Hydraulic BC.....	8
Electric BC.....	9
Optional Door Operations	
Method 1 - Door Lifting Mechanism.....	10
Method 2 - Kicker.....	10
Optional Chute Operations	
Method 1 - Manual Chute Operations.....	11
Method 2 - Actuator.....	11
Electric Models	12

PARTS SECTION

Structure

Cake Feeder Assy (2017).....	16
Cake Feeder Stand (2017).....	17
Auger & Trough Assy (2021).....	18-19
Auger Orientation.....	20
Drive Chains Adjustment & Tension.....	21
Lid & Frame Assy.....	22
Lift Handle & Latch/Drive Shield (2017).....	23
Chute Extension Assy (2017).....	24
Cake Feeder Dummy Arms.....	25
Decals.....	26

Hydraulic/Electric

Hydraulic Drive (2021).....	27
Electric Drive (2021).....	28
Electric Drive (2017).....	29
Hand Control (2017).....	30
Hand Control (2020).....	31
Electrical Harnesses.....	32
Electrical Schematic.....	33


Optional

Door Operation Options (Kicker).....	34
Electric Actuator.....	35
Light Bar Option (800/900 Beds).....	36
Light Bar (Non-800/900 Beds).....	37


Specifications

Power	Hydraulic Electric Motor - Leeson 3/4 hp
Capacity	BC1000 - 26 cu. ft. - about 1000 lbs. w/ 3/4" range cubes BC1500 - 34 cu. ft. - about 1500 lbs. w/ " " " BC2000 - 46 cu. ft. - about 2000 lbs. w/ " " "
Dimensions	BC1000 - Length: 80 in Width: 26 in Height: 44 in BC1500 - Length: 80 in Width: 36 in Height: 45.3 in BC2000 - Length: 80 in Width: 42 in Height: 50.3 in
Paint	Durable 2-part Polyurethane
Augers	Two 6 inch diameter augers Left - 76 3/4 in long Right - 78 in long
Options	- Electronic Actuator for chute - Kicker for chute door

NOTE: Following publication of this manual, certain changes in standard equipment and options may have occurred which would not be included in these pages. Your Harper dealer is the best source for up-to-date information.

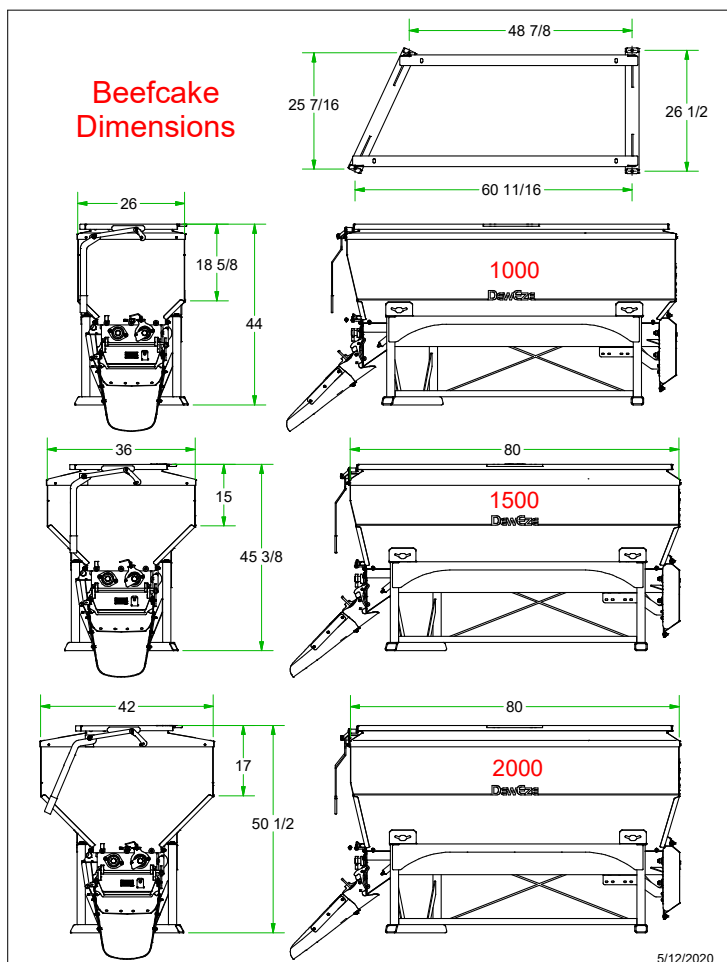

Feature Identification

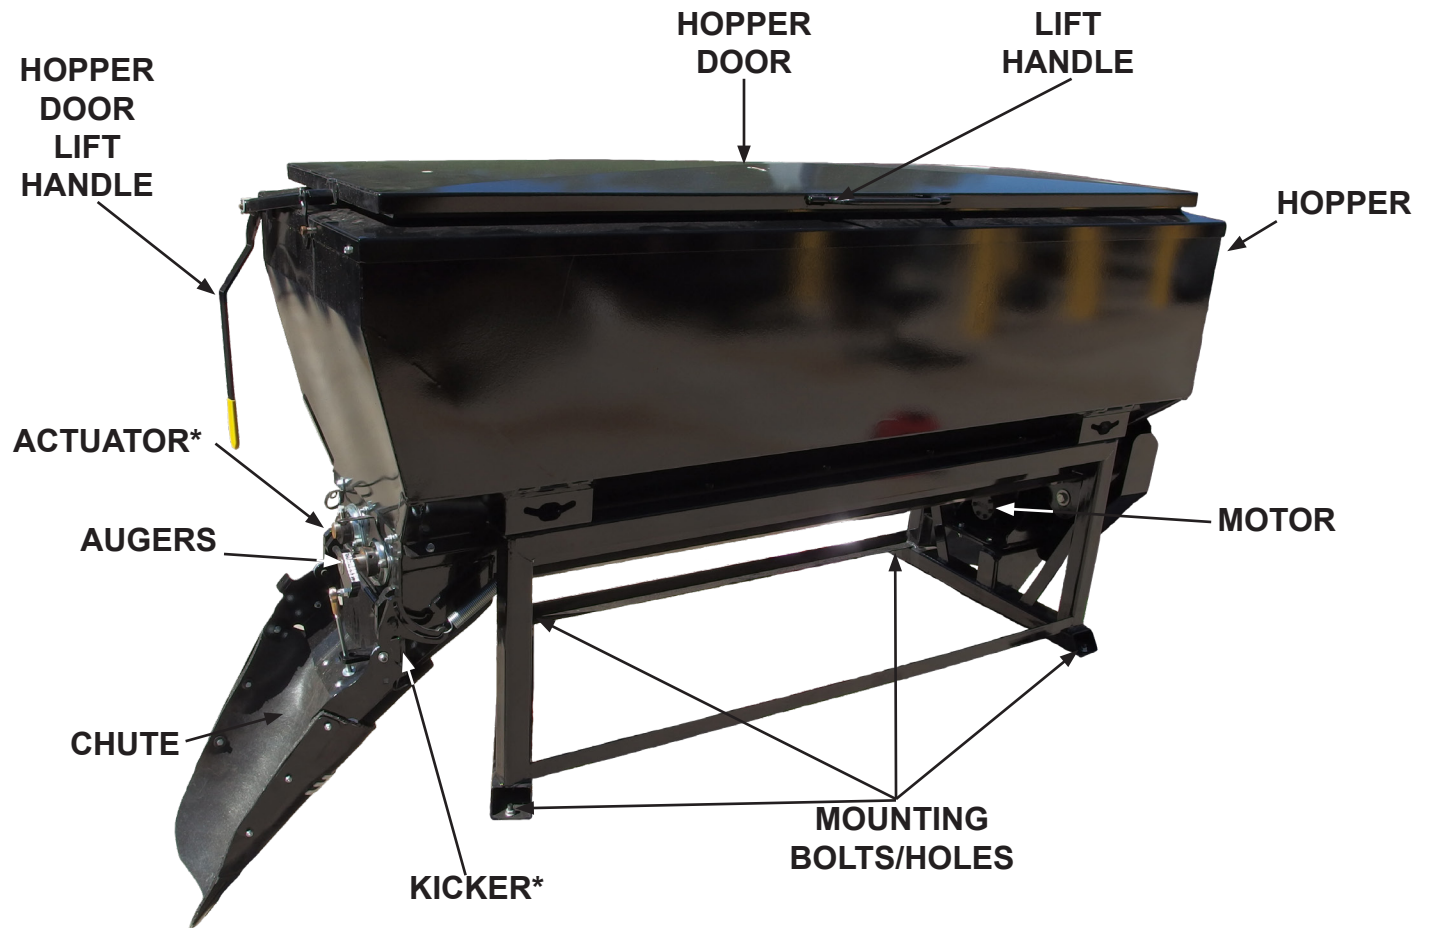

Hopper Door Lift Handle - used to open the hopper from the ground.

Actuator* - raises and lowers the chute.

Augers - when rotating, push the feed out of the hopper and down chute.

Chute - made of rubber and can be raised for transport or lowered for distribution of feed.

Kicker* - when attached it allows the door for the feed to be held in an open position.

Mounting Holes/Bolts - for mounting the Beefcake to the flatbed.

Motor - is a Leeson 3/4 hp used to power the dual augers.

Hopper - has three options of capacity: 1000, 1500, or 2000 lb limits based on choice of BC.

Hopper Door - has a weather proof strip on the inside edge of door to keep moisture out.

Lift Handle - used to open hopper when on the bale bed.

* denotes optional attachments of the **Beefcake**.

General Safety Guidelines

Equipment & Controls

- Before operating this equipment, read and understand the Operator's Manual.
- Altering the unit in any way that adversely affects its safe operation, performance or durability will void the warranty and may cause hazardous conditions.
- Know the location and function of all controls and how to stop the equipment quickly in an emergency before you operate the unit.
- Keep all bolts, screws and fittings tight to ensure safe operation of equipment.

Guards & Shields

- Keep all safety devices in place and in good operating condition.
- Replace all worn, damaged, unusable, missing or lost safety shields and guards before operating unit.

Replacement Parts

- Use genuine factory parts or parts with equivalent characteristics including: type, strength and material.
- Replace locknuts and locking screws if they cannot be tightened without considerable resistance for several turns before they are completely tight.
- If hardware is not secure, or if fasteners are over-tightened, equipment failure may result posing possible safety hazards.
- Use proper torque specifications for all fasteners when they are replaced.



SAFETY WARNING!

Failure to use genuine factory parts may result in voiding of the warranty, product malfunction or possible injury.

Safety Decals

- If safety related or instructional decals become illegible or are removed, replace them immediately.
- If parts are replaced, make sure all safety related or instructional decals are present before the equipment is operated again.
- New decals may be obtained from your local Harper Dealer.

Hydraulics

To prevent serious injury or death:

- Relieve pressure on system before repairing, adjusting or disconnecting any hydraulic hose or fitting.
- Wear proper hand and eye protection when searching for leaks.
- Use wood or cardboard instead of hands when looking for leaks.
- Keep all hoses, fittings and components in good operating condition.
- Do not use any type of heat or flame (welding, soldering, cutting torch, etc.) near pressurized hydraulic lines.



SAFETY WARNING!

HIGH-PRESSURE FLUID HAZARD!

Escaping fluid under pressure can penetrate skin causing serious injury or death.

Installation

You can use select Deweze Balebeds to lift your new **Beefcake** on to the bed or one of many other options as long as safety, precaution and common sense are used.



SAFETY WARNING!

Keep any objects or body extremities from beneath the Beefcake when loading and do not stand under the feeder when it is raised.


Next, position the Beefcake into place so that you can mark on the flatbed floor the location of the mounting holes for attaching the **Beefcake**. Align the mounting holes with stringers of the flatbed, and mark the (4) mounting holes for drilling, rotate the Beefcake to the back of your flatbed, and drill the (4) mounting holes.




Put the Beefcake back in place where you marked and drilled the mounting holes. Attach with either the (4) mounting bolts included in your purchase or your own preferred size of mounting bolt that can fit into the predrilled mounting points on the Beefcake.

The final step depends on whether you have purchased the hydraulic or electric motor version of the Beefcake.

For the hydraulic, connect the hydraulic hoses that are attached to the Beefcake to your bed's hydraulic hookups located on the right side of the headache rack. There is a check valve pre-installed on your Beefcake. If by chance the augers do not run when activated, switch the hoses on the bed location. This will allow it to run correctly. There is also an electrical harness that will need positive and negative leads run from the feeder to the battery under the hood of the truck.

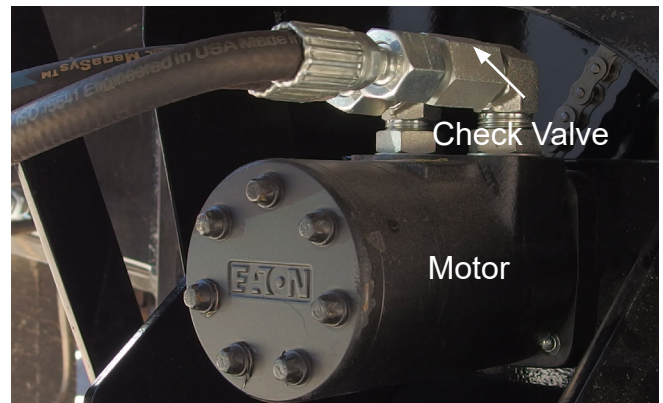


For the electric, attach the positive cable to the solenoid as depicted below, and run it to the positive end of the battery on the truck, and be sure to put the 200 Amp fuse on with the cable (this will protect the motor).

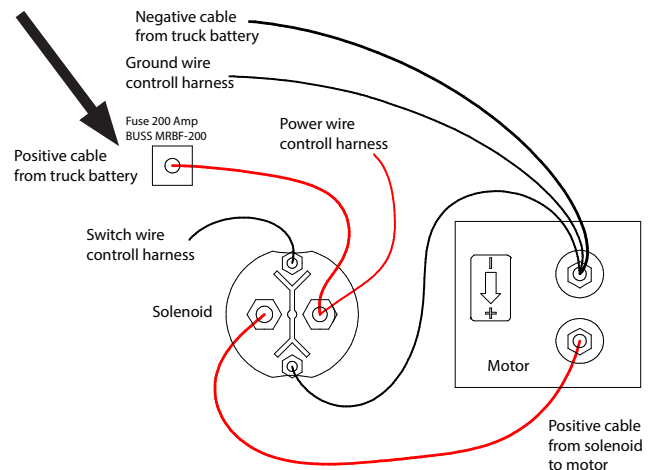


Also, If you prefer to operate either of the version (hydraulic or electric) from inside your truck, run the Beefcake controller to the inside of your truck.

DewEze Flatbed Stringer Locations

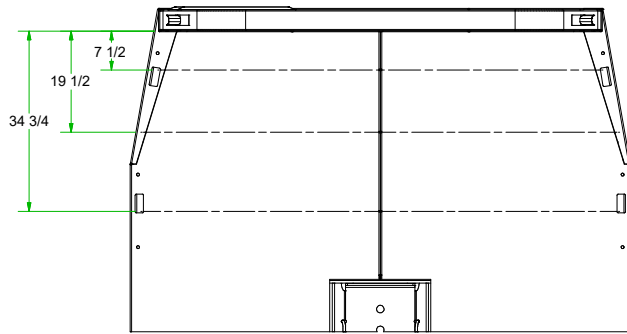

684 & 784

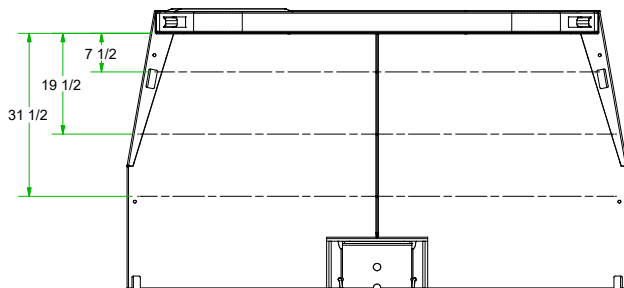

676 & 776
688 & 788

Operating Instructions

Before Operating

- Inspect inside the hopper and around the chain drive for the augers for any foreign objects. If any are found remove it/them.
- Be sure to check that all shields are in place and that all bolts or fasteners are tightened.

Transporting

- When transporting the Beefcake, be sure that the hopper lid's lift handle has the safety latch in place so that the lid does not rise during transport due to wind.



Operating Hydraulic Powered Beefcake

- Fill Beefcake with desired amount of feed or grain product.
- Lower the rubber chute to feeding position.
- Activate the hydraulic motor with the balebed's remote.

Due to the check valve on this product, if it becomes clogged or stalls, it cannot be reversed to dislodge it. You must stop the feeder, shut off the units power, and disconnect the hydraulic hoses to relieve any pressure on the system before seeing to the problem.




SAFETY WARNING!
Do not put hands into a plugged auger when there is pressure on the system. It can result in harm.

- Do not use the hopper for long term storage of feed. It could create a corrosive environment and cause unwarranted wear on your machine.

Electric Powered Beefcake


- Fill Beefcake with desired amount of feed or grain product.
- Lower the rubber chute to feeding position.
- Activate the electric motor with the Beefcake's remote.

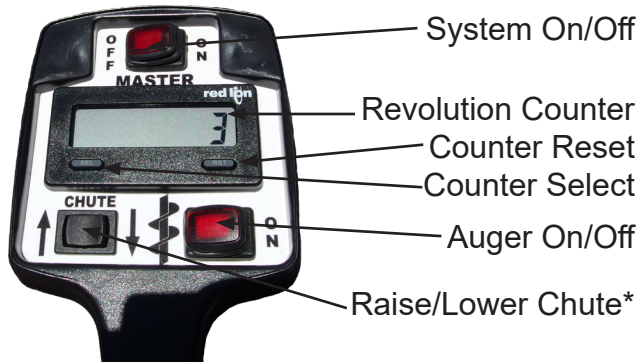

*Only available with the chute actuator option otherwise this switch serves no purpose.

For Your Information

The controller for the Beefcake is used in both the hydraulic and electric version of the feeder. Currently, the only difference is that the auger is activated differently between the two options. The electric uses the auger on/off switch on the Beefcake remote, and the hydraulic uses the flatbeds hydraulic function to activate the auger. Aside from the auger, everything else on the Beefcake remote is universal.

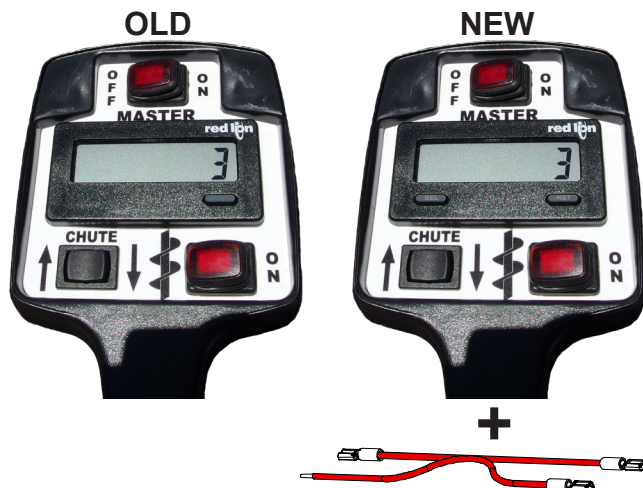

NOTE: Old ONE BUTTON counters had a soldered battery and are obsolete. New counters have TWO BUTTONS and require a jumper wire to add constant power: **page 31**

Red Lion Cub5B Counter Factory Reset

RESET:

Press RST and hold for 3 seconds & release.

Press SEL 1 time.

REPROGRAM:

Power off hand control then turn back on.

Hold SEL for 3 seconds.

>>>> Screen will display "Pro No"

Press RST 3 times.

>>>> Screen will display "3-dsplay"

Press SEL 8 times.

>>>> Screen will display "Fact Set", "No"

Press RST 1 time.

>>>> Screen will display "Yes"

Press SEL 1 time.

>>>> Screen will display "Pro No"

Press SEL 1 time.


Done

NOTE: Error code EE means an error occurred between the counter and the sensor. Ensure all wires are tightend and free of corrosion. Also look for nicks that could cause intermittent ground faults.


Optional Door Operations

Method #1

Door Lifting Mechanism and Operation

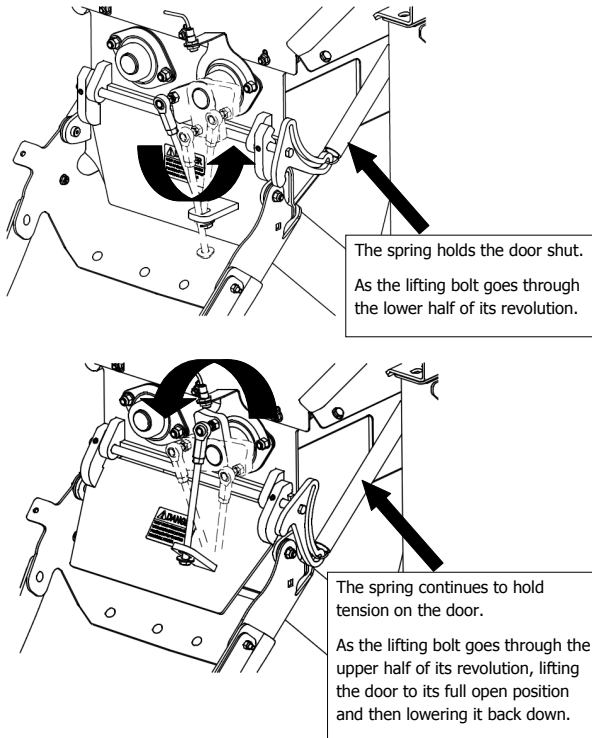


When it is in the closed position, it will create piles while operating. Whereas if it is in the open position, it will create a row while operating.

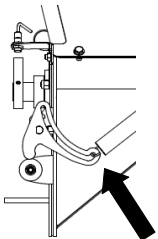


Changing the position of this spring holds the door **OPEN** or **CLOSED**

This is located on the right side of the chute as depicted by the image.

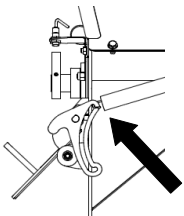

Reference **Ppage 34** for optional door lift parts

Method #2 Kicker

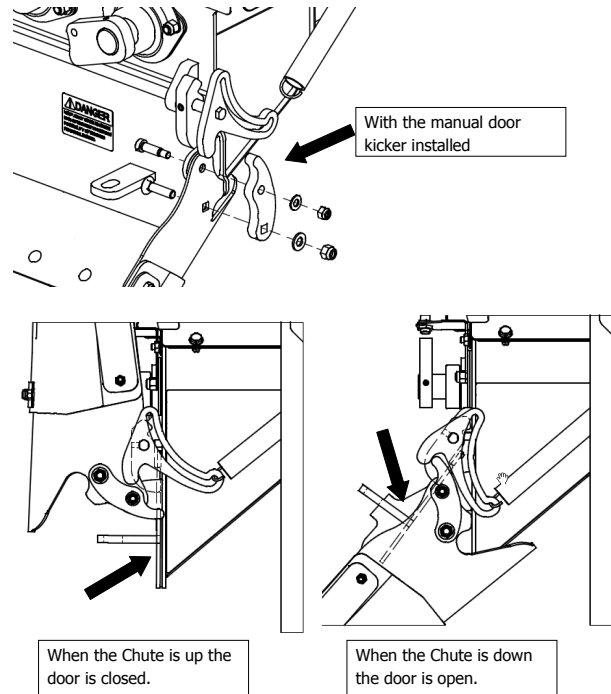

The kicker is a great option for when you will always be making rows rather than piles with your feed.

NOTE: USE ONLY ONE METHOD.




CAUTION!




Using both optional methods at the same time will cause either the chain or actuator to fail. *The unit will come from the factory with Method #2 pre-installed.*

Optional Chute Operations

Method #1 Standard

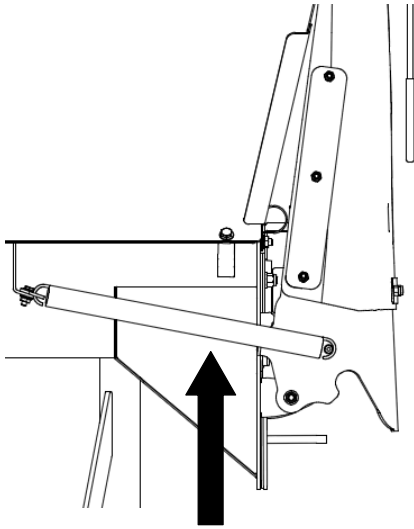


This spring holds the Chute
either **UP** or **DOWN**

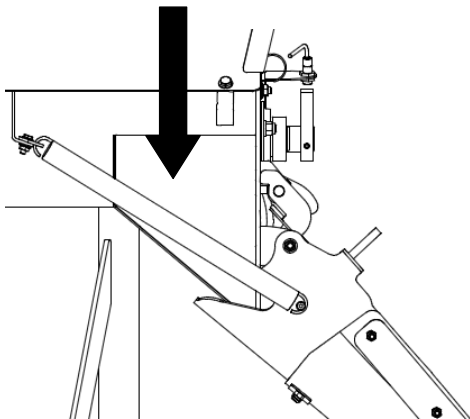

This is located on the left side of the chute as depicted by the image.

This is used for transportation so that the chute is not damaged in any way due to protruding from the side of the truck.

Method #2 Actuator

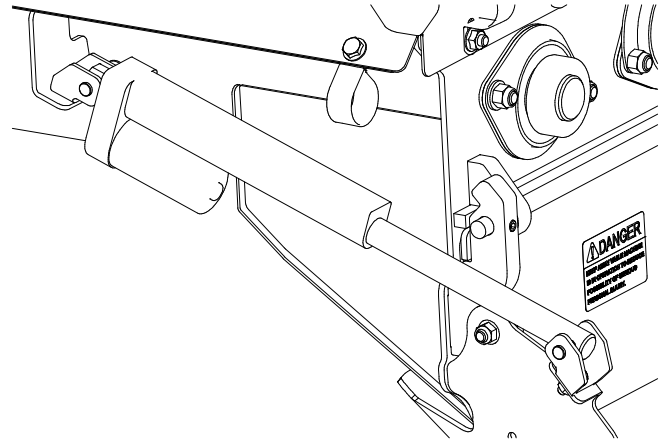

The actuator replaces the spring that holds the chute either an up or down position. It allows the operator to manage the chute from the comfort of the seat or whatever their location is. See page 7 for details on the switch for the actuator.

DewEze Electric Beefcake

Electrical Minimum Requirements

Cable Requirements

All Electric Beefcake models are supplied with 18FT 2GA welding cable leads for hook-up to truck battery — This is maximum length for this cable

If a longer length is desired refer to chart below for minimum cable size

18FT	25FT	30FT	35FT	40FT
Supplied	"0" Gauge	"00" Gauge	"00" Gauge	"000" Gauge

Cables of new length must be built from single cables without splices or connections — Cable ends must be properly crimped or soldered

Electrical Supply Requirements

Beefcake electric feeders require a stable power source:

- Batteries must be in good condition and should be fully charged (12.7V standing)
- Truck Charging System must operational (14V+ if engine running)
- All electrical connections must be good (checked with voltmeter, not visually)

Batteries at 12.1 Volts are not fully charged they are actually 50% discharged

Battery Standing Voltage @ Percent Charge

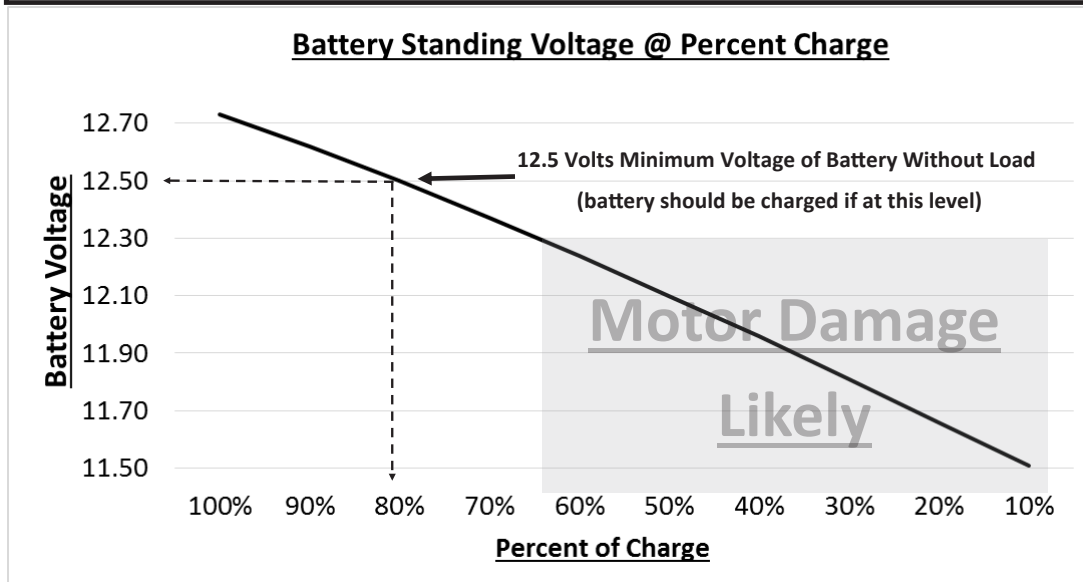


Chart Shows the unloaded voltage of a good battery at a particular charge level this is for reference only — actual battery charge and capacity should be determined by load testing of the battery

2/12/19

PARTS

Table of Contents

PARTS SECTION

Structure

Cake Feeder Assy (2017).....	16
Cake Feeder Stand (2017).....	17
Auger & Trough Assy (2021).....	18-19
Auger Orientation.....	20
Drive Chains Adjustment & Tension.....	21
Lid & Frame Assy.....	22
Lift Handle & Latch/Drive Shield (2017).....	23
Chute Extension Assy (2017).....	24
Cake Feeder Dummy Arms.....	25
Decals.....	26

Hydraulic/Electric


Hydraulic Drive (2021).....	27
Electric Drive (2021).....	28
Electric Drive (2017).....	29
Hand Control & Harness (2017).....	30-31
Hand Control & Harness (2020).....	32-33
Electrical Schematic.....	34

Optional

Door Operation Options (Kicker).....	35
Electric Actuator.....	36
Light Bar Option.....	37

Cake Feeder Assembly 2017


Parts List			DESCRIPTION
ITEM	QTY	PART #	DESCRIPTION
1	6	102074	Clamp, Adel .75w x 1.25id x .406 Hole
2	5	110020	Bolt, 5/16-18 X 0.75 in Carriage
3	14	110444	BOLT, 5/16-18 X 0.75, WIZ FLANGE
4	6	110603	NUT, 5/16-18 LOCK (NYLON)
5	14	110606	NUT, 5/16-18 WIZ FLANGE
6	1	110871	Bolt, 5/16-18 X 1 in Carriage
7	6	111155	Washer, 5/16 Flat, Large Dia. 1-1/4 Zinc
8	7	710586	SCREW, 1/4 X 1 TEK SELF-TAP

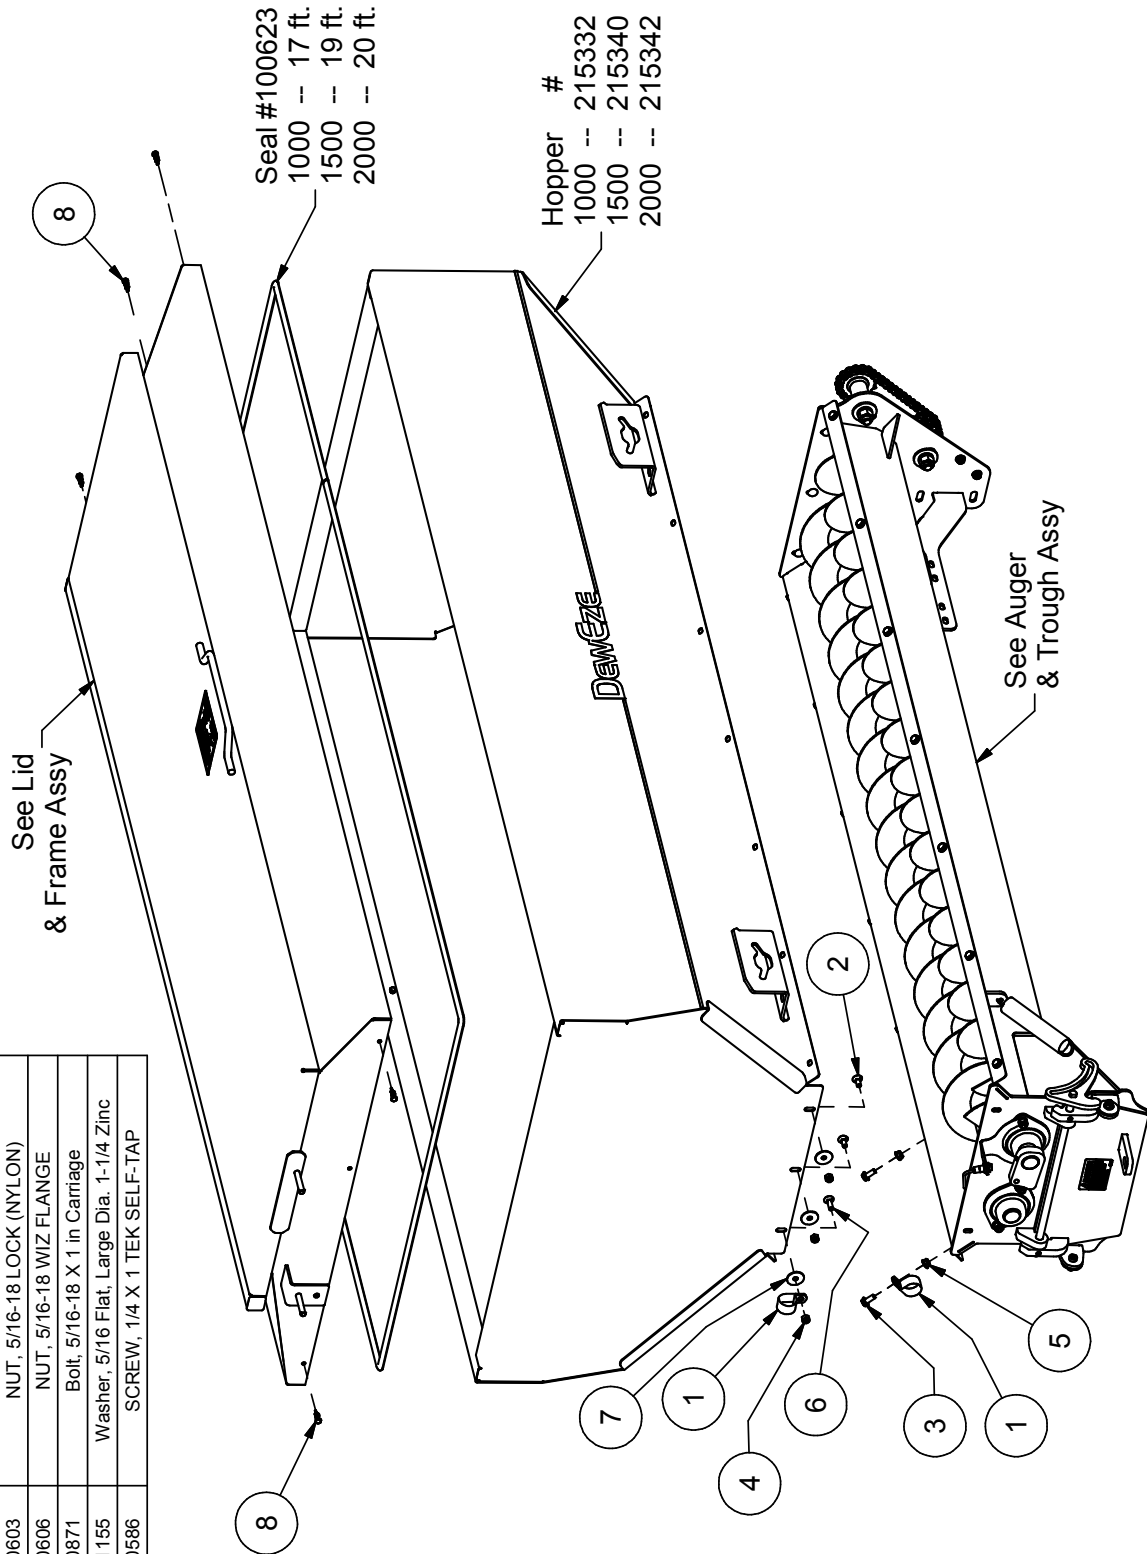


8/17/2017

Cake Feeder Stand 2017

Parts List		
ITEM	QTY	PART # DESCRIPTION
1	4	110220 BOLT, 1/2-13 X 1, WIZ FLANGE
2	4	110588 NUT, 1/2-13 WIZ FLANGE
3	1	215376 Weldment, Cake Feeder Stand, 2017
4	4	205136 Kit, Mounting Bolts

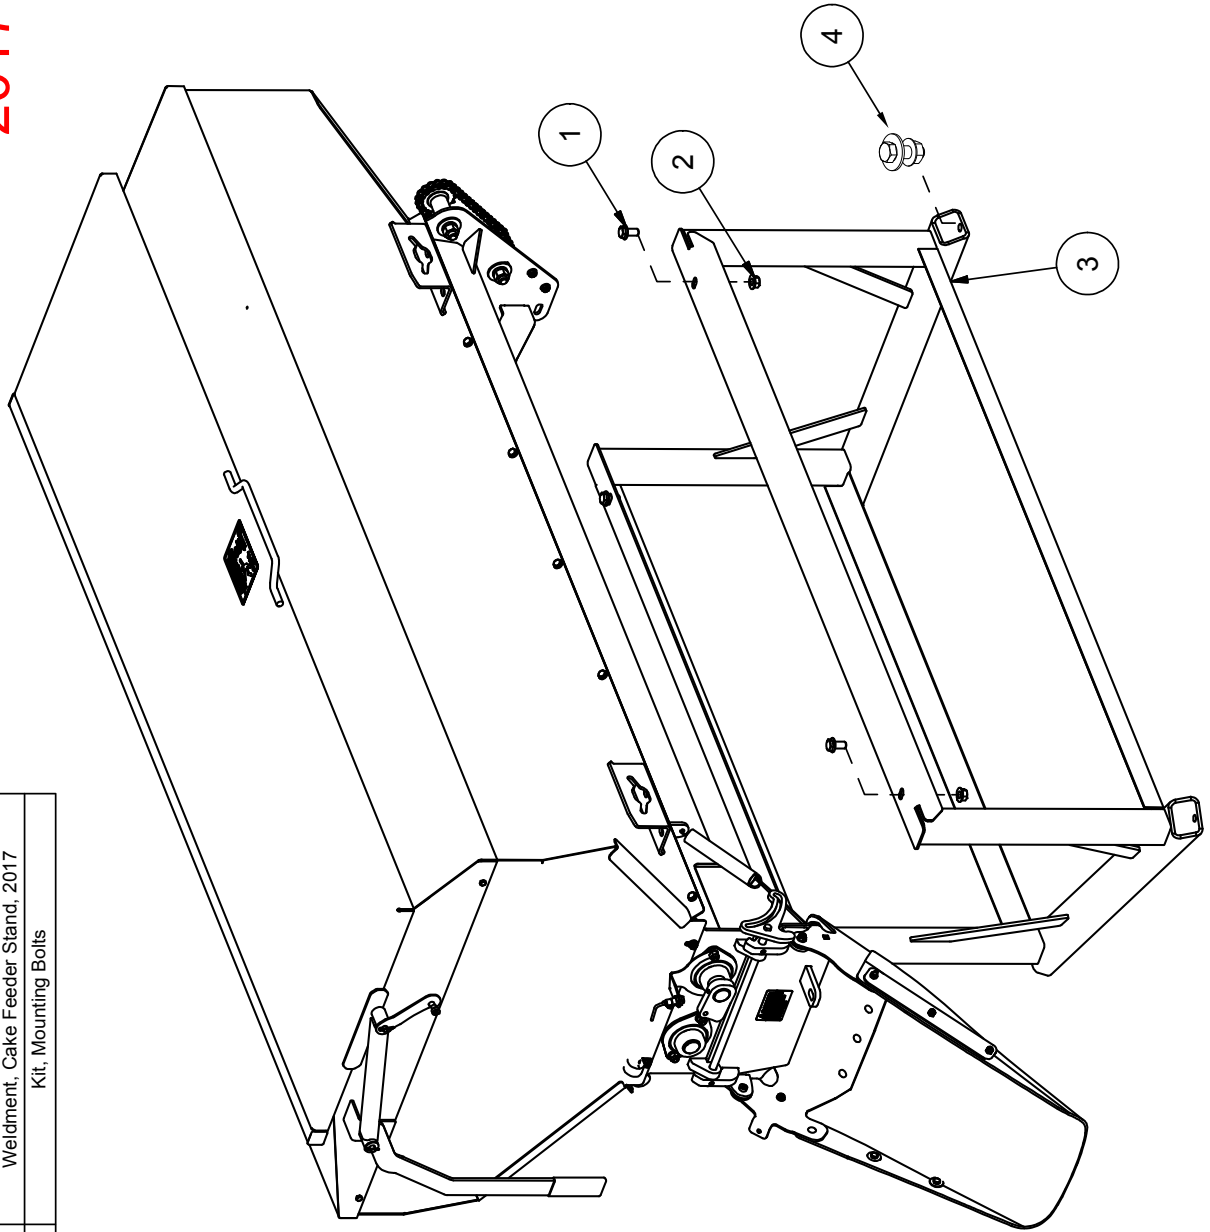

Auger & Trough Assembly 2021


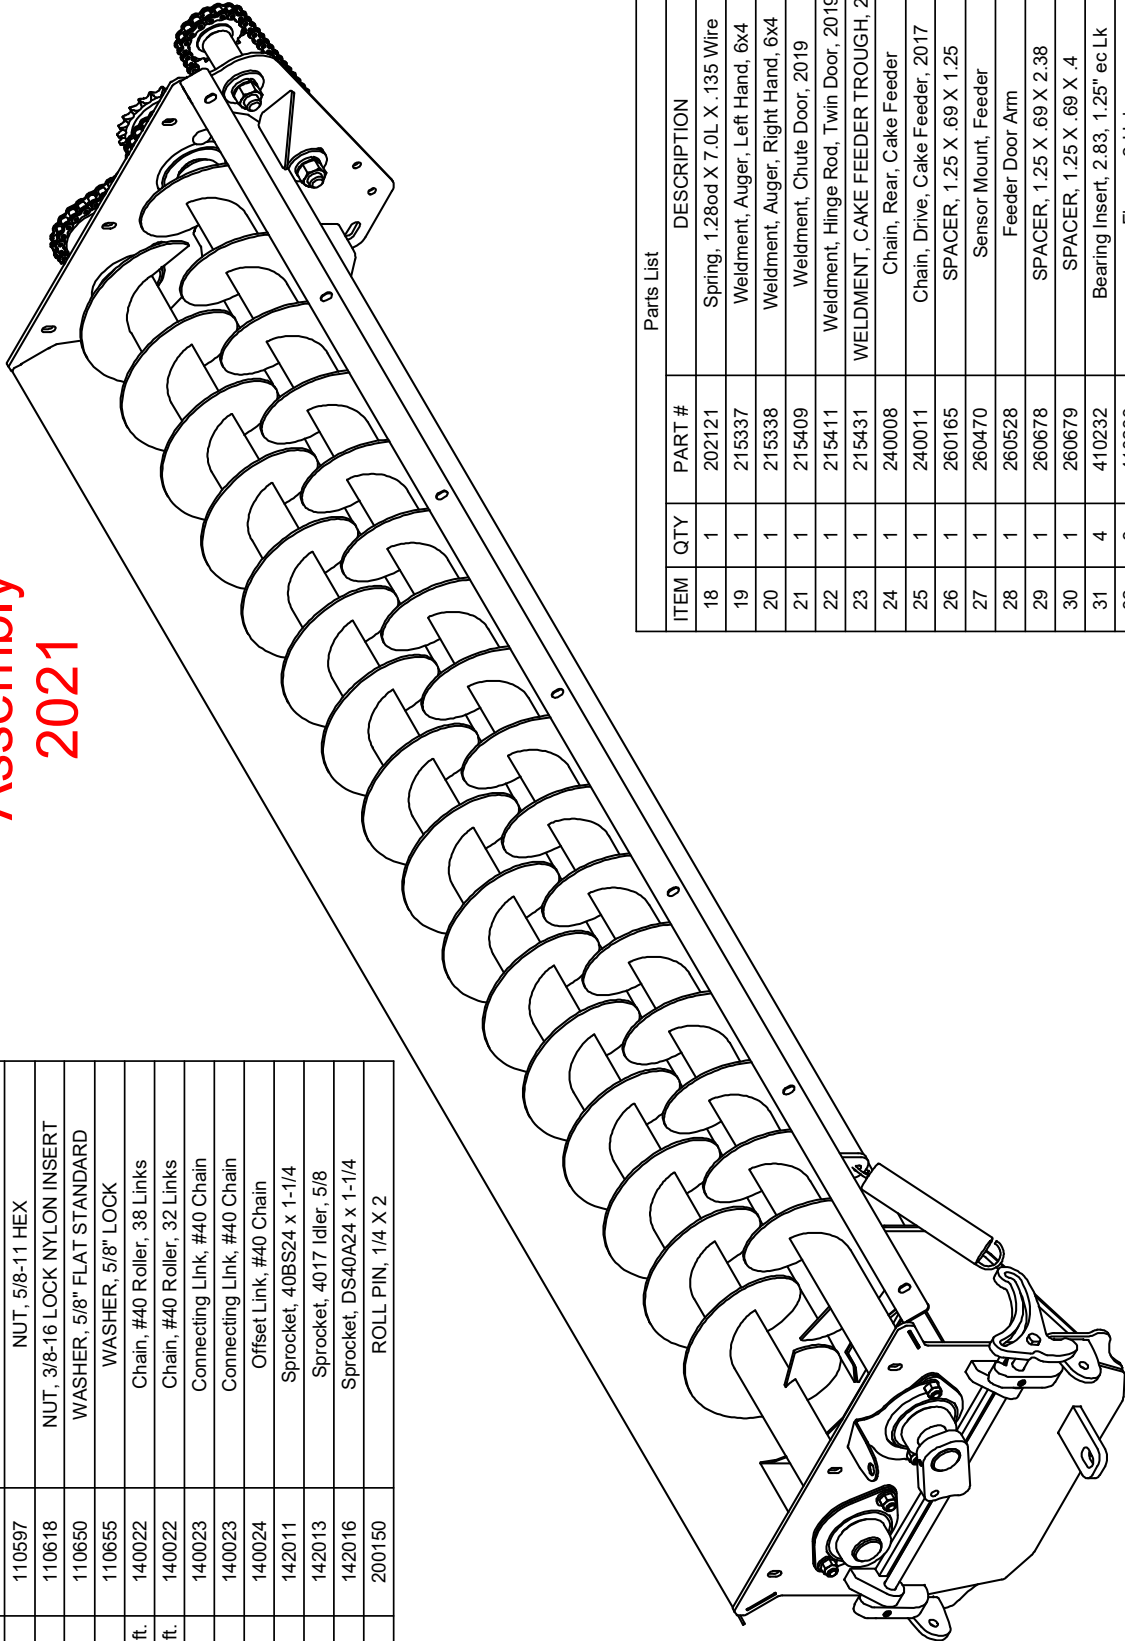


Parts List			
ITEM	QTY	PART #	DESCRIPTION
1	3 ft	100613	Lid Seal, .50 x .187 x 36
2	6	110155	WASHER, 3/8" FLAT SAE
3	8	110556	Bolt, 3/8-16 X 1 in Carriage
4	2	110562	BOLT, 5/8-11 X 4.5
5	2	110597	NUT, 5/8-11 HEX
6	8	110618	NUT, 3/8-16 LOCK NYLON INSERT
7	2	110650	WASHER, 5/8" FLAT STANDARD
8	2	110655	WASHER, 5/8" LOCK
9	3.2 ft.	140022	Chain, #40 Roller, 38 Links
10	2.7 ft.	140022	Chain, #40 Roller, 32 Links
11	1	140023	Connecting Link, #40 Chain
12	1	140023	Connecting Link, #40 Chain
13	1	140024	Offset Link, #40 Chain
14	1	142011	Sprocket, 40BS24 x 1-1/4
15	3	142013	Sprocket, 4017 Idler, 5/8
16	1	142016	Sprocket, DS40A24 x 1-1/4
17	1	200150	ROLL PIN, 1/4 X 2

Parts List			
ITEM	QTY	PART #	DESCRIPTION
18	1	202121	Spring, 1.280d X 7.0L X .135 Wire
19	1	215337	Weldment, Auger, Left Hand, 6x4
20	1	215338	Weldment, Auger, Right Hand, 6x4
21	1	215409	Weldment, Chute Door, 2019
22	1	215411	Weldment, Hinge Rod, Twin Door, 2019
23	1	215431	WELDMENT, CAKE FEEDER TROUGH, 2021
24	1	240008	Chain, Rear, Cake Feeder
25	1	240011	Chain, Drive, Cake Feeder, 2017
26	1	260165	SPACER, 1.25 X .69 X 1.25
27	1	260470	Sensor Mount, Feeder
28	1	260528	Feeder Door Arm
29	1	260678	SPACER, 1.25 X .69 X 2.38
30	1	260679	SPACER, 1.25 X .69 X .4
31	4	410232	Bearing Insert, 2.83, 1.25" ec Lk
32	8	410233	Flange, 2 Hole
33	2	510089	Key, 1/4 X 1/4 X 1.25, Under
34	2	510254	SetScrew, 5/16-18 X 0.5


11/18/2021

Auger & Trough Assembly 2021

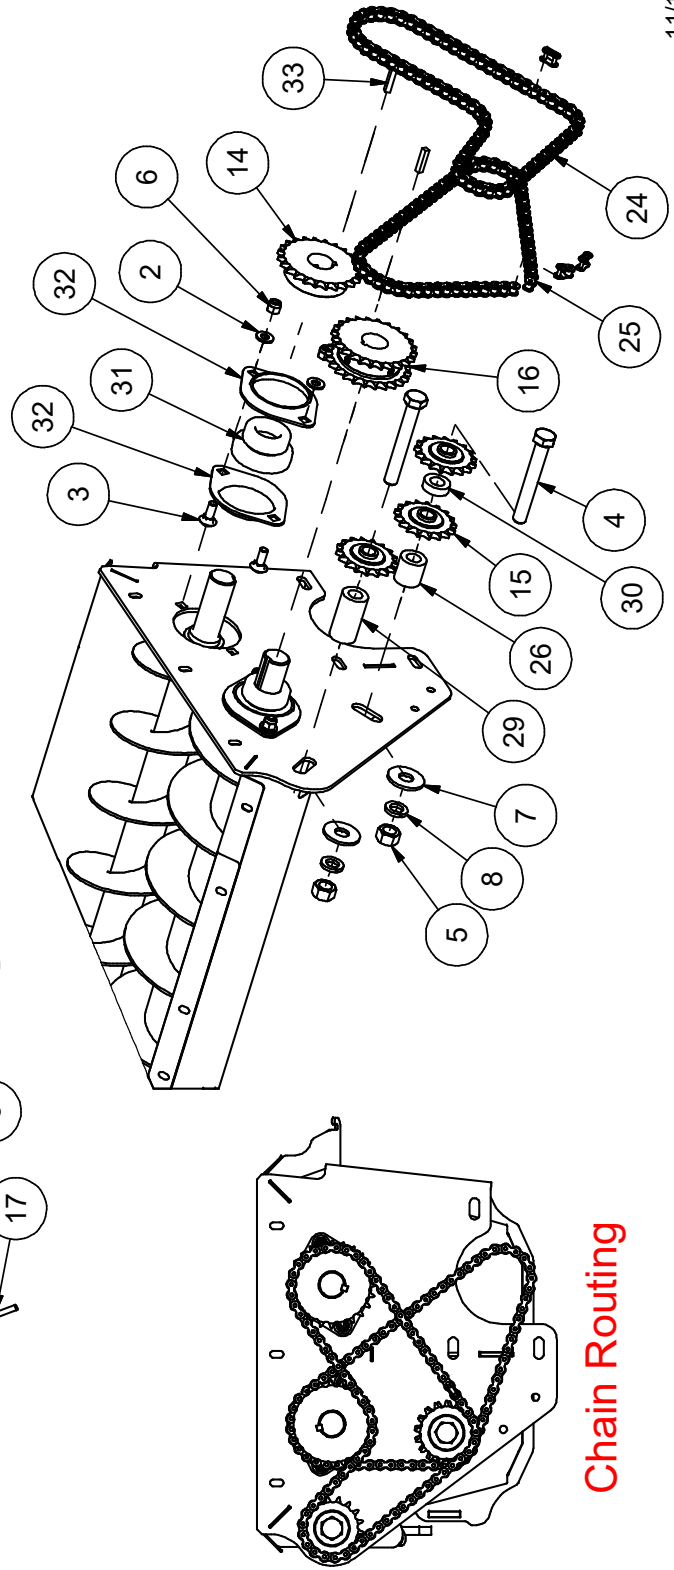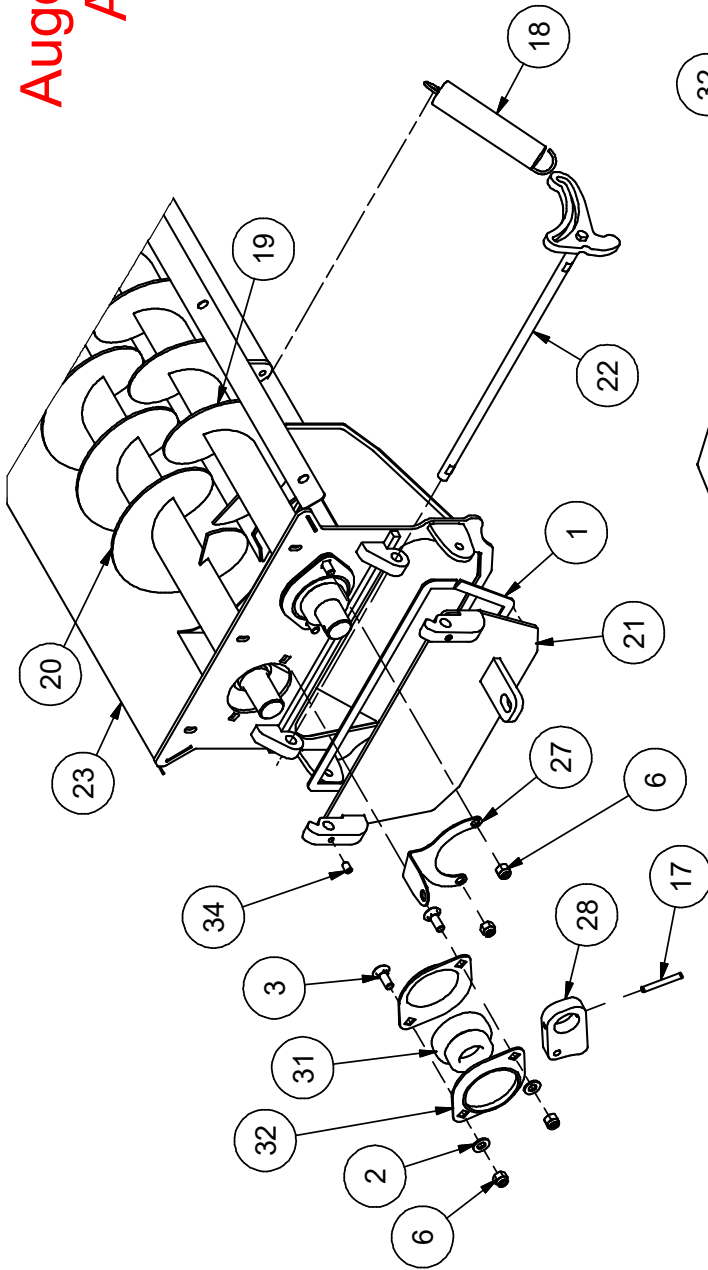




11/18/2021

Auger Orientation Beefcake Feeder

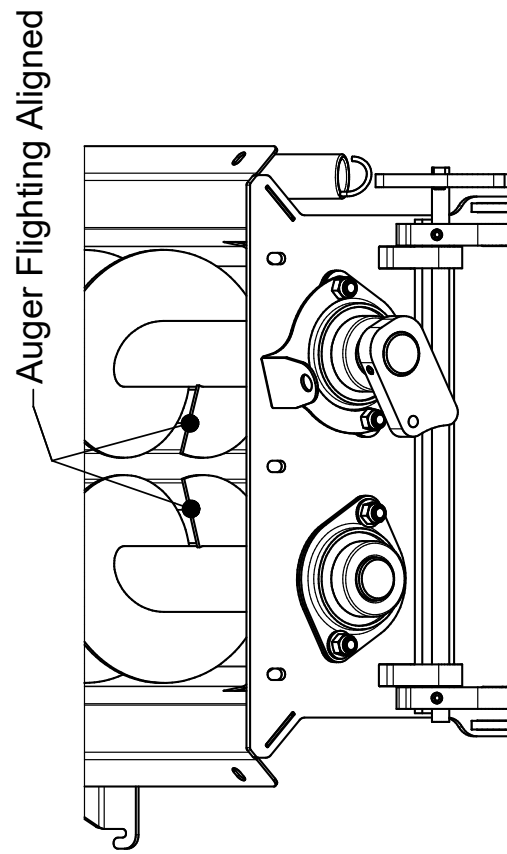

4/22/2021

Drive Chains Adjustment & Tension

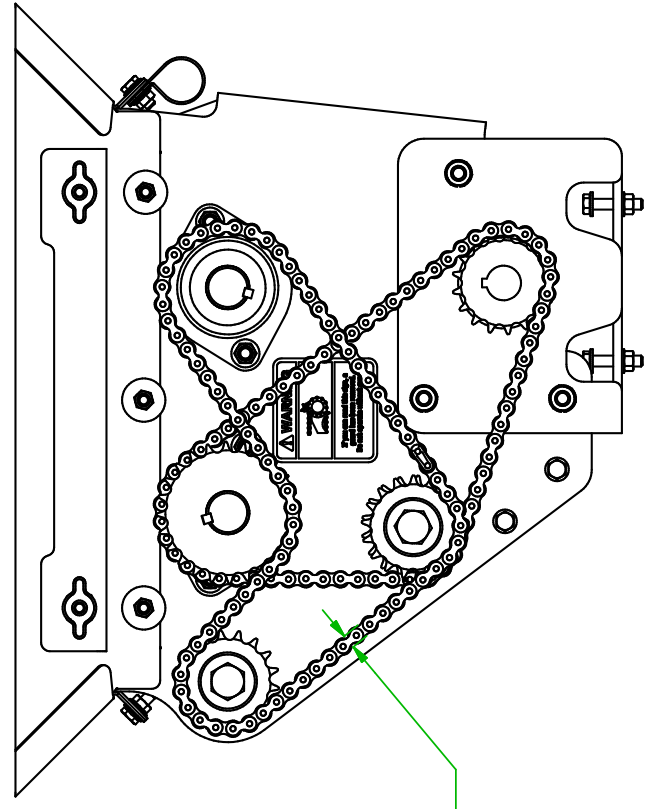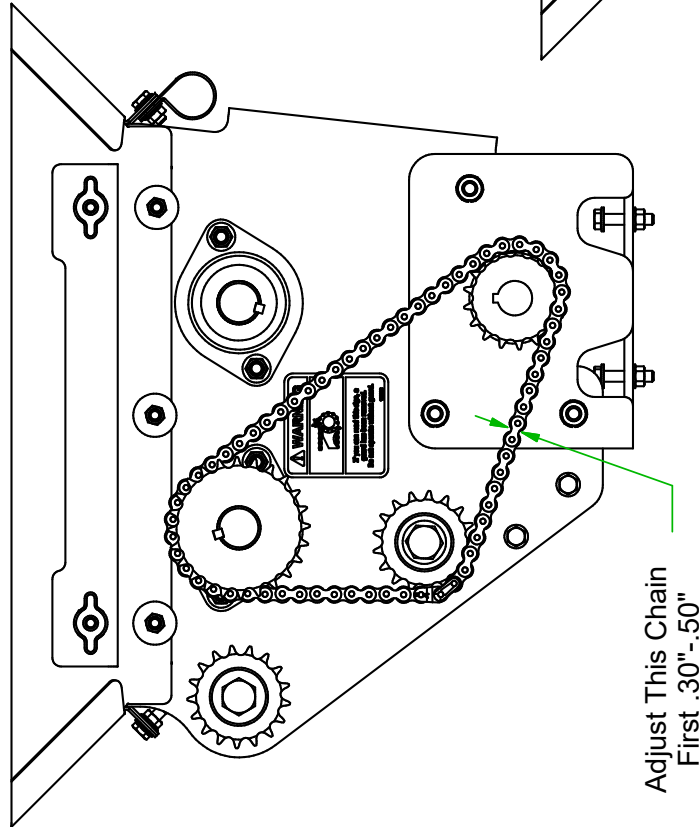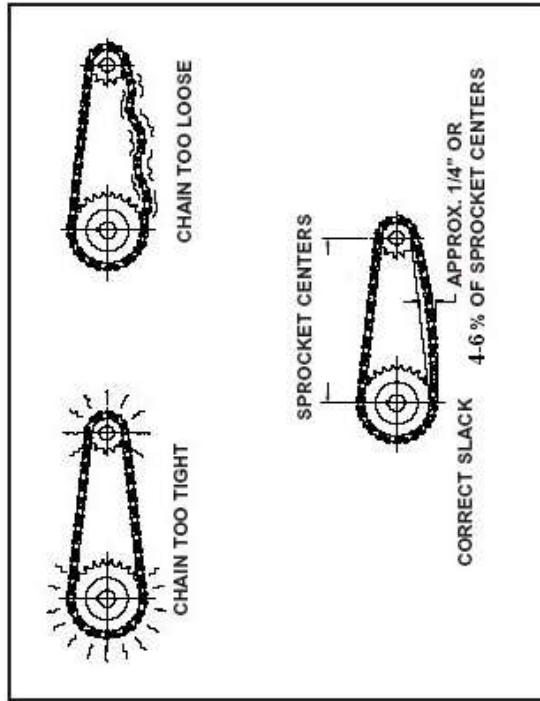

Lid & Frame Assembly

NOTE: #6 & #7 Shoulder Bolts are Different Lengths


Seal -- 100623
1000 -- 17 ft.
1500 -- 19 ft.
2000 -- 20 ft.

*9 Lid Frame #
1000 -- 215333
1500 -- 215341
2000 -- 215343

View looking up from underneath


ITEM	QTY	PART #	DESCRIPTION
1	16ft	100613	Lid Seal, .50 X .187 X 192
2	6	110020	Bolt, 5/16-18 X 0.75 In Carriage
3	2	110313	1-1/4 Sq Plug
4	10	110600	Nut, 5/16-18, Hex Lock 2 Way
5	6	110665	Washer, 5/16" Flat Standard
6	4	111279	Bolt, 3/8 X 3/8 Shoulder Shcs, Zinc
7	4	111280	Bolt, 1/2 X 5/8 Shoulder Shcs, Zinc
8	4	111281	Nut, 3/8-16 Center Lock, Gr 2, Zinc
9	1	See *	Weldment, Lid Frame
10	1	215334	Weldment, Feeder Lid
11	1	215475	Weldment, Lid Hinge W/ Updated Holes
12	2	260947	Lid Hinge W/ Updated Holes, Short
13	2	260948	Lid Hinge W/ Updated Holes, Side Mount

Lift Handle & Latch

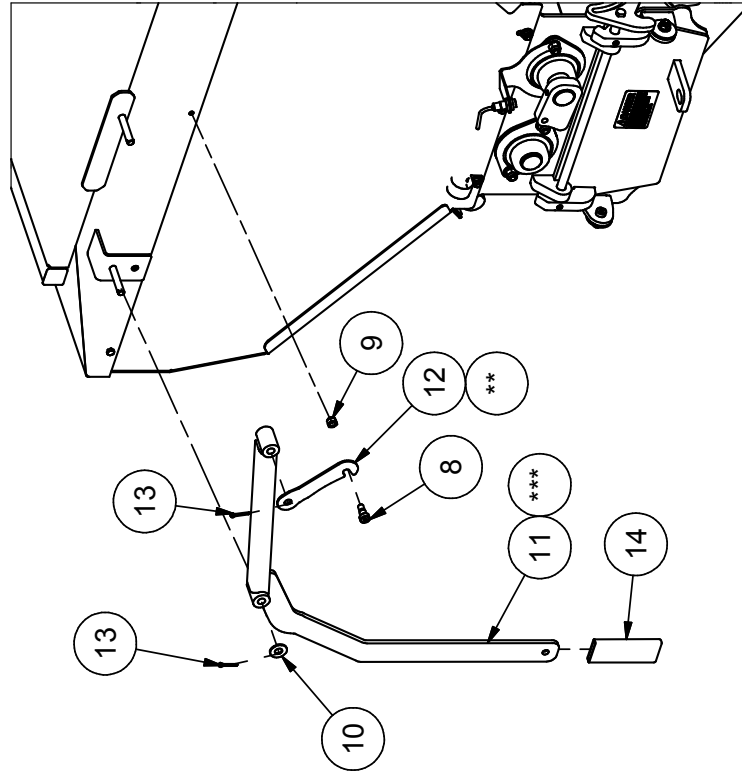

Parts List			DESCRIPTION
ITEM	QTY	PART #	
8	1	110439	BOLT, 3/8 X 3/8 SHOULDER SHCS
9	1	110603	NUT, 5/16-18 LOCK (NYLON)
10	1	110676	WASHER, 3/8" FLAT STANDARD
11	1	215318	Weldment, Lid Lift Bar, External, 1000 & 1500
***	1	215346	Weldment, Lid Lift Bar, External, 2000
12	1	260549	Lid Latch, 1500 & 2000
**	1	260529	Lid Latch, 1000
13	2	510249	COTTER PIN, 1/8 X 0.75
14	1	910044	COVER, VINYL .25 X 1.5 X 4 GRIP


Drive Shield 2017

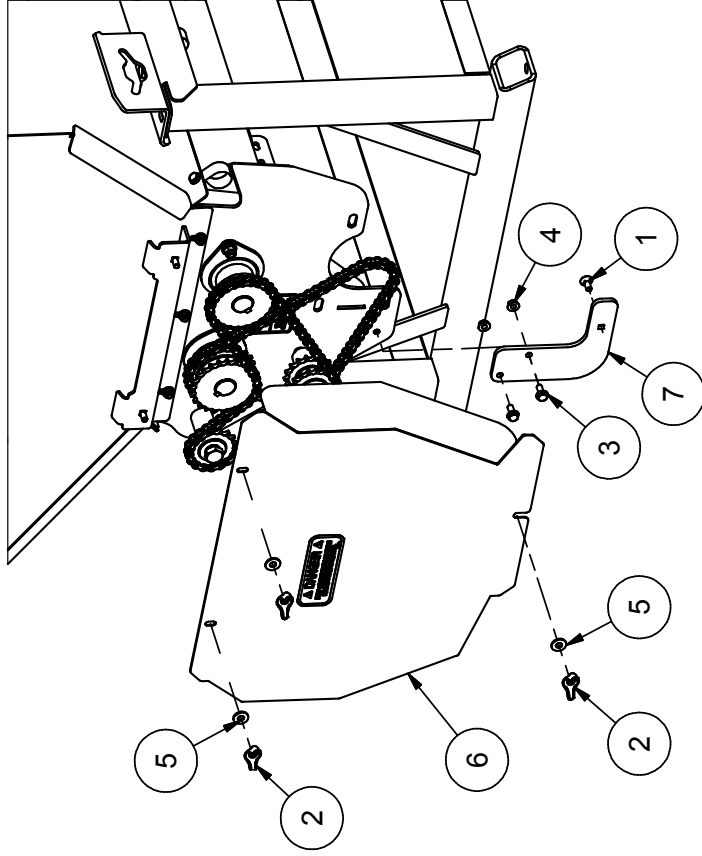


Parts List			DESCRIPTION
ITEM	QTY	PART #	
1	1	110020	Bolt, 5/16-18 X 0.75 in Carriage
2	3	110327	NUT, 5/16-18 WING
3	2	110444	BOLT, 5/16-18 X 0.75, WIZ FLANGE
4	2	110606	NUT, 5/16-18 WIZ FLANGE
5	3	110665	WASHER, 5/16" FLAT STANDARD
6	1	215379	Weldment, Shield, Feeder, 2017
7	1	260670	Shield Support

2/20/2017

Chute Extension
Assembly
2017

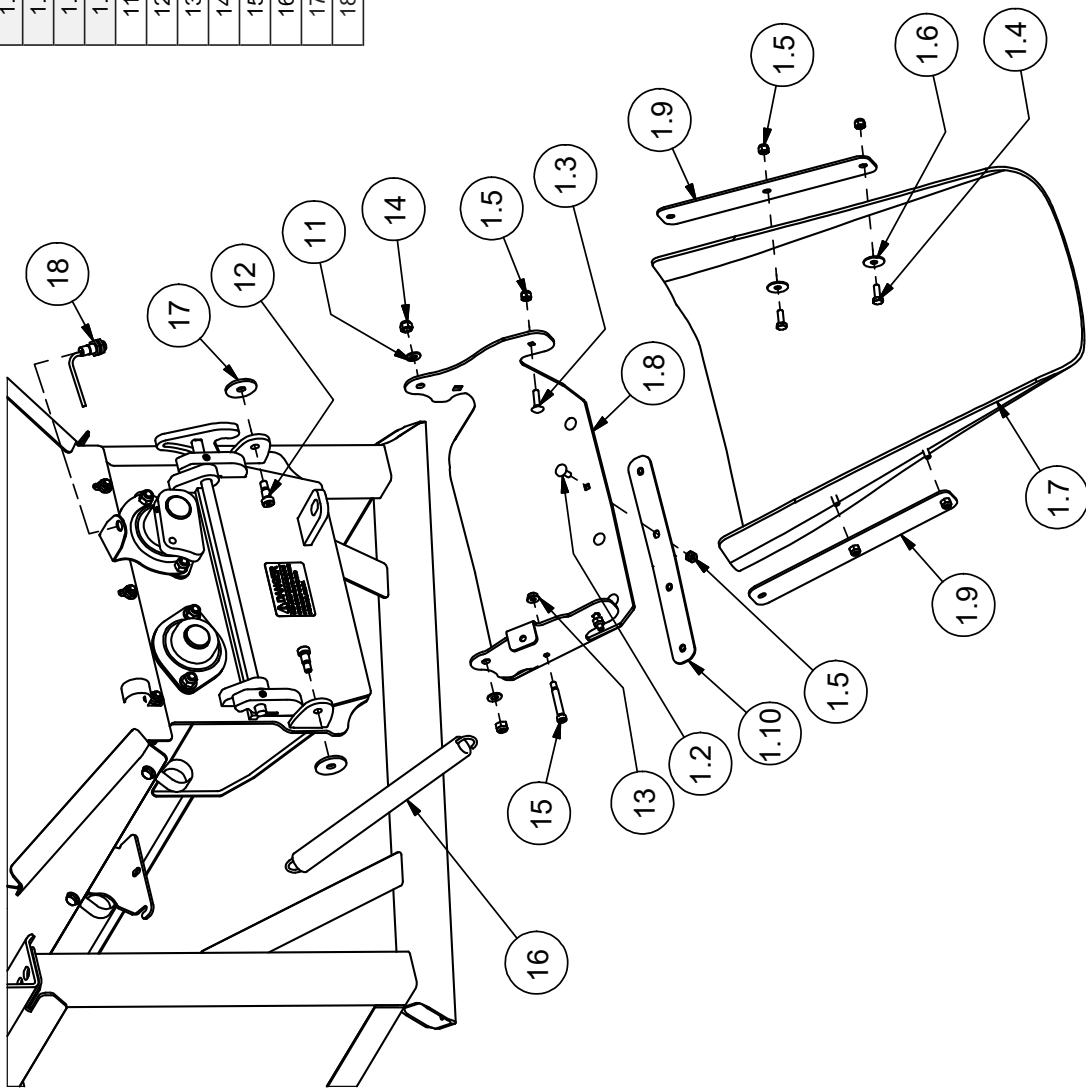

Proximity
Sensor
Part #235027

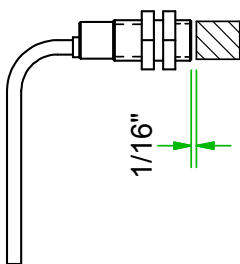


ITEM	QTY	PART #	DESCRIPTION
1	1	275006	Kit, Chute Extension
1.2	4	110154	Bolt, 1/4-20 X 0.75 In Carriage
1.3	2	110326	Bolt, 1/4-20 X 1 In Carriage
1.4	4	110561	Bolt, 1/4-20 X .75
1.5	10	110630	Nut, 1/4-20 Lock (Nylon Insert)
1.6	4	111033	Washer, 1/4" X 1" Od, Plain
1.7	1	260473	Rubber Chute
1.8	1	260534	Chute Extension
1.9	2	260536	Chute Extension, Side Support
1.10	1	260537	Chute Extension, Doubler Plate
11	2	110069	Washer, 5/16" Flat Sae
12	2	110289	Bolt, 3/8 X 1/2 Shoulder Shcs
13	1	110290	Nut, 1/4-20 W/iz Flange
14	2	110603	Nut, 5/16-18 Lock (Nylon)
15	1	110767	Bolt, 5/16 X 1.5 Shoulder Shcs
16	1	202088	Spring, 1.06od X 12l X .135 Wire
17	2	211747	Friction Washer 1.5"
18	1	235027	Sensor, Proximity, With Plug

Flatbed Model #	Standard Dummy Arm	Cake Feeder Dummy Arms					
		1000		1500		2000	
		Front Half	Back Half	Front Half	Back Half	Front Half	Back Half
675	215150	215353	215354	NA	NA	NA	NA
676	215249	215353	215356	215355	215354	NA	NA
677	215191	215353	215357	215355	215356	NA	NA
679	215208	215353	215358	215355	215357	215355	215356
682	215145	215359	215357	215360	215356	NA	NA
684	215193	215359	215358	215360	215357	215360	215356
687	215198	NA	NA	215360	215361	215360	215361
688	215200	NA	NA	215360	215362	215360	215362
778	215160	215363	215364	NA	NA	NA	NA
776	215257	215363	215365	215367	215366	NA	NA
782	215158	215363	215368	215367	215369	NA	NA
784	215202	215363	215370	215367	215371	215367	215372
787	215204	NA	NA	215367	215373	215367	215373
788	215206	NA	NA	215367	215374	215367	215374




Decals Must Be
Purchased Separately

Decals	
Model #	Part #
675	202095
676	202096
677	202097
679	202098
682	202099
684	202100
687	202101
688	202102
778	202105
776	202104
782	202106
784	202107
787	202108
788	202109


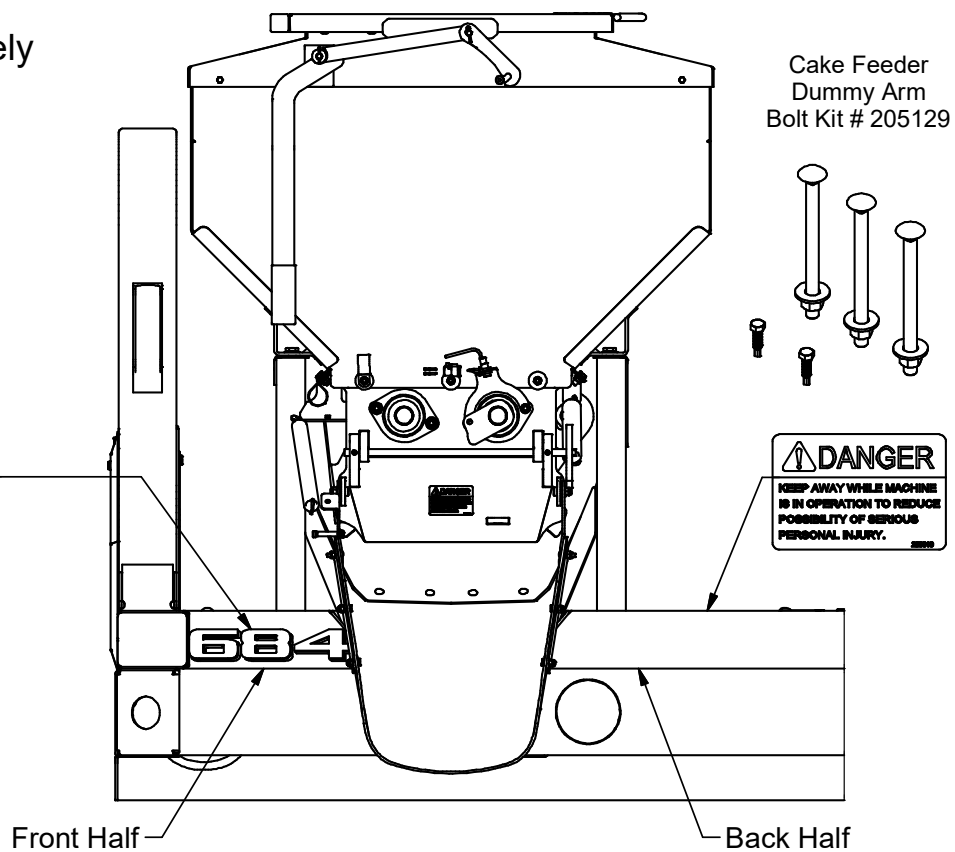


6/6/2018

Decal Page
DewEze BEEFCAKE

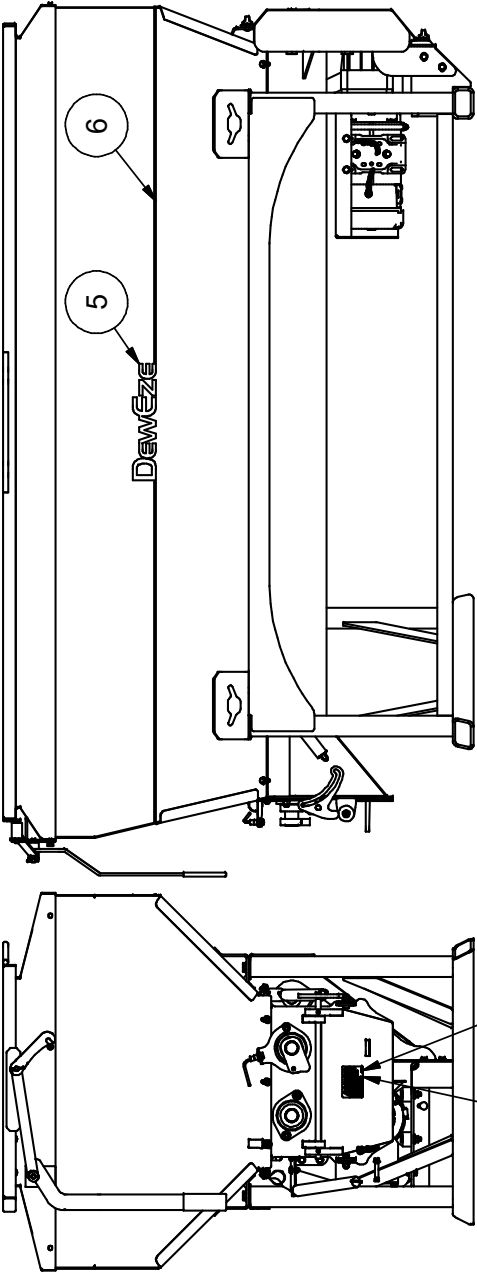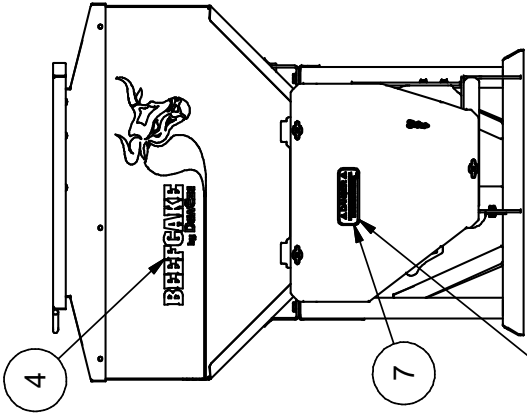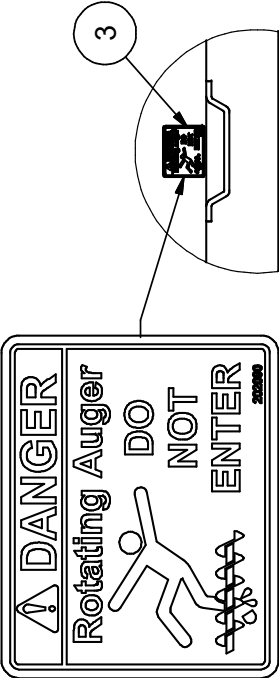

Parts List			
ITEM	QTY	PART #	DESCRIPTION
1	1	160002	Decal, Guard Removed, Graphic
2	1	200010	DANGER DECAL
3	1	202090	Decal, Danger, Rotating Auger
4	1	202091	Decal, Beefcake & Bull 21.87 X 8.75
5	1	202092	Decal, DewEze, 11.5 X 1.8
6	11.25'	202093	Decal, Pin stripe
7	1	500038	Decal, Danger Keep Covers In Place

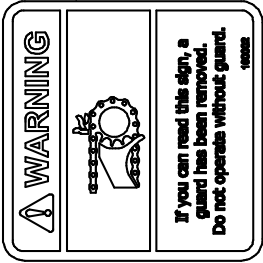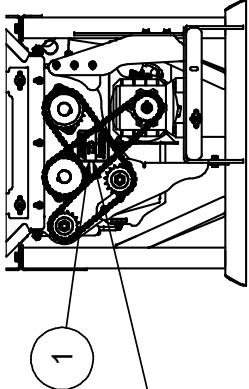


Beefcake

27


Electric Drive 2021

ELECTRIC DRIVE KIT: 205374		
ITEM	QTY	DESCRIPTION
1	8	Washer, 5/16" Flat Sae
2	4	Washer, 3/8" Flat Sae
3	2	Nut, 5/16-18 U-Type .75l
4	4	Bolt, 5/16-18 X 1-1/2
5	4	Bolt, 3/8-16 X 1.0
6	4	Bolt, 5/16-18 X 0.75, Wlz Flange
7	4	Bolt, 7/16-14 X 1.25
8	2	Nut, 5/16-18, Unitorque Lock
9	4	Nut, 5/16-18
10	3	Nut, 7/16-14
11	2	Washer, 5/16" Flat Standard
12	3	Washer, 7/16" Flat Standard
13	3	Washer, 7/16" Lock
14	4	Washer, 3/8" Lock
15	1	Terminal Protector, Red, 1-2ga
16	1	Terminal, Ring, 16-14, 1/4, Heat Shrink
17	1	Flyback Diode Assembly, Cake Feeder
18	1	Sprocket, 40bs17 X 1.0
19	1	Bracket, Gear Reducer
20	1	Battery Cable Qc, 2ga Twin Lead, 30"
21	1	Solenoid, 4 Post, 12vdc Contactor
22	1	Motor, 12v Dc, 3/4 Hp
23	1	Harness, Cake Feeder, Electric
24	1	Gear Reducer, Inline, 30.55:1
25	1	Motor Shield, Electric, 2017
26	1	Cable, 4 Ga. 9", Red
27	1	Clamp, Hose #88 6.00"

Brushes Springs & Retainers		
ITEM	QTY	DESCRIPTION
1	2	Clip, Brush Leeson
2	2	Spring, Brush Leeson
3	2	Brush, Motor Leeson

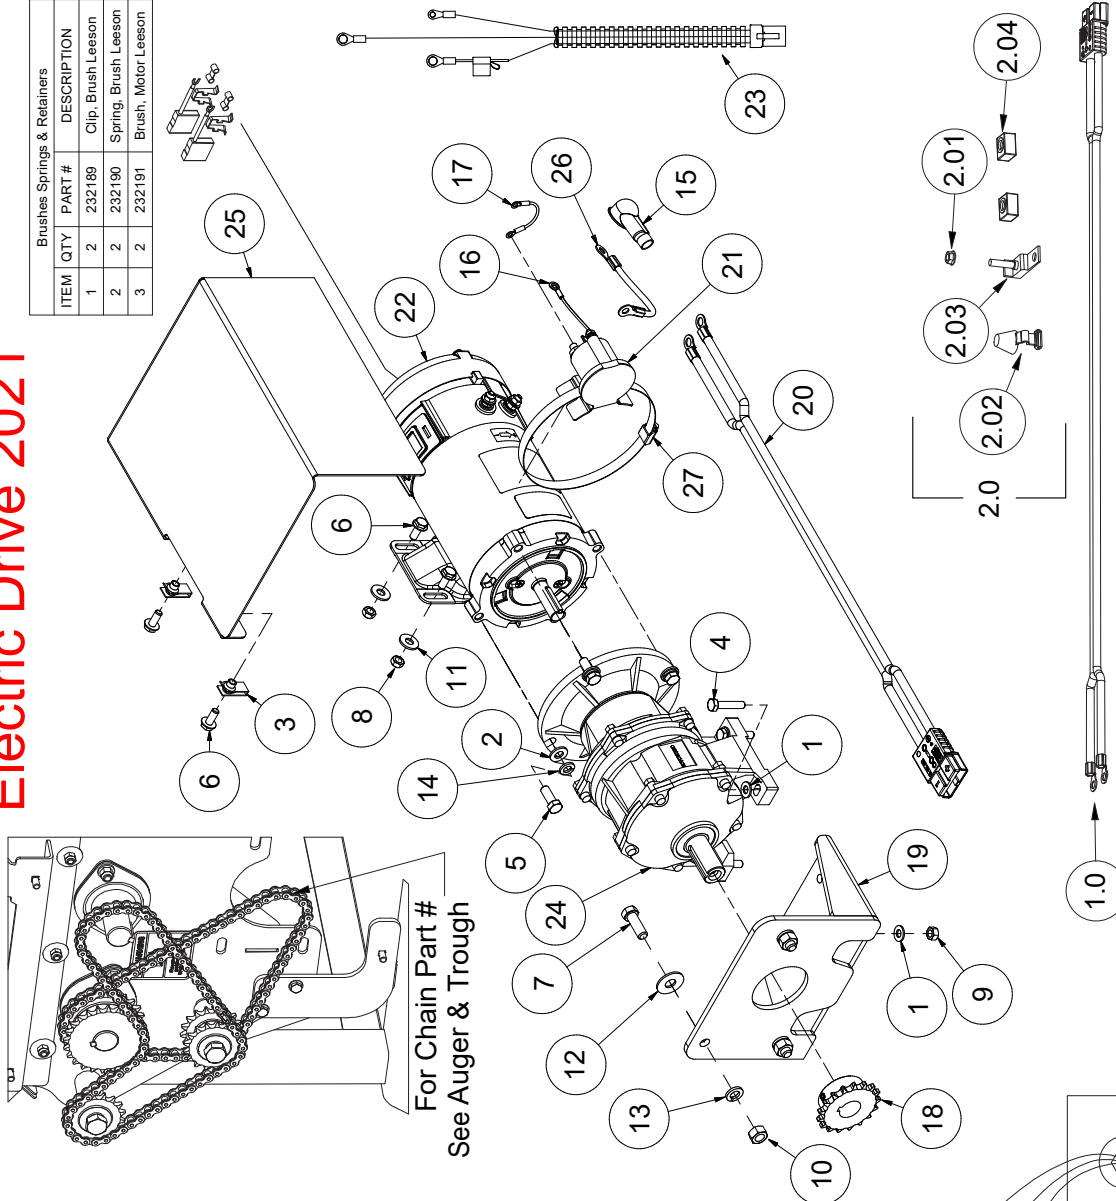


For Chain Part #
See Auger & Trough

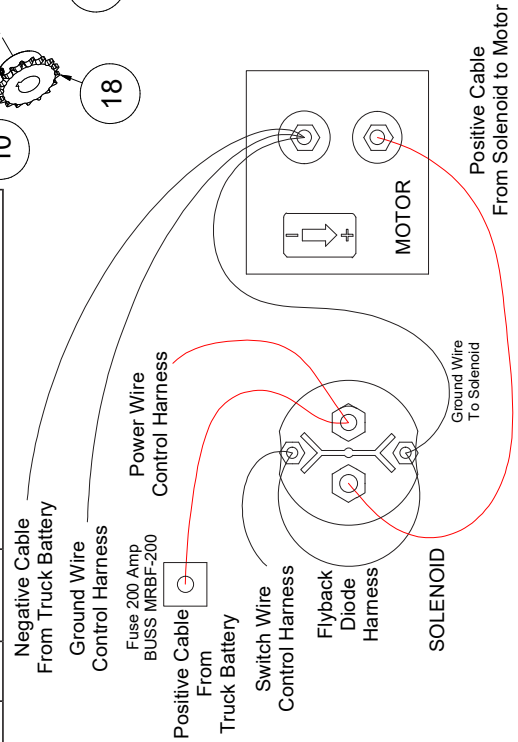


ITEM	QTY	PART #	DESCRIPTION
1.0	1	230168	Battery Cable Qc, 2ga Twin Lead, 216"
2.0	1	205137	Kit, Beefcake Fuse And Holder
2.01	1	110141	Nut, M8 X 1.25 Wzflange
2.02	2	132092	Fuse Cover, Buss C/cover-1r
2.03	1	132093	Fuse Holder, Buss C/cover-M8xsp
2.04	1	132094	Fuse 200 Amp, Buss Mrbf-200

Electric Drive 2017

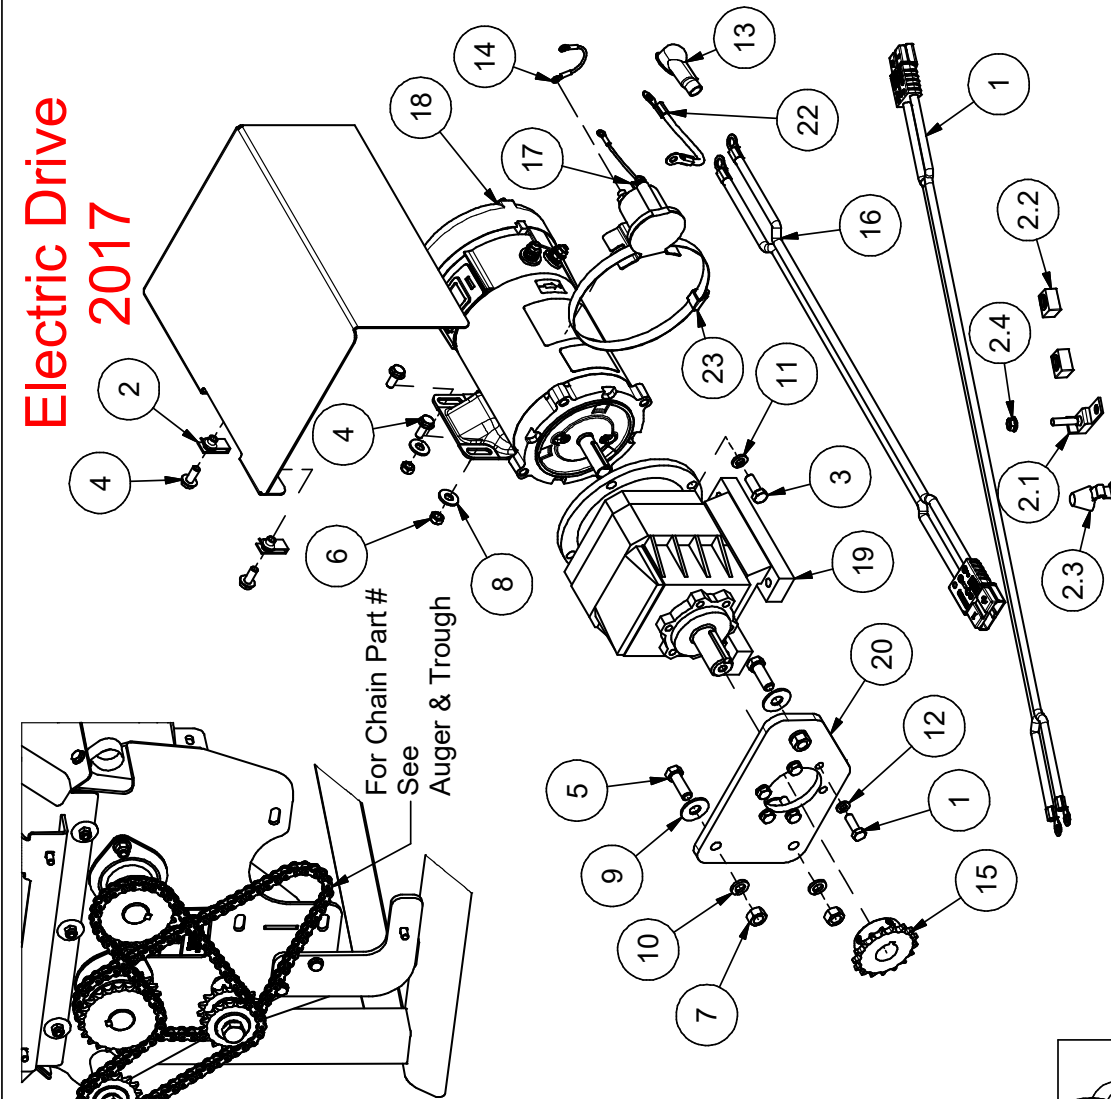

For Chain Part #
See
Auger & Trough

ITEM	QTY	PART #	DESCRIPTION
1	5	110260	BOLT, M8x1.25 x 25 Gr 10.9
2	2	110319	NUT, 5/16-18 U-TYPE .75L
3	2	110420	BOLT, 3/8-16 X 1.0
4	4	110444	BOLT, 5/16-18 X 0.75, WIZ FLANGE
5	3	110539	BOLT, 7/16-14 X 1.25
6	2	110600	NUT, 5/16-18, UNITORQUE LOCK
7	3	110641	NUT, 7/16-14
8	2	110665	WASHER, 5/16" FLAT STANDARD
9	3	110670	WASHER, 7/16" FLAT STANDARD
10	3	110671	WASHER, 7/16" LOCK
11	2	110672	WASHER, 3/8" LOCK
12	5	110674	WASHER, 5/16" LOCK
13	1	130068	Terminal Protector, Red, 1-2ga
14	1	132163	Flyback Diode Assembly, Cake Feeder
15	1	142017	Sprocket, 40BS17 x 1.0
16	1	230169	Battery Cable QC, 2ga Twin Lead, 30"
17	1	232103	Solenoid, 4 Post, 12VDC Contactor
18	1	232110	Motor, 12V DC, 3/4 HP
19	1	242006	Gear Reducer, Inline, 29.4:1
20	1	260668	Drive Mount, Electric
21	1	260674	Motor Shield, Electric, 2017
22	1	532084	Cable, 4 ga, 9", Red
23	1	940028	CLAMP, HOSE #88 6.00"

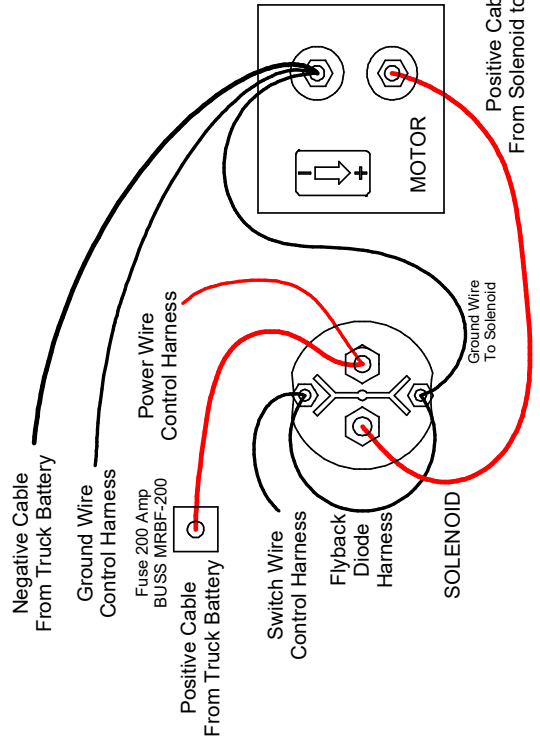


Wiring Diagram Labels:

- Negative Cable From Truck Battery
- Ground Wire Control Harness
- Power Wire Control Harness
- Fuse 200 Amp BUSS MRBF-200
- Positive Cable From Truck Battery
- Switch Wire Control Harness
- Flyback Diode Harness
- SOLENOID
- MOTOR
- Ground Wire To Solenoid
- Positive Cable From Solenoid to Motor



ITEM	QTY	PART #	DESCRIPTION
1	1	230168	Battery Cable QC, 2ga Twin Lead, 216"
2	1	205137	Kit, BeefCake Fuse and Holder
2.1	1	132093	FUSE HOLDER, BUSS CFBAR1-M8XSP
2.2	2	132094	FUSE 200 AMP, BUSS MRBF-200
2.3	1	132092	FUSE COVER, BUSS CFCOVER-1R
2.4	1	110141	NUT, M8 X 1.25 WIZFLANGE

3/5/2019



NOTE: All 3 DIP Switches Set to ON

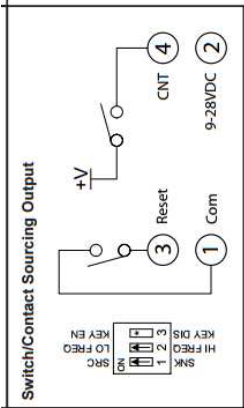

Hand Control
From Backside

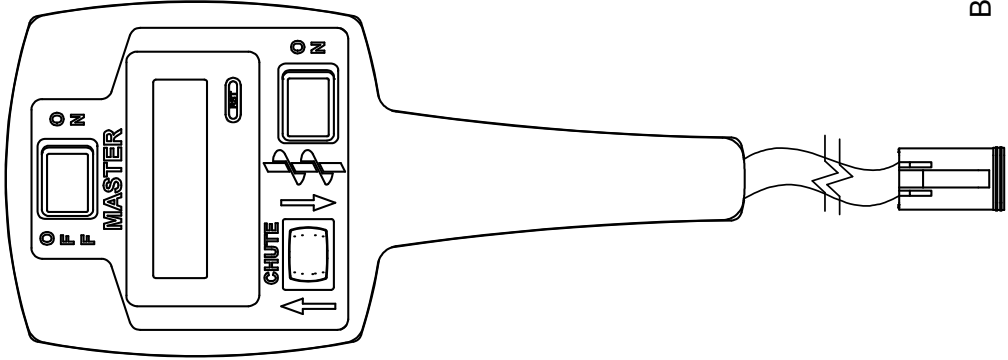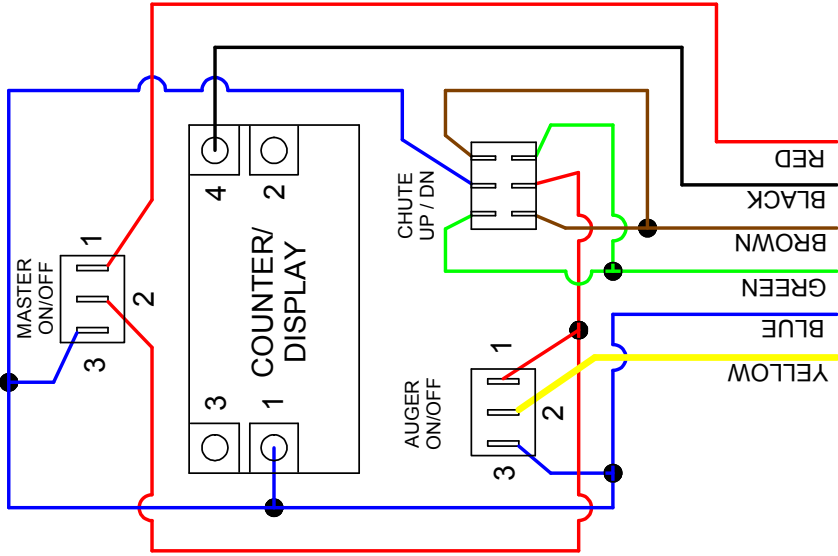

132132
3P SPST ON-OFF
ILLUM

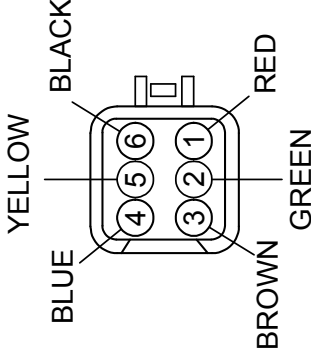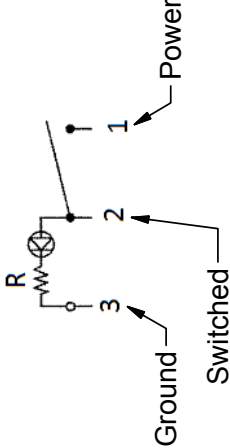

Hand Control Assy, Part #150047

ITEM	QTY	PART #	DESCRIPTION
1	1	132129	Counter, Display
2	1	132131	Switch, Rocker Min. DPDT, (On)-OFF-(ON)
3	2	132132	Switch, Rocker Min. SPST, On-OFF, Illum.
4	1	150001	TOP HOUSING, HAND CONTROL
5	1	150003	BOTTOM HOUSING, HAND CONTROL
6	4	150013	SCREW, #6 X 1/4 TYPE F
7	2	150014	SCREW, #6 X 1 SHEETMETAL
8	2	150015	SCREW, #6 X 1.5 SHEETMETAL
9	1	150046	Switch Plate, Feeder, Hand Control
10	1	202089	Decal, Cake Feeder Hand Control
11	1	230164	Cable, Hand Control, Feeder

OLD COUNTER STYLE (COUNTER OBSOLETE)

NOTE: DIP Switch 1 OFF DIP Switch 2 ON

Current Sourcing Output

Input A
Input B
Input C
Input D
Input E
Input F
Input G
Input H
Input I
Input J
Input K
Input L
Input M
Input N
Input O
Input P
Input Q
Input R
Input S
Input T
Input U
Input V
Input W
Input X
Input Y
Input Z
Input AA
Input AB
Input AC
Input AD
Input AE
Input AF
Input AG
Input AH
Input AI
Input AJ
Input AK
Input AL
Input AM
Input AN
Input AO
Input AP
Input AQ
Input AR
Input AS
Input AT
Input AU
Input AV
Input AW
Input AX
Input AY
Input AZ
Input BA
Input BB
Input BC
Input BD
Input BE
Input BF
Input BG
Input BH
Input BI
Input BJ
Input BK
Input BL
Input BM
Input BN
Input BO
Input BP
Input BQ
Input BR
Input BS
Input BT
Input BU
Input BV
Input BW
Input BX
Input BY
Input BZ
Input CA
Input CB
Input CC
Input CD
Input CE
Input CF
Input CG
Input CH
Input CI
Input CJ
Input CK
Input CL
Input CM
Input CN
Input CO
Input CP
Input CQ
Input CR
Input CS
Input CT
Input CU
Input CV
Input CW
Input CX
Input CY
Input CZ
Input DA
Input DB
Input DC
Input DD
Input DE
Input DF
Input DG
Input DH
Input DI
Input DJ
Input DK
Input DL
Input DM
Input DN
Input DO
Input DP
Input DQ
Input DR
Input DS
Input DT
Input DU
Input DV
Input DW
Input DX
Input DY
Input DZ
Input EA
Input EB
Input EC
Input ED
Input EE
Input EF
Input EG
Input EH
Input EI
Input EJ
Input EK
Input EL
Input EM
Input EN
Input EO
Input EP
Input EQ
Input ER
Input ES
Input ET
Input EU
Input EV
Input EW
Input EX
Input EY
Input EZ
Input FA
Input FB
Input FC
Input FD
Input FE
Input FF
Input FG
Input FH
Input FI
Input FJ
Input FK
Input FL
Input FM
Input FN
Input FO
Input FP
Input FQ
Input FR
Input FS
Input FT
Input FU
Input FV
Input FW
Input FX
Input FY
Input FZ
Input GA
Input GB
Input GC
Input GD
Input GE
Input GF
Input GG
Input GH
Input GI
Input GJ
Input GK
Input GL
Input GM
Input GN
Input GO
Input GP
Input GQ
Input GR
Input GS
Input GT
Input GU
Input GV
Input GW
Input GX
Input GY
Input GZ
Input HA
Input HB
Input HC
Input HD
Input HE
Input HF
Input HG
Input HH
Input HI
Input HJ
Input HK
Input HL
Input HM
Input HN
Input HO
Input HP
Input HQ
Input HR
Input HS
Input HT
Input HU
Input HV
Input HW
Input HX
Input HY
Input HZ
Input IA
Input IB
Input IC
Input ID
Input IE
Input IF
Input IG
Input IH
Input II
Input IJ
Input IK
Input IL
Input IM
Input IN
Input IO
Input IP
Input IQ
Input IR
Input IS
Input IT
Input IU
Input IV
Input IW
Input IX
Input IY
Input IZ
Input JA
Input JB
Input JC
Input JD
Input JE
Input JF
Input JG
Input JH
Input JI
Input JJ
Input JK
Input JL
Input JM
Input JN
Input JO
Input JP
Input JQ
Input JR
Input JS
Input JT
Input JU
Input JV
Input JW
Input JX
Input JY
Input JZ
Input KA
Input KB
Input KC
Input KD
Input KE
Input KF
Input KG
Input KH
Input KI
Input KJ
Input KK
Input KL
Input KM
Input KN
Input KO
Input KP
Input KQ
Input KR
Input KS
Input KT
Input KU
Input KV
Input KW
Input KX
Input KY
Input KZ
Input LA
Input LB
Input LC
Input LD
Input LE
Input LF
Input LG
Input LH
Input LI
Input LJ
Input LK
Input LL
Input LM
Input LN
Input LO
Input LP
Input LQ
Input LR
Input LS
Input LT
Input LU
Input LV
Input LW
Input LX
Input LY
Input LZ
Input MA
Input MB
Input MC
Input MD
Input ME
Input MF
Input MG
Input MH
Input MI
Input MJ
Input MK
Input ML
Input MM
Input MN
Input MO
Input MP
Input MQ
Input MR
Input MS
Input MT
Input MU
Input MV
Input MW
Input MX
Input MY
Input MZ
Input NA
Input NB
Input NC
Input ND
Input NE
Input NF
Input NG
Input NH
Input NI
Input NJ
Input NK
Input NL
Input NM
Input NN
Input NO
Input NP
Input NQ
Input NR
Input NS
Input NT
Input NU
Input NV
Input NW
Input NX
Input NY
Input NZ
Input OA
Input OB
Input OC
Input OD
Input OE
Input OF
Input OG
Input OH
Input OI
Input OJ
Input OK
Input OL
Input OM
Input ON
Input OO
Input OP
Input OQ
Input OR
Input OS
Input OT
Input OU
Input OV
Input OW
Input OX
Input OY
Input OZ
Input PA
Input PB
Input PC
Input PD
Input PE
Input PF
Input PG
Input PH
Input PI
Input PJ
Input PK
Input PL
Input PM
Input PN
Input PO
Input PP
Input PQ
Input PR
Input PS
Input PT
Input PU
Input PV
Input PW
Input PX
Input PY
Input PZ
Input QA
Input QB
Input QC
Input QD
Input QE
Input QF
Input QG
Input QH
Input QI
Input QJ
Input QK
Input QL
Input QM
Input QN
Input QO
Input QP
Input QQ
Input QR
Input QS
Input QT
Input QU
Input QV
Input QW
Input QX
Input QY
Input QZ
Input RA
Input RB
Input RC
Input RD
Input RE
Input RF
Input RG
Input RH
Input RI
Input RJ
Input RK
Input RL
Input RM
Input RN
Input RO
Input RP
Input RQ
Input RR
Input RS
Input RT
Input RU
Input RV
Input RW
Input RX
Input RY
Input RZ
Input SA
Input SB
Input SC
Input SD
Input SE
Input SF
Input SG
Input SH
Input SI
Input SJ
Input SK
Input SL
Input SM
Input SN
Input SO
Input SP
Input SQ
Input SR
Input SS
Input ST
Input SU
Input SV
Input SW
Input SX
Input SY
Input SZ
Input TA
Input TB
Input TC
Input TD
Input TE
Input TF
Input TG
Input TH
Input TI
Input TJ
Input TK
Input TL
Input TM
Input TN
Input TO
Input TP
Input TQ
Input TR
Input TS
Input TT
Input TU
Input TV
Input TW
Input TX
Input TY
Input TZ
Input UA
Input UB
Input UC
Input UD
Input UE
Input UF
Input UG
Input UH
Input UI
Input UJ
Input UK
Input UL
Input UM
Input UN
Input UO
Input UP
Input UQ
Input UR
Input US
Input UT
Input UY, Input UZ, Input VA, Input VB, Input VC, Input VD, Input VE, Input VF, Input VG, Input VH, Input VI, Input VJ, Input VK, Input VL, Input VM, Input VN, Input VO, Input VP, Input VQ, Input VR, Input VS, Input VT, Input VU, Input VV, Input VW, Input VX, Input VY, Input VZ, Input WA, Input WB, Input WC, Input WD, Input WE, Input WF, Input WG, Input WH, Input WI, Input WJ, Input WK, Input WL, Input WM, Input WN, Input WO, Input WP, Input WQ, Input WR, Input WS, Input WT, Input WU, Input WV, Input WW, Input WX, Input WY, Input WZ, Input XA, Input XB, Input XC, Input XD, Input XE, Input XF, Input XG, Input XH, Input XI, Input XJ, Input XK, Input XL, Input XM, Input XN, Input XO, Input XP, Input XQ, Input XR, Input XS, Input XT, Input XU, Input XV, Input XW, Input XX, Input XY, Input XZ, Input YA, Input YB, Input YC, Input YD, Input YE, Input YF, Input YG, Input YH, Input YI, Input YJ, Input YK, Input YL, Input YM, Input YN, Input YO, Input YP, Input YQ, Input YR, Input YS, Input YT, Input YU, Input YV, Input YW, Input YX, Input YY, Input YZ, Input ZA, Input ZB, Input ZC, Input ZD, Input ZE, Input ZF, Input ZG, Input ZH, Input ZI, Input ZJ, Input ZK, Input ZL, Input ZM, Input ZN, Input ZO, Input ZP, Input ZQ, Input ZR, Input ZS, Input ZT, Input ZU, Input ZV, Input ZW, Input ZX, Input ZY, Input ZZ.

Hand Control From Backside

NEW COUNTER STYLE (CONSTANT POWER)

1000E S/N 20A56
1500E S/N 20A67
2000E S/N 20A34

Starting July 2020

Hand Control Assy, Part #150048

ITEM	QTY	PART #	DESCRIPTION
1	1	132131	Switch, Rocker Min. DPDT, (On)-OFF, (On)
2	2	132132	Switch, Rocker Min. SPST, On-OFF, lum.
3	1	132176	Counter, Display, Backlight Display
4	1	150001	TOP HOUSING, HAND CONTROL
5	1	150003	BOTTOM HOUSING, HAND CONTROL
6	4	150013	SCREW, #6 X 1/4 TYPE F
7	2	150014	SCREW, #6 X 1 SHEETMETAL
8	2	150015	SCREW, #6 X 1.5 SHEETMETAL
9	1	150046	Switch Plate, Feeder, Hand Control
10	1	202089	Decal, Cake Feeder Hand Control
11	1	230173	Cable, Hand Control, Feeder
12	1	230174	Jumper, Hand Control, Feeder

132132 3P SPST ON-OFF ILLUM

NEW = 2 BUTTON ON FACE

New displays ADD A POWER WIRE. Deweze provides a pre-made JUMPER.

132132 3P SPST ON-OFF ILLUM


NEW = 2 BUTTON ON FACE

New displays ADD A POWER WIRE. Deweze provides a pre-made JUMPER.

DewEze®



Cake Feeder Electrical Schematic

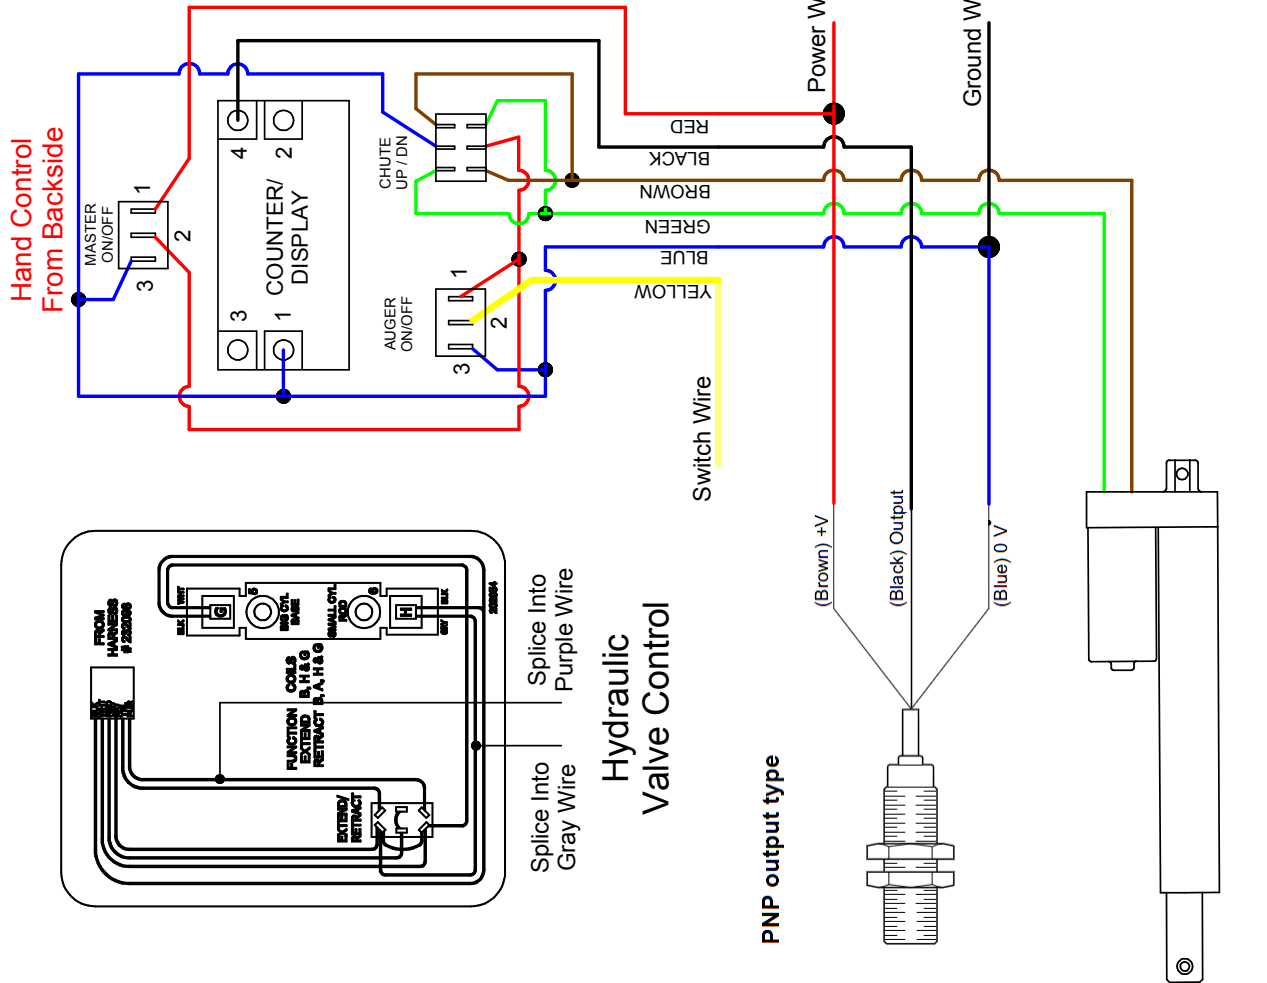


Door Operation Methods

***Note: Do not operate feeder with parts from both method one and two installed at the same time. Failure will result.


Parts for method two are installed from the factory

Method Two

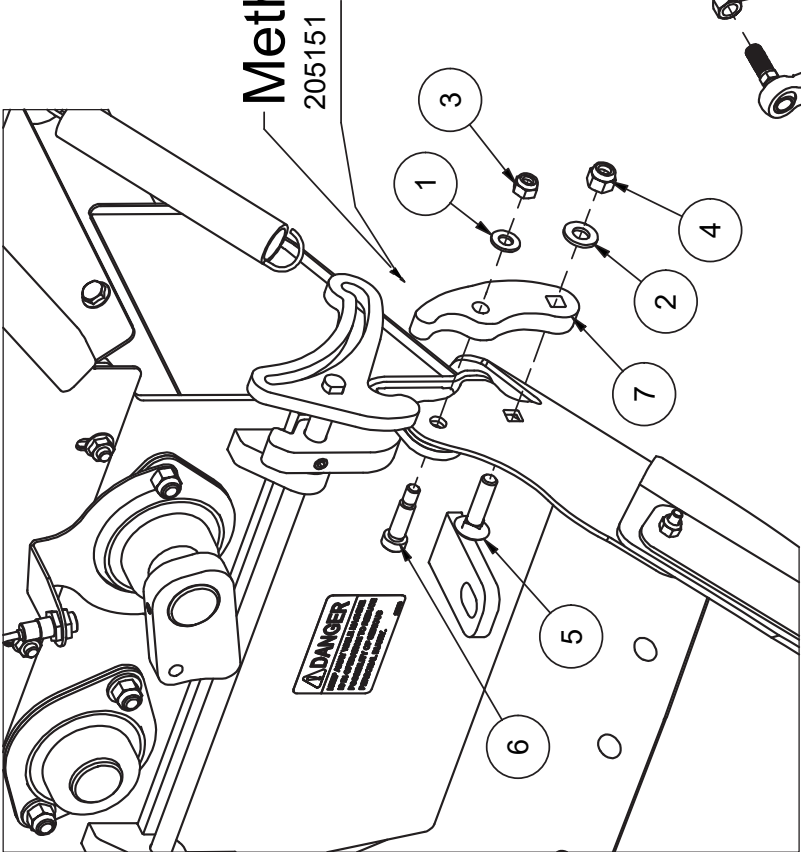

Method One


205134

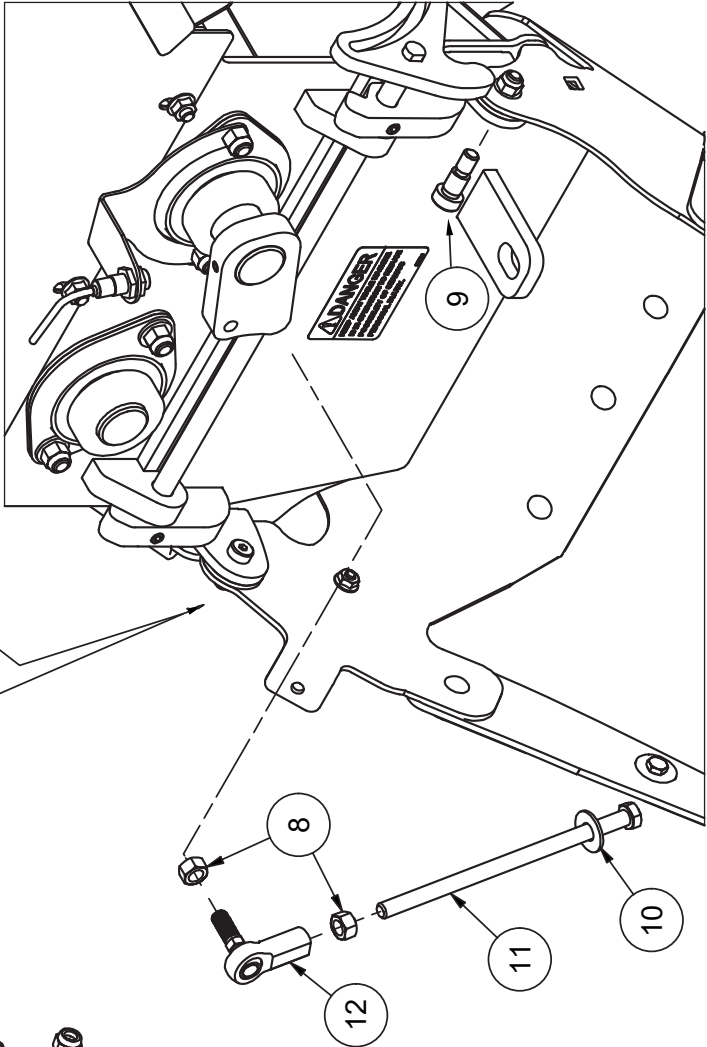


Parts List			DESCRIPTION
ITEM	QTY	PART #	
1	1	205151	Kit, BeefCake Manual Door Kicker
2	1	110069	WASHER, 5/16" FLAT SAE
3	1	110155	WASHER, 3/8" FLAT SAE
4	1	110603	NUT, 5/16-18 LOCK (NYLON)
5	1	110618	NUT, 3/8-16 LOCK NYLON INSERT
6	1	110916	Bolt, 3/8-16 X 1.5 in Carriage
7	1	111071	BOLT, 3/8 X 1.0 SHOULDER SHCS
8	2	260757	Manual Door Kicker
9	1	205134	Kit, BeefCake Ball Joint
10	1	110083	NUT, 3/8-24
11	1	110289	BOLT, 3/8 X 0.5 SHOULDER SHCS
12	1	110676	WASHER, 3/8" FLAT STANDARD
	1	111068	Bolt, 3/8-24 X 7.0
	1	142015	Ball Joint Linkage, 3/8-24 RH

Electric Actuator Option


ITEM	QTY	PART #	DESCRIPTION
	1	235029	Kit, Actuator
1	2	110290	Nut, 1/4-20 Wz Flange
2	2	110300	Cotter Pin, 3/32 X 0.75
3	2	110468	Bolt, 1/4-20 X 0.75, Wz Flange
4	2	110673	Washer, 1/4" Flat Standard
5	2	112095	Clevis Pin, Std Zp 1/4 X 1 5/8
6	1	235028	Actuator, 5.9", With Plug
7	1	270135	Tool Box Door Hinge, Outer Half
8	1	270139	Tool Box Door Hinge, Inner Half

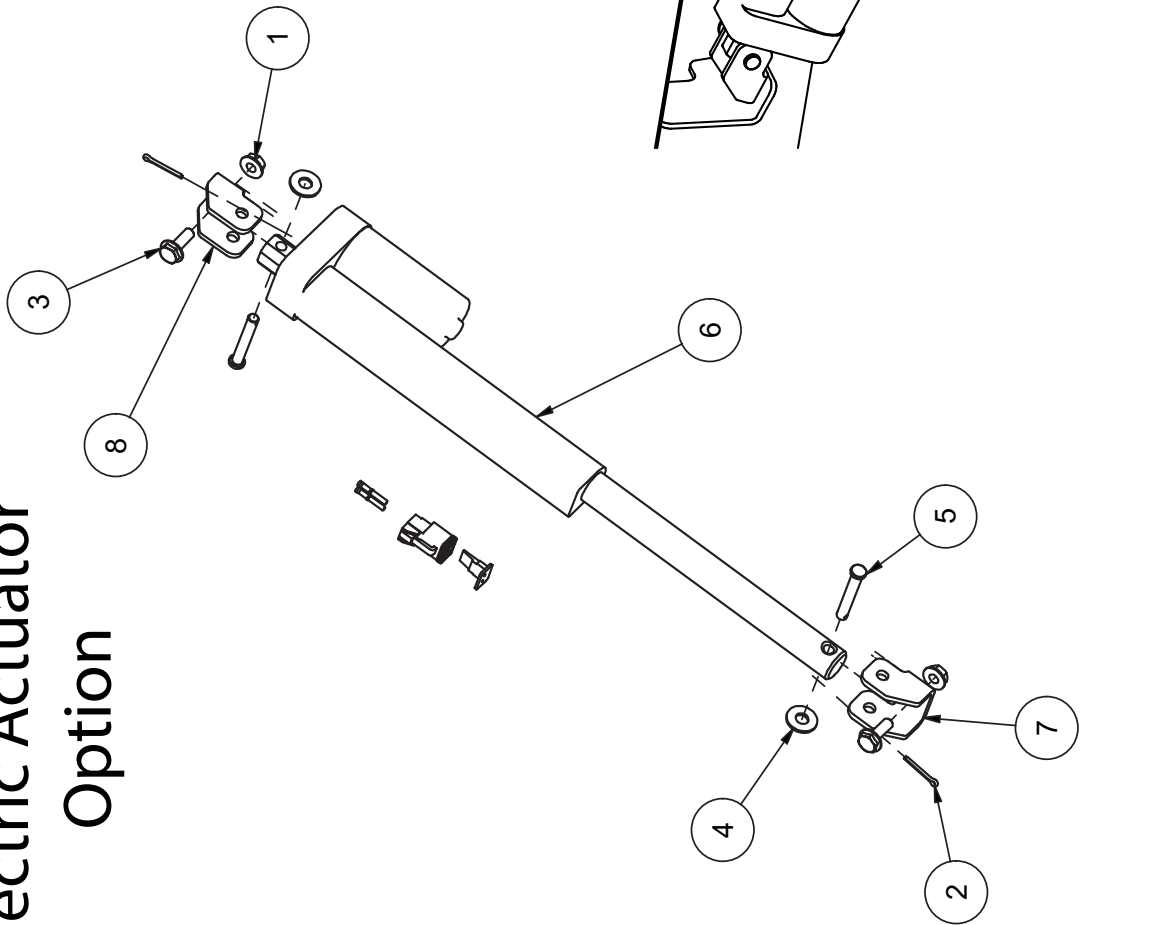

LIGHT BAR KIT 800/900

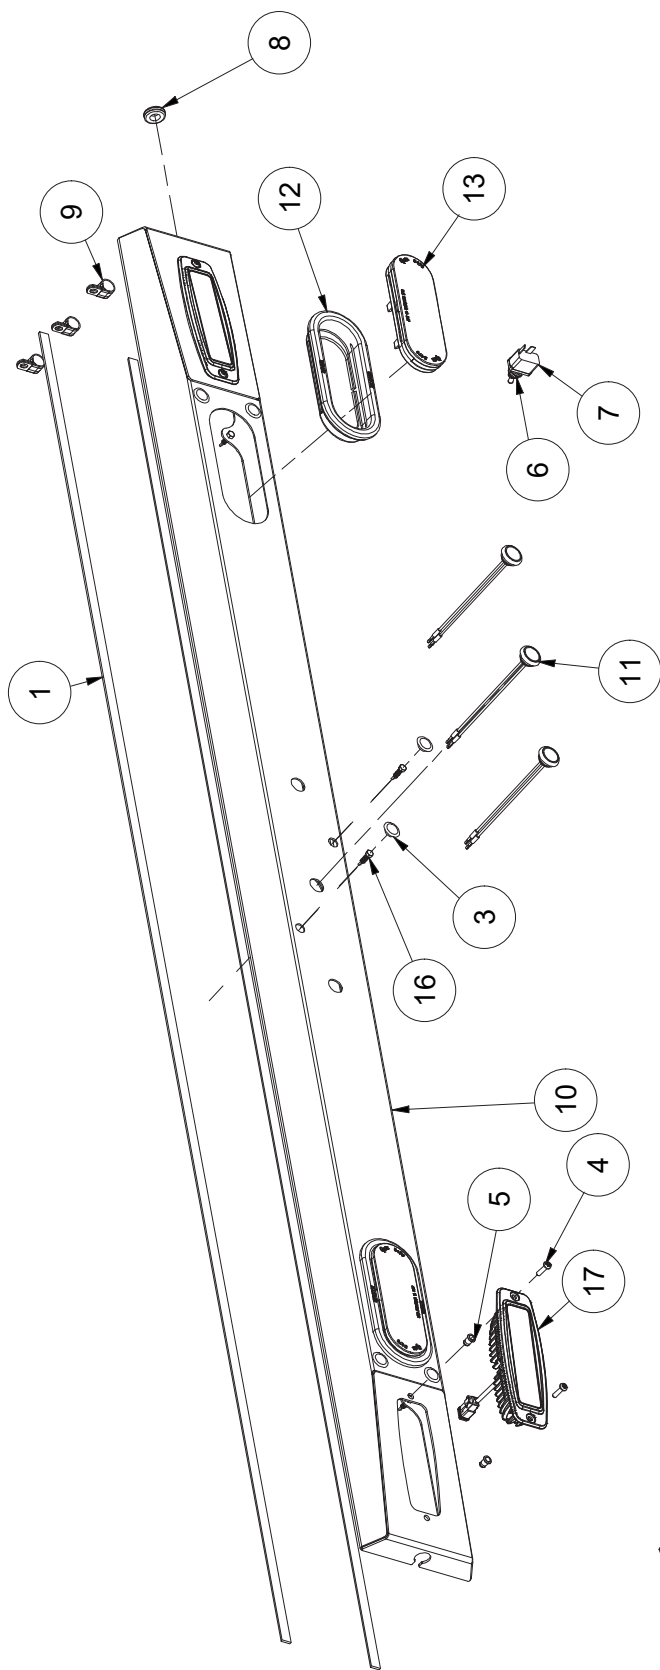


ITEM	QTY	PART #	DESCRIPTION
1	13ft	100613	Seal, .50 X .187 X 156
2	5	102117	Cable Tie, Edge Clip, Top Mount, 7.9" Black
3	6	110753	Plug, 1/2" Button Plastic
4	4	110834	Screw, 10-24 X 3/4 SS Phillips Pan Head
5	4	110835	Nut, 10-24 Rivet Aluminum
6	1	132035	Switch Boot
7	1	132135	Switch, Toggle, Spst, On-Off
8	1	150018	Grommet, 9/16 X 1" Od
9	3	200019	Clamp, Adel Ac10 .265 Hole
10	1	215399	Weldment, Light Bar, Cake Feeder
11	3	232091	Light, 3/4" Round, Led, Red
12	2	232125	Grommet, 6" Oval, Grote
13	2	232127	Light, Oval, S7/T7, Male Pin, Grote
14	1	232246	Harness, Light Bar Splice, 800/900
15	1	232247	Harness, Light Bar, 800/900
16	6	710587	Screw, 3/16 X .75 Tek Self-Tap
17	2	835027	Headlight Assembly, Flush Mount Led

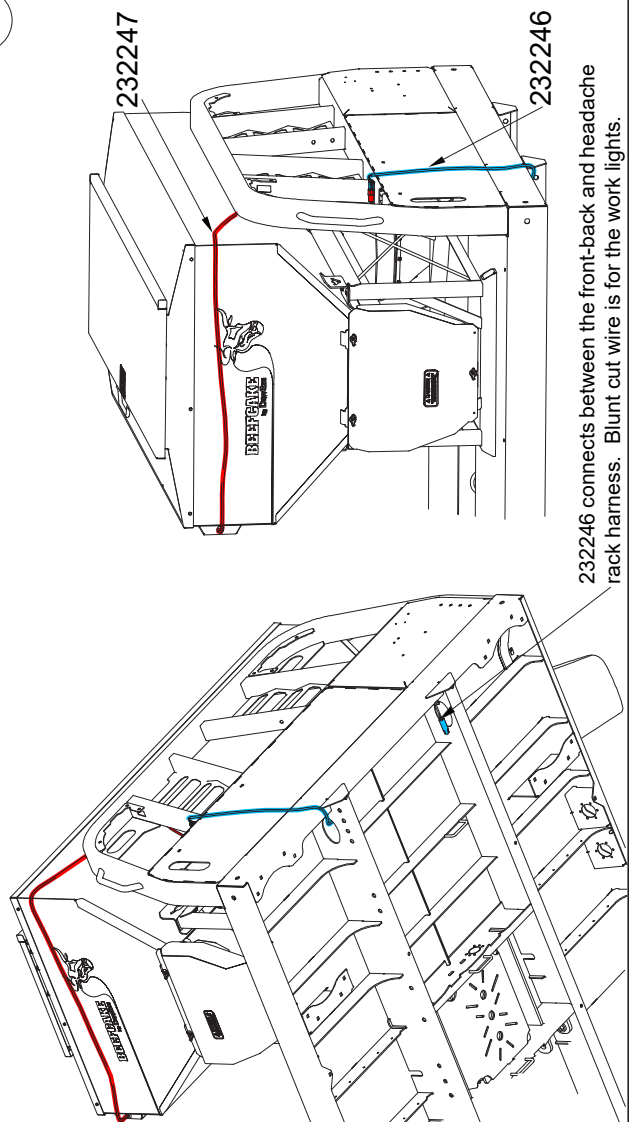

232246 connects between the front-back and headache track harness. Blunt cut wire is for the work lights.

Cake Feeder Light Bar Option Part # 205142			
ITEM	QTY	PART #	DESCRIPTION
1	13 ft.	100613	Seal, .50 x .187 x 156
2	5	102117	Cable Tie, Edge Clip, Top Mount, 7.9" Black
3	6	110753	PLUG, 1/2" BUTTON PLASTIC
4	4	110834	SCREW, 10-24 X 3/4 STAINLESS PHILLIPS PAN HEAD
5	4	110835	NUT, 10-24 RIVET ALUMINUM
6	1	132035	SWITCH BOOT
7	1	132135	Switch, Toggle, SPST, On-Off
8	1	150018	GROMMET, 9/16 X 1" OD
9	3	200019	CLAMP, ADEL AC10 .265 HOLE
10	1	215399	Weldment, Light Bar, Cake Feeder
11	3	232091	LIGHT, 3/4" ROUND, LED, RED
12	2	232125	Grommet, 6" Oval, Grote
13	2	232127	Light, Oval, S/T/T, Male Pin, Grote
14	1	232142	Harness, Cake Feeder Light Bar
15	6	710587	SCREW, 3/16 X .75 TEK SELF-TAP
16	2	835027	HEADLIGHT ASSEMBLY, FLUSH MOUNT LED


Wiring Harness
Will Run Along
Right Side
Then Across
Headache Rack
and Plug Into
Place of Tail Lights

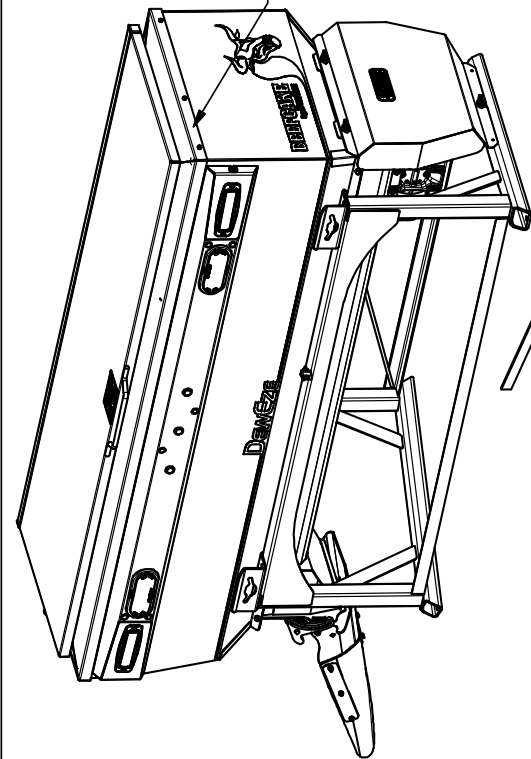

Light Bar for NON-800/900 Models

The Light Bar Option harness # 232142 plugs directly into the Grote harness on your DEWEZE flatbed after June 2018.

If you are putting in on an older bed you will need to order the Adapter Harness Kit part # 235033.

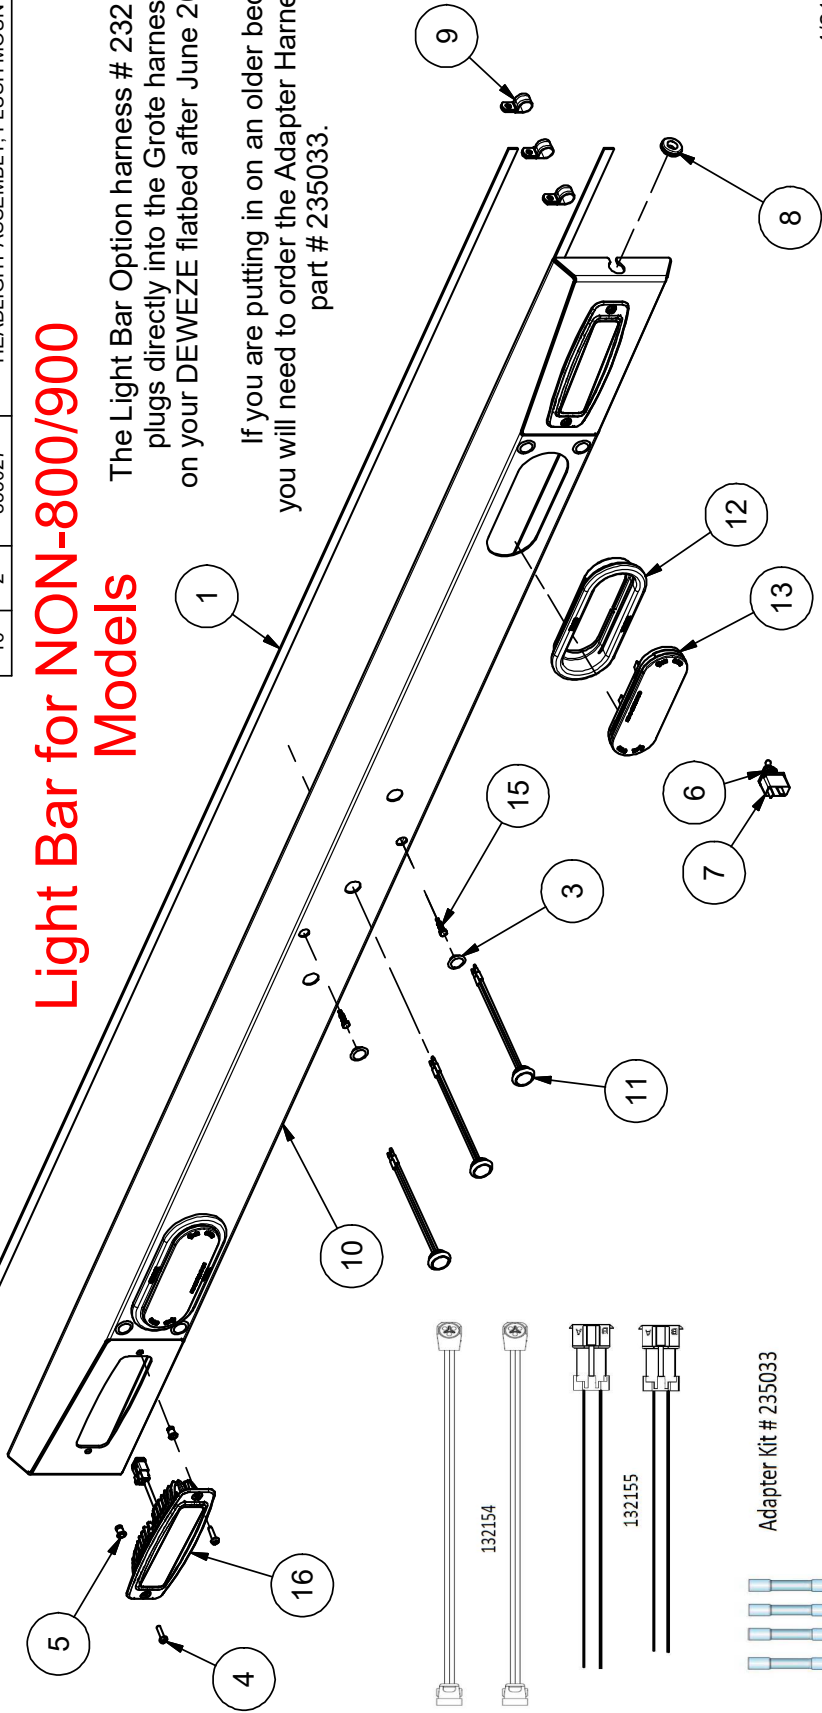

NOTES

Harper Industries, Inc.
151 E. Highway 160
Harper, KS 67058

Telephone: 620-896-7381
Toll-Free: 800-835-1042
Fax: 620-896-7129

Website: www.harperindustries.com

E-mail: info@harperindustries.com