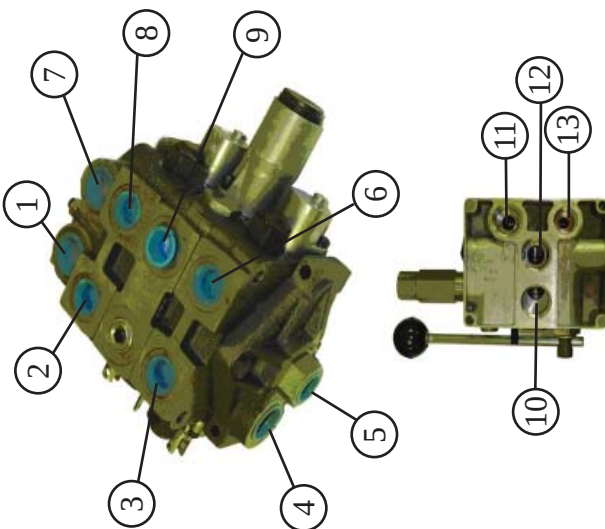 
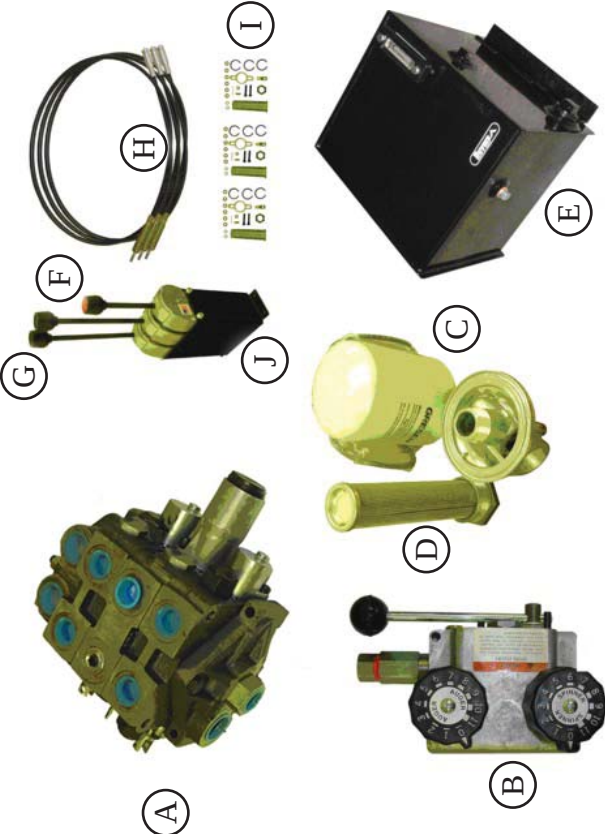 
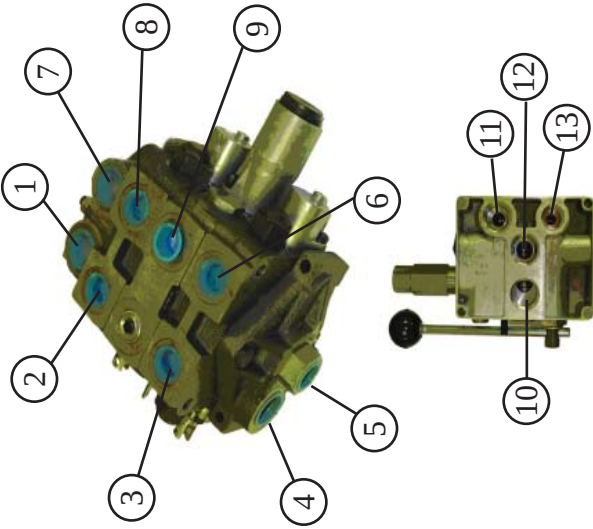 


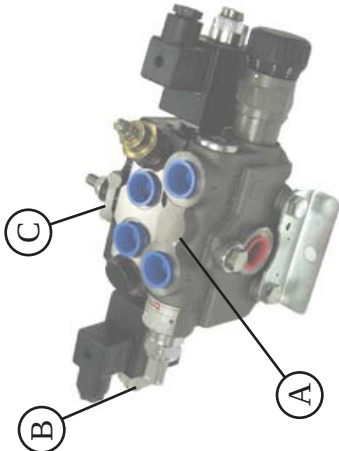 
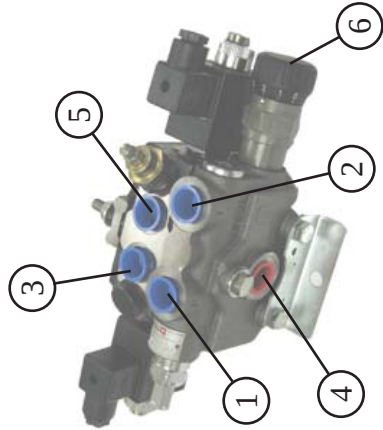 
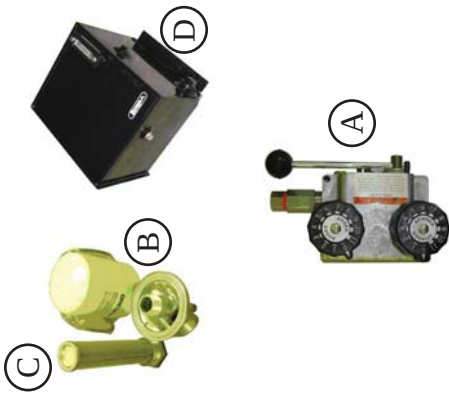 
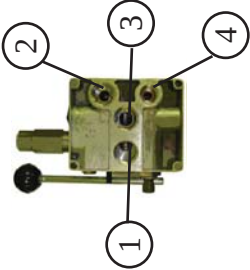 
700248 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓
 Diagram of the main valve assembly with numbered callouts 1 through 13. Callouts 1-9 point to various ports and components on the main valve body. Callouts 10-13 point to components on a separate smaller valve assembly.					
 Diagram showing various parts labeled A through J. A: Main valve assembly. B: Valve, Manual 3 Bank. C: Valve, Spreader. D: Filter, Head & Element. E: Strainer, Reservoir. F: Reservoir, 15 Gallon w/Gauge. G: Remote, Valve Control, Center Lock. H: Remote, Valve Control, Non-Lock (2). I: Control Cable, 72" (3). J: Connector Kit (3).					
Connections 1. Return to Tank 2. Hoist Cylinder (Barrel End) 3. Plow Angle Cylinder Left 4. Return to Tank 5. Power Beyond to Spreader Control Valve 6. Plow Angle to Cylinder Right 7. Pressure from Pump 8. Hoist Cylinder (Rod End) 9. Plow Up Cylinder 10. Return to Tank 11. Auger 12. Pressure from Main Valve 13. Spinner					
Parts List A. 720231 – Valve, Manual 3 Bank B. 720232 – Valve, Spreader C. 720233 – Filter, Head & Element D. 720235 – Strainer, Reservoir E. 722003 – Reservoir, 15 Gallon w/Gauge F. 750001 – Remote, Valve Control, Center Lock G. 750002 – Remote, Valve Control, Non-Lock (2) H. 750003 – Control Cable, 72" (3) I. 750004 – Connector Kit (3) J. 750005 – Control, Triple Tower					

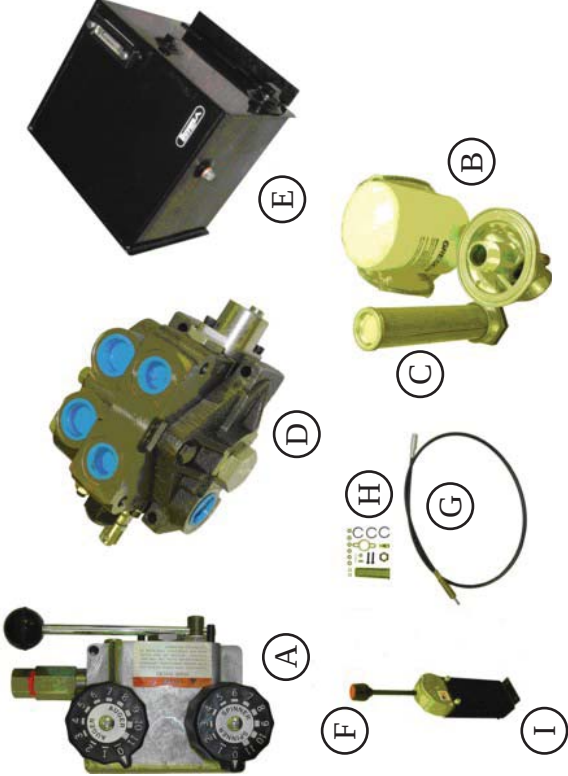 
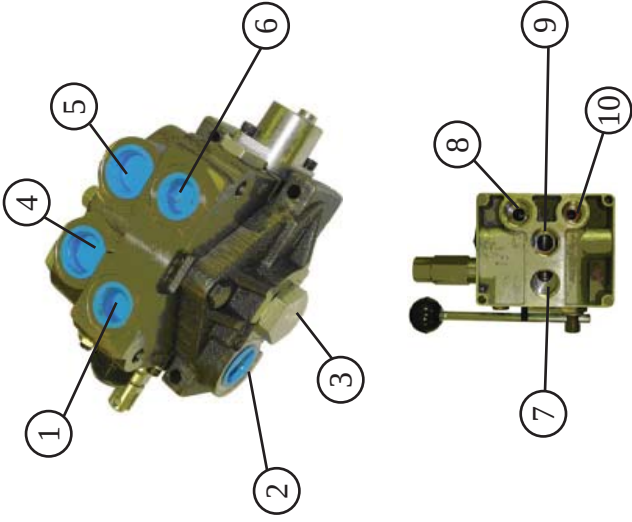 
700270 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓
          					
Parts List A. 720231 – Valve, Manual 3 Bank B. 720232 – Valve, Spreader C. 720233 – Filter, Head & Element D. 720235 – Strainer, Reservoir E. 722004 – Reservoir, 25 Gallon w/Gauge F. 750001 – Remote, Valve Control, Center Lock G. 750002 – Remote, Valve Control, Non-Lock (2) H. 750003 – Control Cable, 72" (3) I. 750004 – Connector Kit (3) J. 750005 – Control, Triple Tower					
Connections 1. Return to Tank 2. Hoist Cylinder (Barrel End) 3. Plow Angle Cylinder Left 4. Return to Tank 5. Power Beyond to Spreader Control Valve 6. Plow Angle to Cylinder Right 7. Pressure from Pump 8. Hoist Cylinder (Rod End) 9. Plow Up Cylinder 10. Return to Tank 11. Auger 12. Pressure from Main Valve 13. Spinner					

725016 w/ Reservoir, Filter, Strainer & Spreader Valve

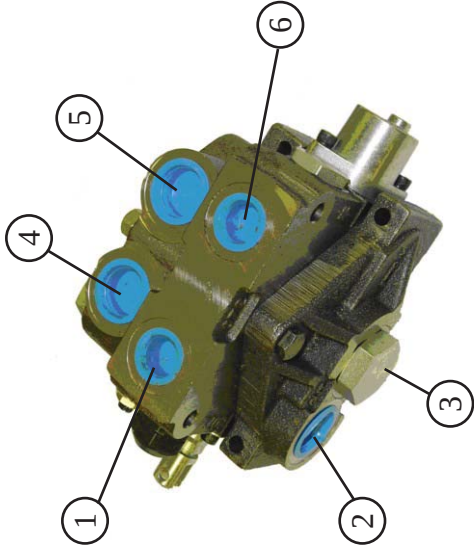 
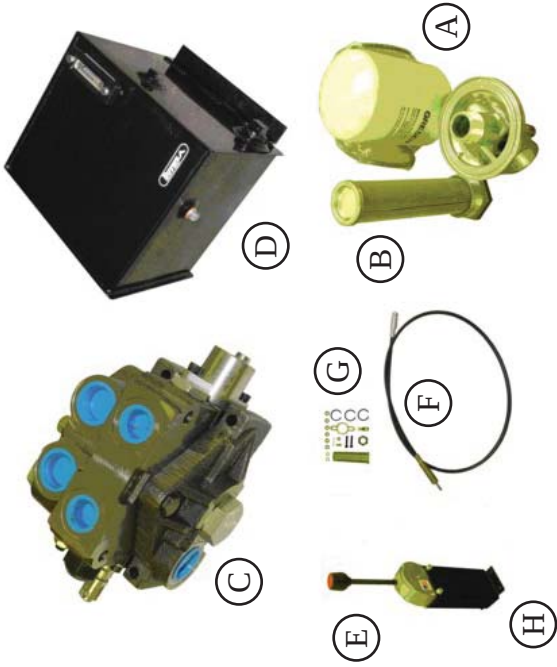 
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓	✓	✓
				Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner	
Parts List 222017 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet with Power Beyond B. 725154 - Hoist 3-way, 4 Position w/500 PSI Down Relief C. 722015 - Outlet for Priority Inlet		Connections 1. Pressure from Pump 2. Return to Tank 3. Hoist Cylinder (Barrel End) 4. Power Beyond To Spreader Control Valve 5. Hoist Cylinder (Rod End) 6. Priority Valve Adjustment		Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	

725024 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓		✓
					
Parts List A. 720232 – Valve, Spreader Control B. 720233 – Filter, Head & Element C. 720235 – Strainer, Reservoir D. 720236 – Valve, Manual 1 Bank E. 722003 – Reservoir, 15 Gallon w/Gauge F. 750001 – Remote Valve Control, Center Lock G. 750003 – Remote Cable, 72" H. 750004 – Connector Kit I. 752001 – Control, Single Tower			Connections 1. Hoist Cylinder (Rod end) 2. Return to Tank 3. Power Beyond to Spreader Control Valve 4. Return to Tank 5. Pressure from Pump 6. Hoist Cylinder (Barrel end) 7. Return to Tank 8. Auger 9. Pressure from Valve 10. Spinner		

725025 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			✓

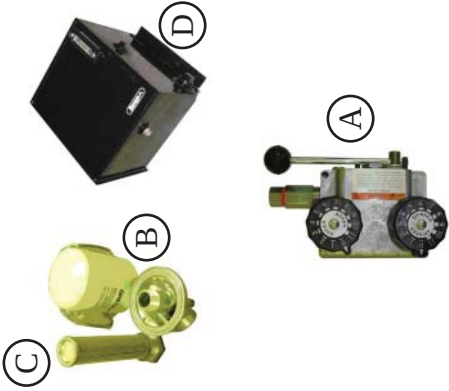 
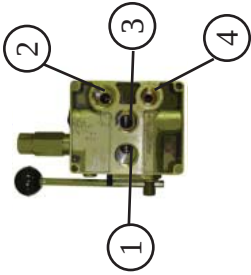 


Parts List

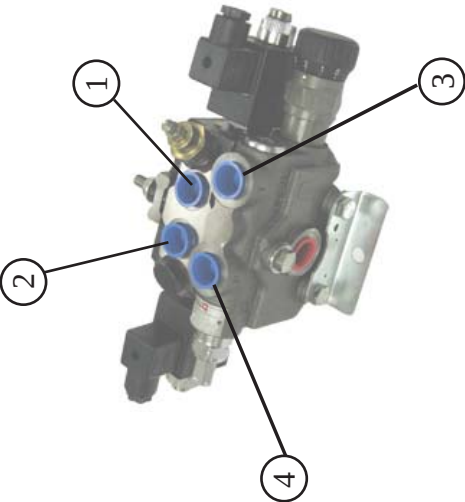 
- A. 720233 – Filter, Head & Element
- B. 720235 – Strainer, Reservoir
- C. 720236 – Valve, Manual 1 Bank
- D. 722003 – Reservoir, 15 Gallon w/Gauge
- E. 750001 – Remote Valve Control, Center Lock
- F. 750003 – Remote Cable, 72"
- G. 750004 – Connector Kit
- H. 752001 – Control, Single Tower

Connections

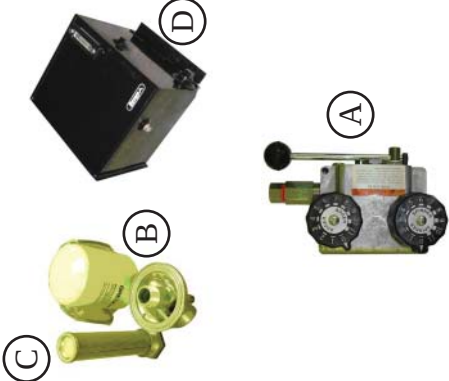 
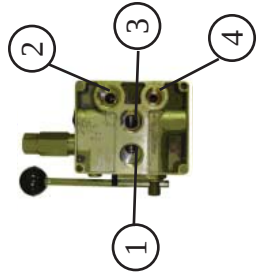 
- 1. Hoist Cylinder (Rod End)
- 2. Return to Tank
- 3. Power Beyond to Spreader Control Valve
- 4. Return to Tank
- 5. Pressure from Pump
- 6. Hoist Cylinder (Barrel End)

725036 w/ Reservoir, Filter, Strainer & Spreader & Valve					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
			✓		
					
<u>Parts List</u> A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir 15 gal.			<u>Connections</u> 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner		

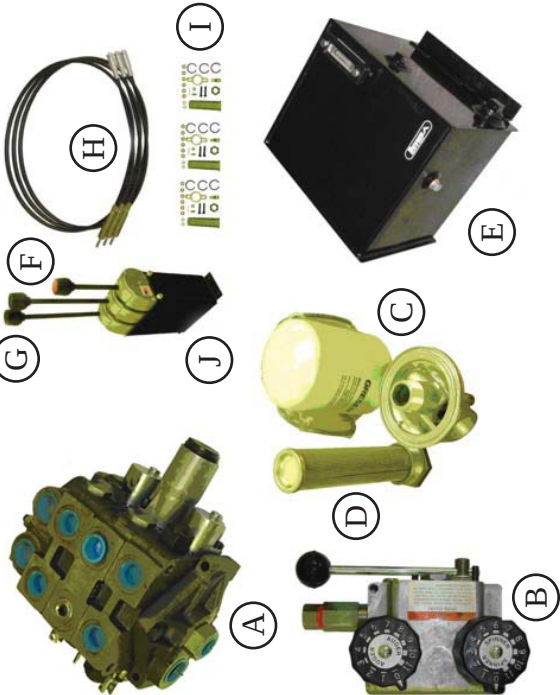 
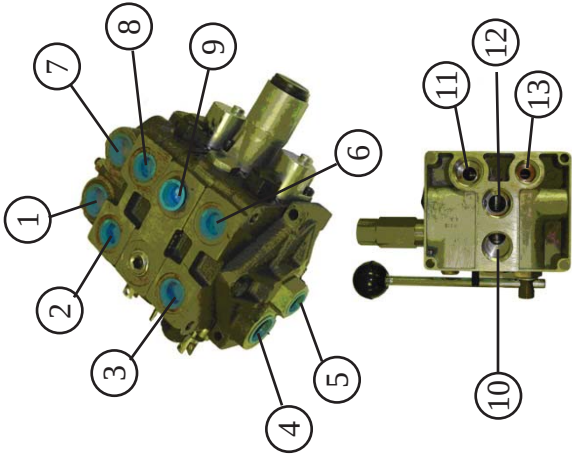 
725037 w/Reservoir & Filter

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			
					
<u>Connections</u> 1. Rod End of Hoist Cylinder 2. Barrel End of Hoist Cylinder 3. Return to Tank 4. Pressure from Pump			<u>Parts List</u> A. 720233 Filter B. 720235 Strainer C. 722003 Reservoir		

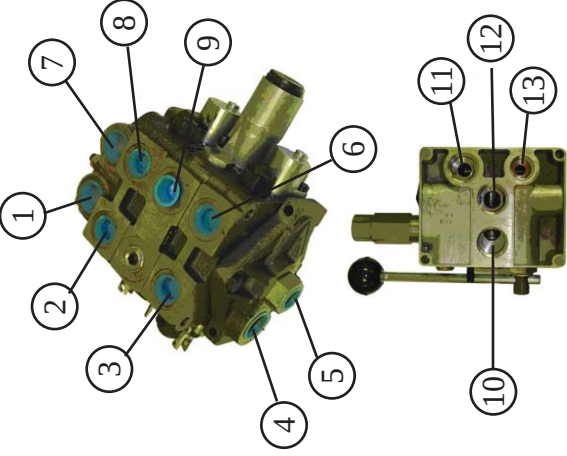 
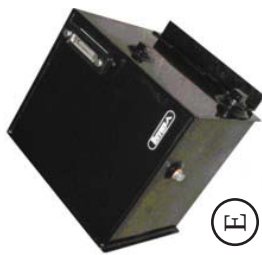 
725039 w/ Reservoir, Filter, Spreader & Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
			✓		
					
<u>Parts List</u> A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722004 Reservoir 25 gal.			<u>Connections</u> 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner		

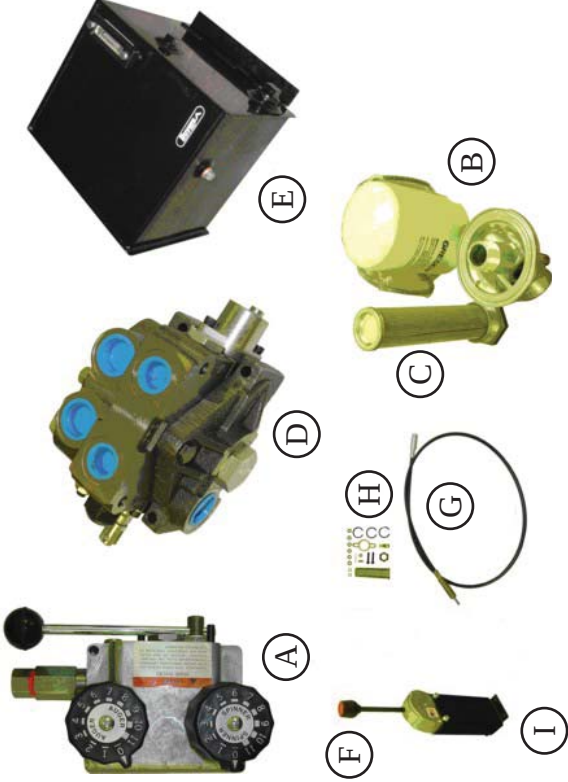 
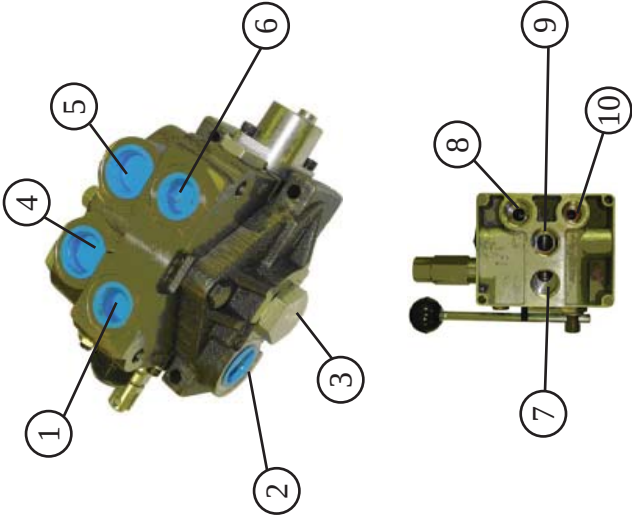 
725040 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓
 A. 720231 – Valve, Manual 3 Bank B. 720232 – Valve, Spreader C. 720233 – Filter, Head & Element D. 720235 – Strainer, Reservoir E. 722003 – Reservoir, 15 Gallon w/Gauge F. 750001 – Remote, Valve Control, Center Lock G. 750002 – Remote, Valve Control, Non-Lock (2) H. 750006 – Control Cable, 96" (3) I. 750004 – Connector Kit (3) J. 750005 – Control, Triple Tower					
 1. Return to Tank 2. Hoist Cylinder (Barrel End) 3. Plow Angle Cylinder Left 4. Return to Tank 5. Power Beyond to Spreader Control Valve 6. Plow Angle to Cylinder Right 7. Pressure from Pump 8. Hoist Cylinder (Rod End) 9. Plow Up Cylinder 10. Return to Tank 11. Auger 12. Pressure from Main Valve 13. Spinner					

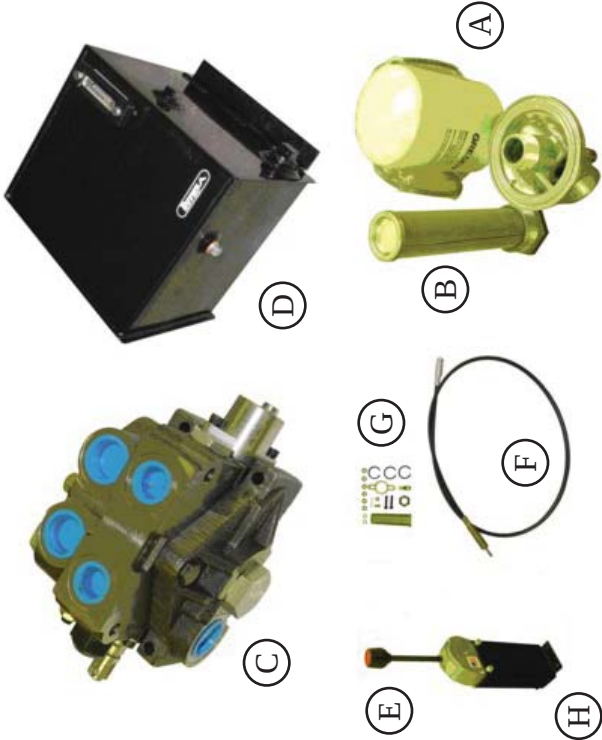 
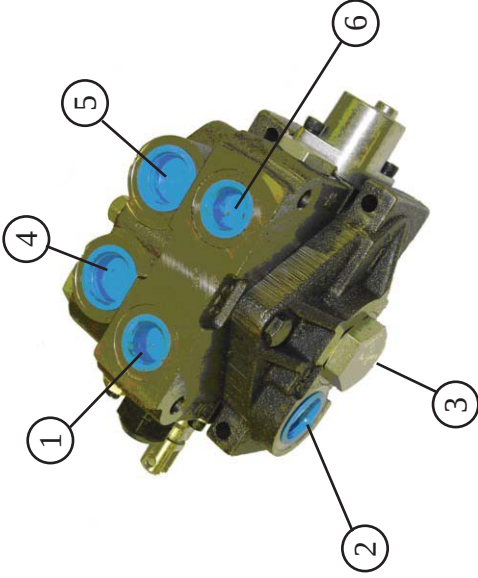 
725041 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓
                          					
A. 720231 – Valve, Manual 3 Bank B. 720232 – Valve, Spreader C. 720233 – Filter, Head & Element D. 720235 – Strainer, Reservoir E. 722004 – Reservoir, 25 Gallon w/Gauge F. 750001 – Remote, Valve Control, Center Lock G. 750002 – Remote, Valve Control, Non-Lock (2) H. 750006 – Control Cable, 96" (3) I. 750004 – Connector Kit (3) J. 750005 – Control, Triple Tower					
1. Return to Tank 2. Hoist Cylinder (Barrel End) 3. Plow Angle Cylinder Left 4. Return to Tank 5. Power Beyond to Spreader Control Valve 6. Plow Angle to Cylinder Right 7. Pressure from Pump 8. Hoist Cylinder (Rod End) 9. Plow Up Cylinder 10. Return to Tank 11. Auger 12. Pressure from Main Valve 13. Spinner					

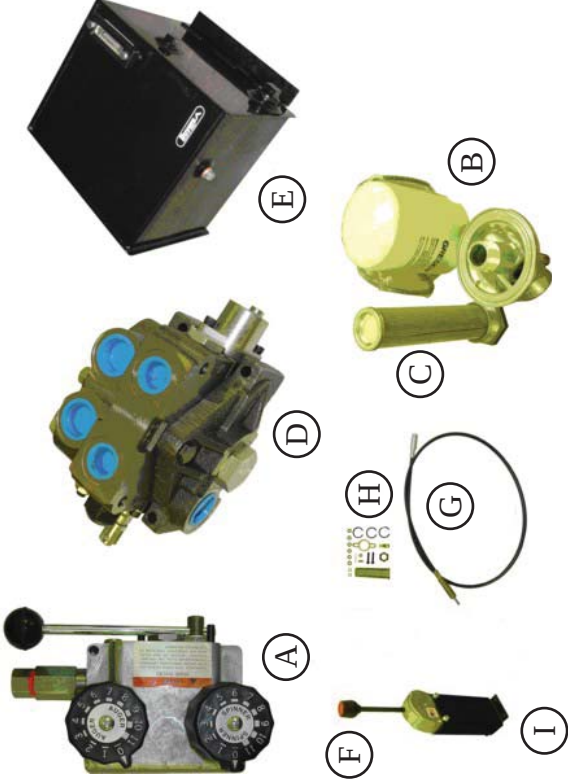 
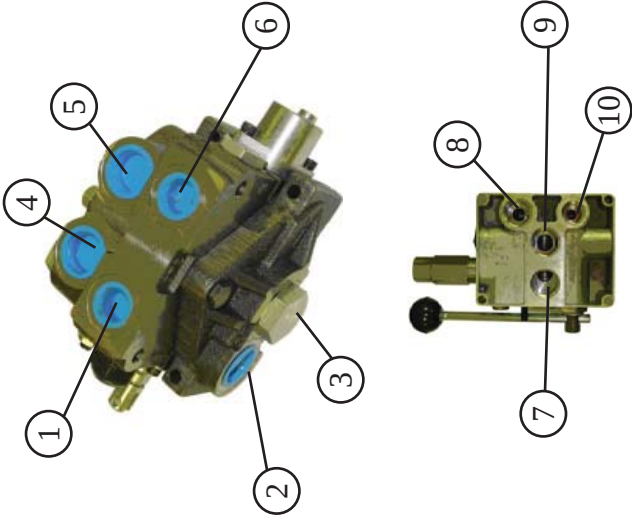 
725042 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓		✓
					
Parts List A. 720232 – Valve, Spreader Control B. 720233 – Filter, Head & Element C. 720235 – Strainer, Reservoir D. 720236 – Valve, Manual 1 Bank E. 722003 – Reservoir, 15 Gallon w/Gauge F. 750001 – Remote Valve Control, Center Lock G. 750006 – Remote Cable, 96” H. 750004 – Connector Kit I. 752001 – Control, Single Tower			Connections 1. Hoist Cylinder (Rod end) 2. Return to Tank 3. Power Beyond to Spreader Control Valve 4. Return to Tank 5. Pressure from Pump 6. Hoist Cylinder (Barrel end) 7. Return to Tank 8. Auger 9. Pressure from Valve 10. Spinner		

725043 Manual Valve

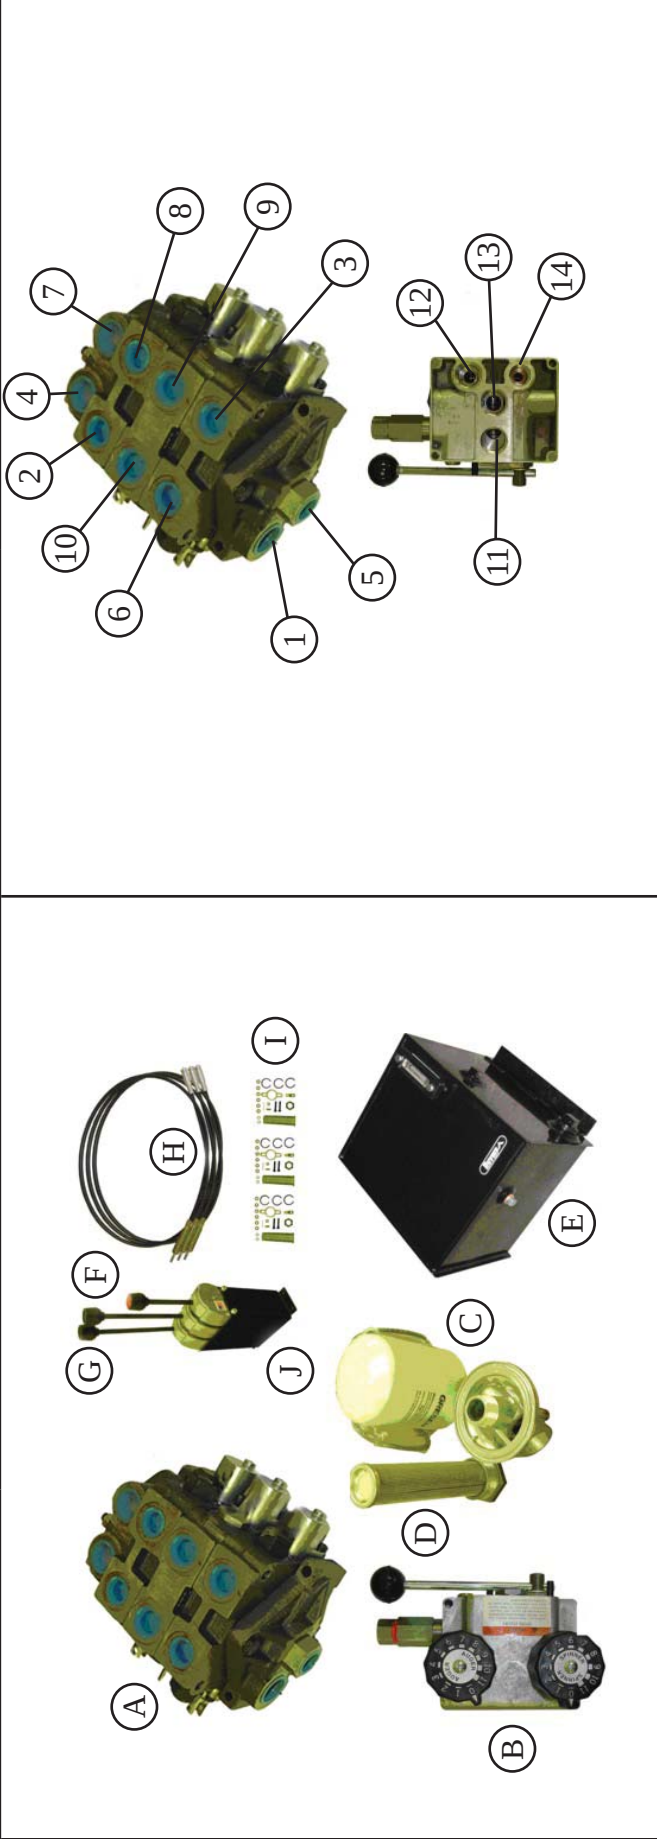 
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			✓
					
Parts List A. 720233 – Filter, Head & Element B. 720235 – Strainer, Reservoir C. 720236 – Valve, Manual 1 Bank D. 722003 – Reservoir, 15 Gallon w/Gauge E. 750001 – Remote Valve Control, Center Lock F. 750006 – Remote Cable, 96” G. 750004 – Connector Kit H. 752001 – Control, Single Tower			Connections 1. Hoist Cylinder (Rod End) 2. Return to Tank 3. Power Beyond to Spreader Control Valve 4. Return to Tank 5. Pressure from Pump 6. Hoist Cylinder (Barrel End)		

725061 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓		✓
					
Parts List A. 720232 – Valve, Spreader Control B. 720233 – Filter, Head & Element C. 720235 – Strainer, Reservoir D. 720236 – Valve, Manual 1 Bank E. 722004 – Reservoir, 25 Gallon w/Gauge F. 750001 – Remote Valve Control, Center Lock G. 750006 – Remote Cable, 96” H. 750004 – Connector Kit I. 752001 – Control, Single Tower			Connections 1. Hoist Cylinder (Rod end) 2. Return to Tank 3. Power Beyond to Spreader Control Valve 4. Return to Tank 5. Pressure from Pump 6. Hoist Cylinder (Barrel end) 7. Return to Tank 8. Auger 9. Pressure from Valve 10. Spinner		

725062 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓



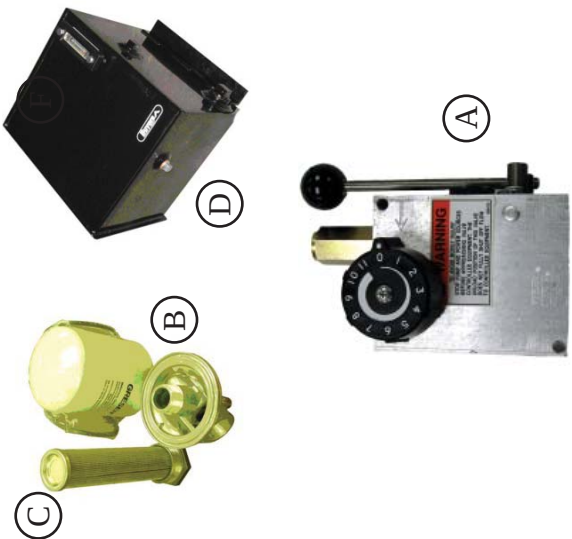 
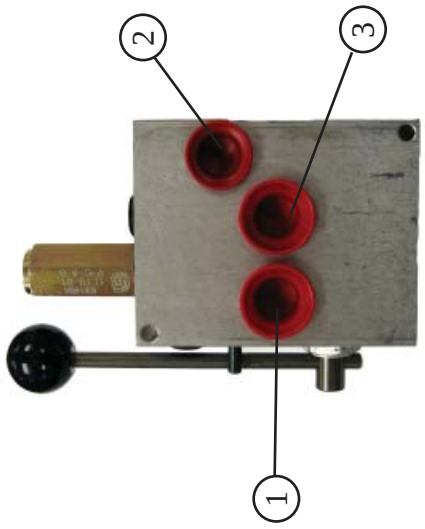 
Parts List

- A. 725058 - 3-4 Way Manual Valve
- B. 720232 – Valve, Spreader
- C. 720233 – Filter, Head & Element
- D. 720235 – Strainer, Reservoir
- E. 722004 – Reservoir, 25 Gallon w/Gauge
- F. 750001 – Remote, Valve Control, Center Lock
- G. 750002 – Remote, Valve Control, Non-Lock (2)
- H. 750003 – Control Cable, 72" (3)
- I. 750004 – Connector Kit (3)
- J. 750005 – Control, Triple Tower

Connections

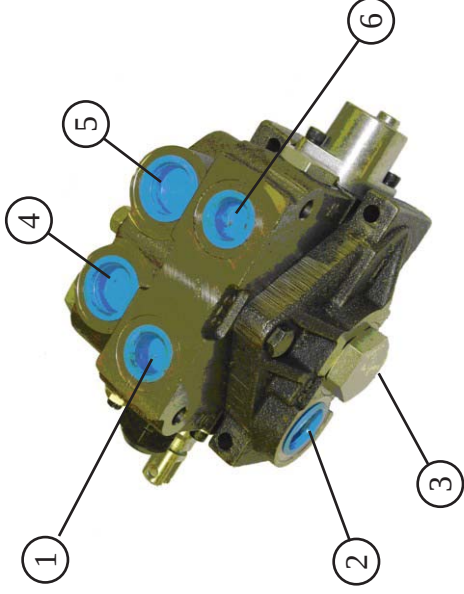 
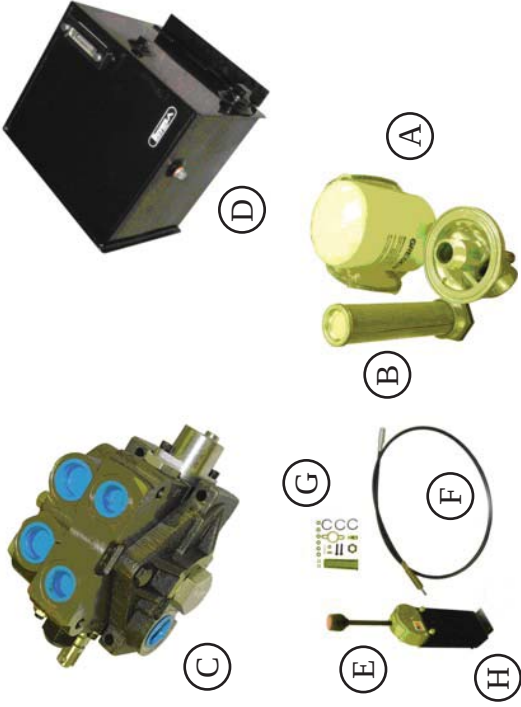 
- 1. Return to Tank
- 2. Hoist Cylinder (Barrel End)
- 3. Plow Angle Cylinder Left
- 4. Return to Tank
- 5. Power Beyond to Spreader Control Valve
- 6. Plow Angle to Cylinder Right
- 7. Pressure from Pump
- 8. Hoist Cylinder (Rod End)
- 9. Plow Up Cylinder (Barrel End)
- 10. Plow Up Cylinder (Rod End)
- 11. Return To Tank
- 12. Auger
- 13. Pressure from Main Valve
- 14. Spinner

725067 w/ Reservoir, Filter, Strainer & Spreader Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
			✓		
					
Parts List A. 722006 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir			Connections 1. Return to Tank 2. Motor 3. Pressure from Valve		

725069 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			✓



Parts List

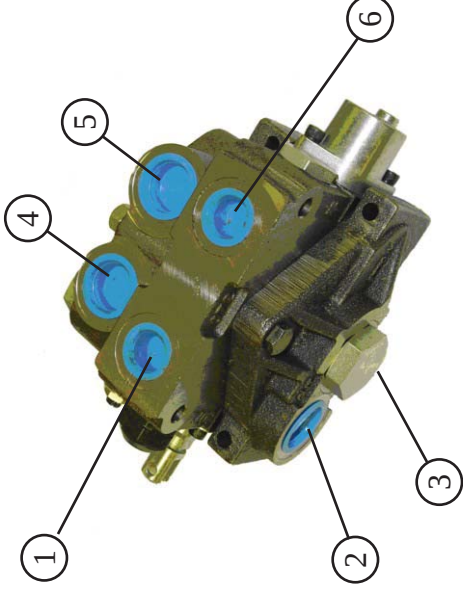 
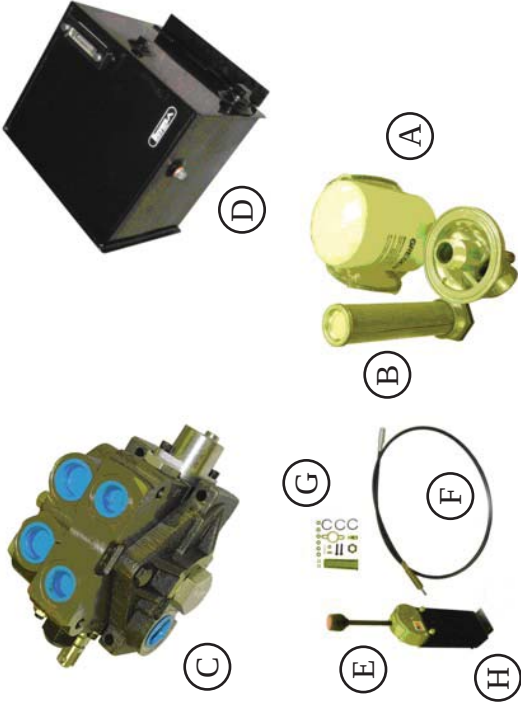 
- A. 720233 – Filter, Head & Element
- B. 720235 – Strainer, Reservoir
- C. 720236 – Valve, Manual 1 Bank
- D. 722004 – Reservoir, 25 Gallon w/Gauge
- E. 750001 – Remote Valve Control, Center Lock
- F. 750006 – Remote Cable, 96"
- G. 750004 – Connector Kit
- H. 752001 – Control, Single Tower

Connections

- 1. Hoist Cylinder (Rod End)
- 2. Return to Tank
- 3. Power Beyond to Spreader Control Valve
- 4. Return to Tank
- 5. Pressure from Pump
- 6. Hoist Cylinder (Barrel End)

725070 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			✓

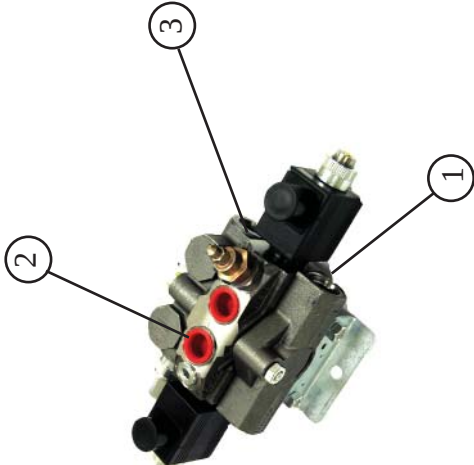 


Parts List

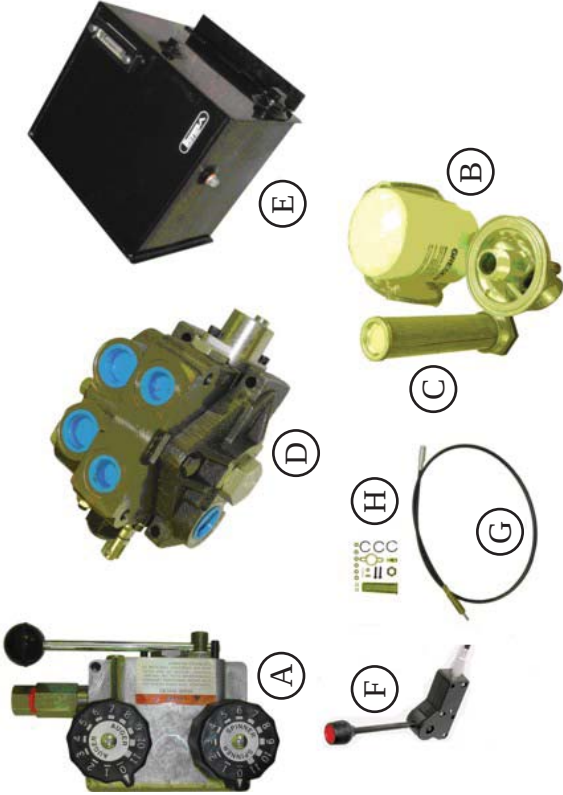 
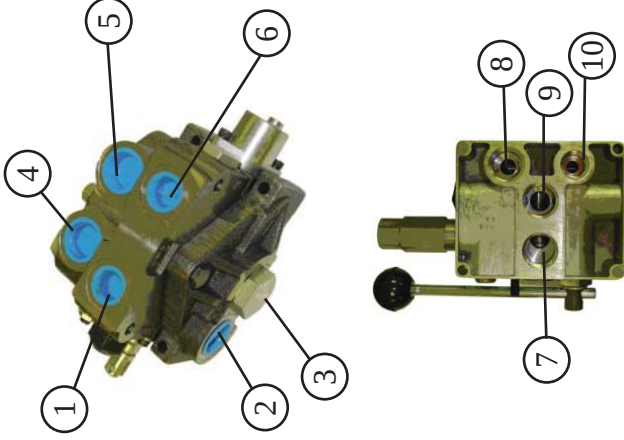 
- A. 720233 – Filter, Head & Element
- B. 720235 – Strainer, Reservoir
- C. 720236 – Valve, Manual 1 Bank
- D. 722004 – Reservoir, 25 Gallon w/Gauge
- E. 750001 – Remote Valve Control, Center Lock
- F. 750003 – Remote Cable, 72"
- G. 750004 – Connector Kit
- H. 752001 – Control, Single Tower

Connections

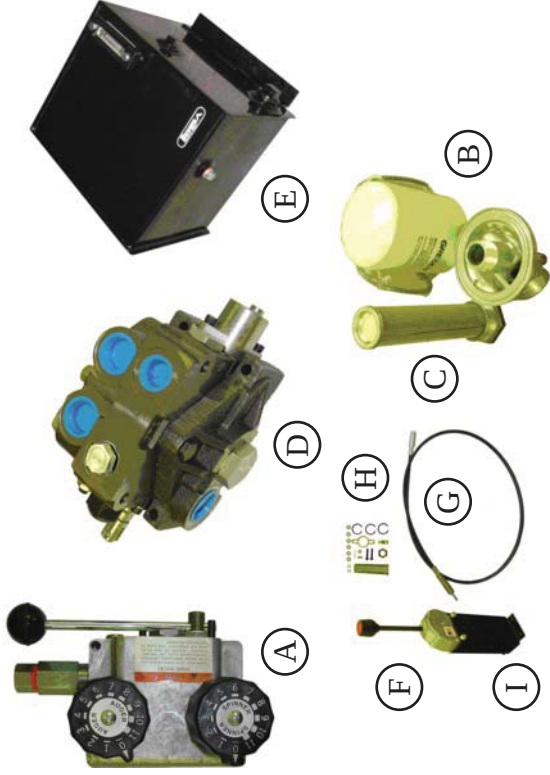 
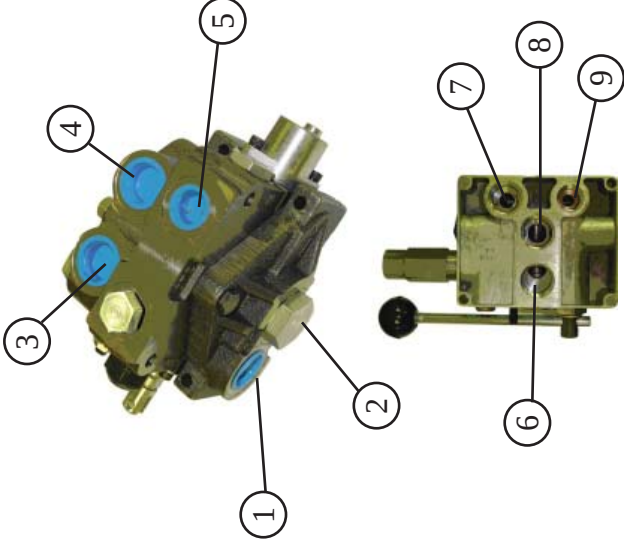 
- 1. Hoist Cylinder (Rod End)
- 2. Return to Tank
- 3. Power Beyond to Spreader Control Valve
- 4. Return to Tank
- 5. Pressure from Pump
- 6. Hoist Cylinder (Barrel End)

725074					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			
   1 & 2 Not actual size					
Parts List 1. 530020 - Switch 2. 710585 - 4-Hole panel 3. 725284 - Valve		Connections 1. Pressure from Pump 2. Hoist Cylinder (Barrel end) 3. Return to Tank		Parts List A. 720233 - Filter Head and element B. 720235 - Reservoir strainer C. 722003 - 15 gallon reservoir with gauge	

725077 Manual Valve w/Mini Controls

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓		✓
 					
A. 720232 – Valve, Spreader Control B. 720233 – Filter, Head & Element C. 720235 – Strainer, Reservoir D. 720236 – Valve, Manual 1 Bank E. 722003 – Reservoir, 15 Gallon w/Gauge F. 752007 – Remote Valve Control, Center Lock G. 752011 – Control Cable, 6’ H. 750004 – Connector Kit 1. Hoist Cylinder (Rod End) 2. Return to Tank 3. Power Beyond to Spreader Control Valve 4. Return to Tank 5. Pressure from Pump 6. Hoist Cylinder (Barrel End) 7. Return to Tank 8. Auger 9. Pressure from Valve 10. Spinner					

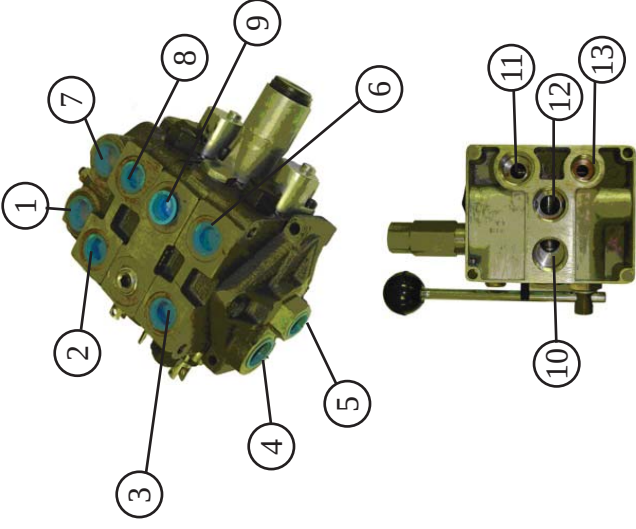 
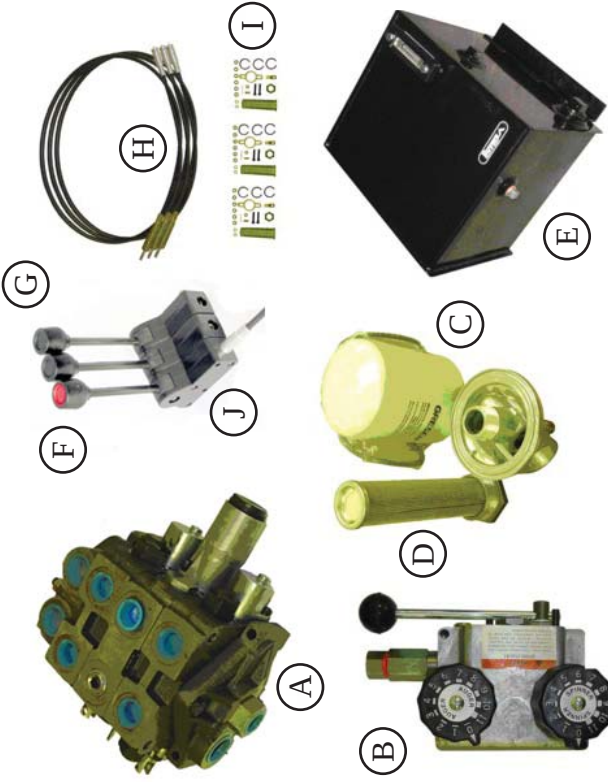 
725087 Manual Valve

Plow Up/Down	Plow Left/Right	S/A Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓		✓
					
Parts List A. 720232 – Valve, Spreader Control B. 720233 – Filter, Head & Element C. 720235 – Strainer, Reservoir D. 725086 – Valve, Manual 1 Bank E. 722003 – Reservoir, 15 Gallon w/Gauge F. 750001 – Remote Valve Control, Center Lock G. 750003 – Remote Cable, 72" H. 750004 – Connector Kit I. 752001 – Control, Single Tower			Connections 1. Return to Tank 2. Power Beyond to Spreader Control Valve 3. Return to Tank 4. Pressure from Pump 5. Hoist Cylinder (Barrel End) 6. Return to Tank 7. Auger 8. Pressure from Valve 9. Spinner		

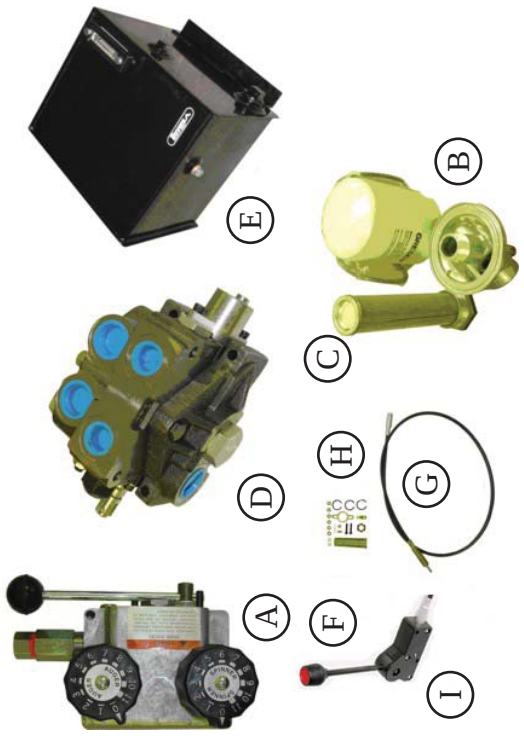 
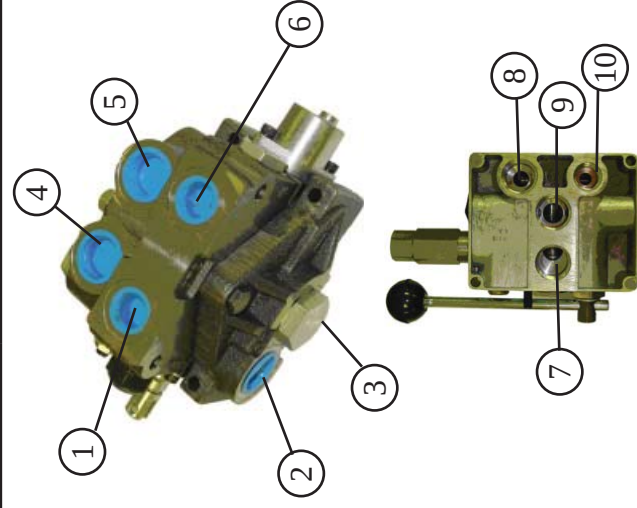 
725090 Manual Valve w/Mini Controls

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓
A. 720231 – Valve, Manual 3 Bank B. 720232 – Valve, Spreader C. 720233 – Filter, Head & Element D. 720235 – Strainer, Reservoir E. 722003 – Reservoir, 15 Gallon w/Gauge F. 752008 – Remote, Valve Control, Center Lock G. 752010 – Remote, Valve Control, Non-Lock (2) H. 752011 – Control Cable, 72" (3) I. 750004 – Connector Kit (3) J. 752013 – Mounting Bracket, Triple Tower					
1. Return to Tank 2. Hoist Cylinder (Barrel End) 3. Plow Angle Cylinder Left 4. Return to Tank 5. Power Beyond to Spreader Control Valve 6. Plow Angle to Cylinder Right 7. Plow up Cylinder 8. Hoist Cylinder (Rod End) 9. Pressure from Pump 10. Return to Tank 11. Auger 12. Pressure from Main Valve 13. Spinner					

725091 Manual Valve w/Mini Controls

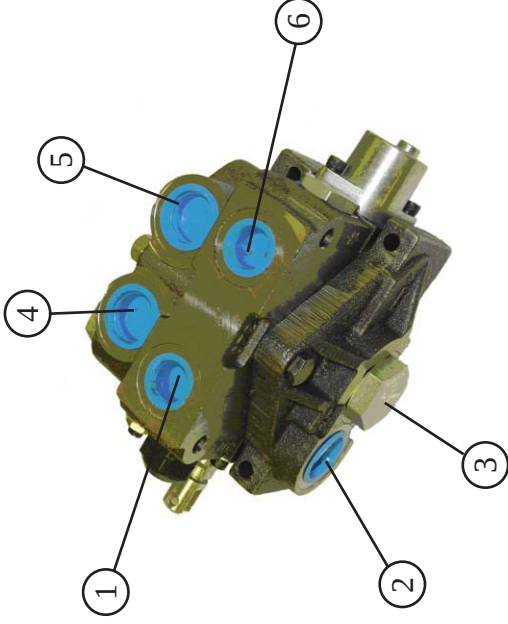 
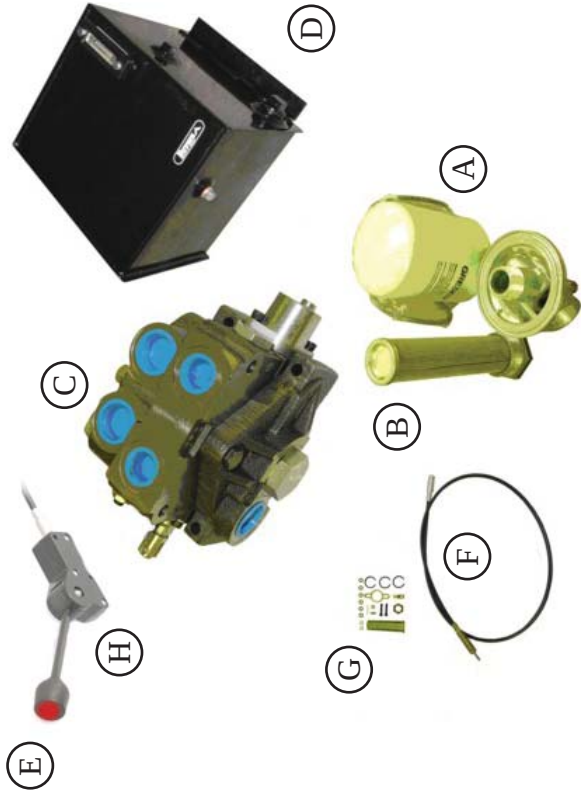 
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓
 1. Return to Tank 2. Hoist Cylinder (Barrel End) 3. Plow Angle Cylinder Left 4. Return to Tank 5. Power Beyond to Spreader Control Valve 6. Plow Angle to Cylinder Right 7. Pressure from Pump 8. Hoist Cylinder (Rod End) 9. Plow Up Cylinder 10. Return to Tank 11. Auger 12. Pressure from Main Valve 13. Spinner  A. 720231 – Valve, Manual 3 Bank B. 720232 – Valve, Spreader C. 720233 – Filter, Head & Element D. 720235 – Strainer, Reservoir E. 722004 – Reservoir, 25 Gallon w/Gauge F. 752008 – Remote, Valve Control, Center Lock G. 752010 – Remote, Valve Control, Non-Lock (2) H. 752011 – Control Cable, 72" (3) I. 750004 – Connector Kit (3) J. 752013 – Mounting Bracket, Triple Tower					

725092 Manual Valve w/Mini Controls

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓		✓
 					
Parts List A. 720232 – Valve, Spreader Control B. 720233 – Filter, Head & Element C. 720235 – Strainer, Reservoir D. 720236 – Valve, Manual 1 Bank E. 722003 – Reservoir, 15 Gallon w/Gauge F. 752008 – Remote Valve Control, Center Lock G. 752011 – Remote Cable, 72” H. 750004 – Connector Kit I. 752013 – Mounting Bracket, Single Tower					
1. Hoist Cylinder (Rod End) 2. Return to Tank 3. Power Beyond to Spreader Control Valve 4. Return to Tank 5. Pressure from Pump 6. Hoist Cylinder (Barrel End) 7. Return to Tank 8. Auger 9. Pressure from Valve 10. Spinner					

725093 Manual Valve w/Mini Controls

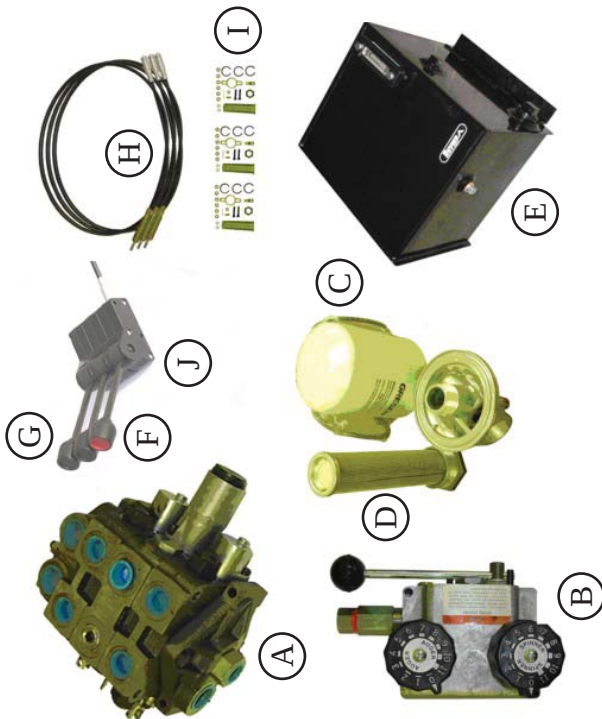 
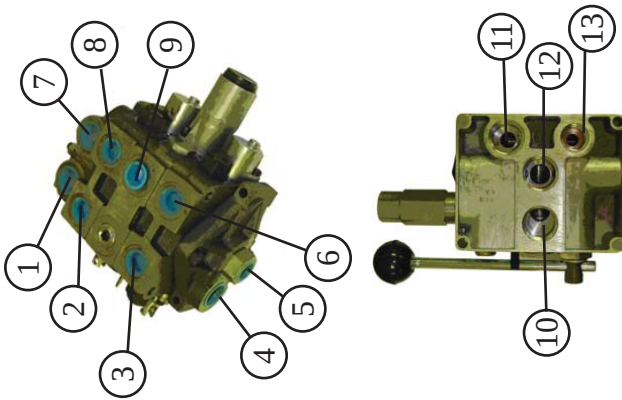 
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			✓



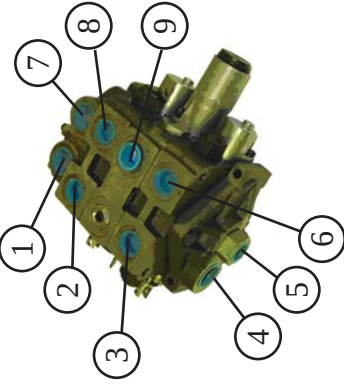 
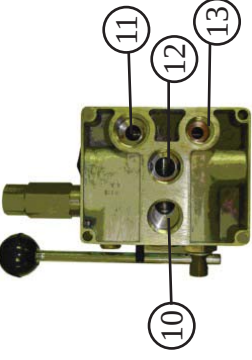 
Parts List

- | | |
|--|--|
| <p>A. 720233 – Filter, Head & Element</p> <p>B. 720235 – Strainer, Reservoir</p> <p>C. 720236 – Valve, Manual 1 Bank</p> <p>D. 722003 – Reservoir, 15 Gallon w/Gauge</p> <p>E. 752008 – Remote Valve Control, Center Lock</p> <p>F. 752011 – Remote Cable, RVC 6'</p> <p>G. 750004 – Connector Kit</p> <p>H. 752013 – Mounting Bracket, Single Tower</p> | <p>1. Hoist Cylinder (Rod End)</p> <p>2. Return to Tank</p> <p>3. Power Beyond to Spreader Control Valve</p> <p>4. Return to Tank</p> <p>5. Pressure from Pump</p> <p>6. Hoist Cylinder (Barrel End)</p> |
|--|--|

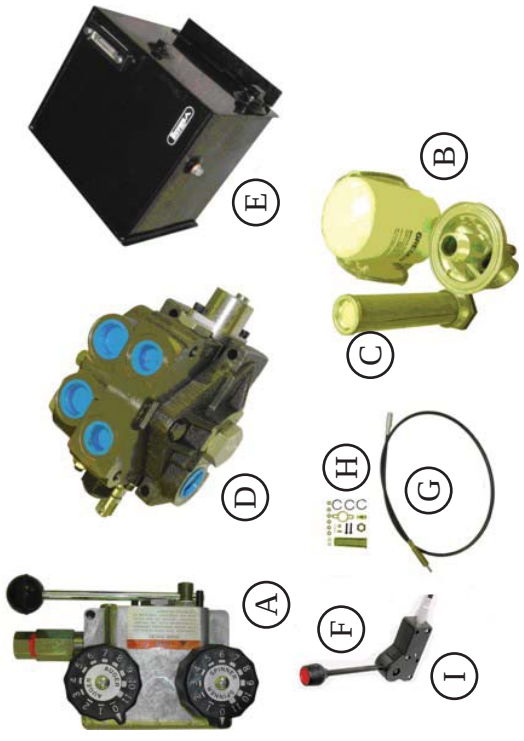 
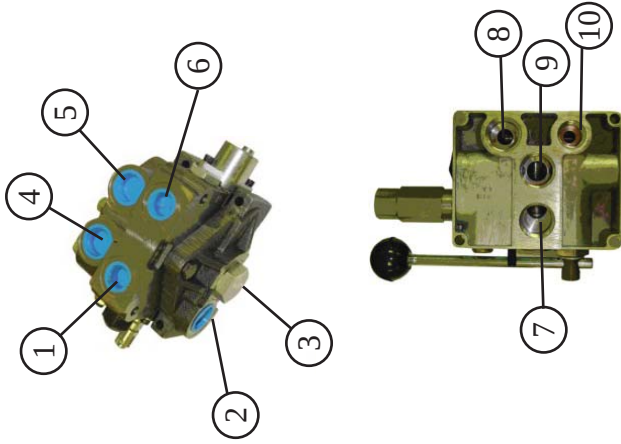 
725094 Manual Valve w/Mini Controls

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓
					
A. 720231 – Valve, Manual 3 Bank B. 720232 – Valve, Spreader C. 720233 – Filter, Head & Element D. 720235 – Strainer, Reservoir E. 722003 – Reservoir, 15 Gallon w/Gauge F. 752008 – Remote, Valve Control, Center Lock G. 752010 – Remote, Valve Control, Non-Lock (2) H. 752012 – Control Cable, 96" (3) I. 750004 – Connector Kit (3) J. 752013 – Mounting Bracket, Triple Tower			1. Return to Tank 2. Hoist Cylinder (Barrel End) 3. Plow Angle Cylinder Left 4. Return to Tank 5. Power Beyond to Spreader Control Valve 6. Plow Angle to Cylinder Right 7. Pressure from Pump 8. Hoist Cylinder (Rod End) 9. Plow Up Cylinder 10. Return to Tank 11. Auger 12. Pressure from Main Valve 13. Spinner		

725095 Manual Valve w/Mini Controls

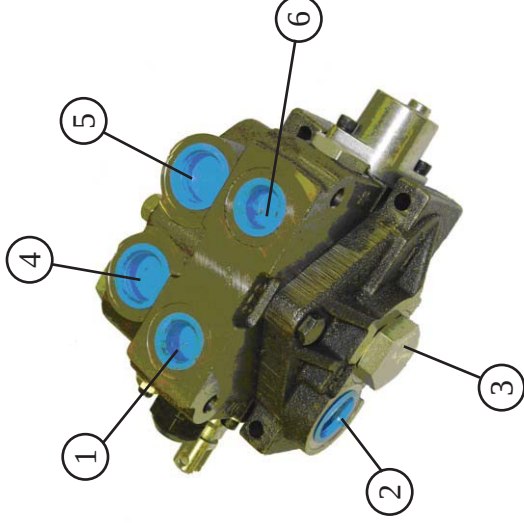 
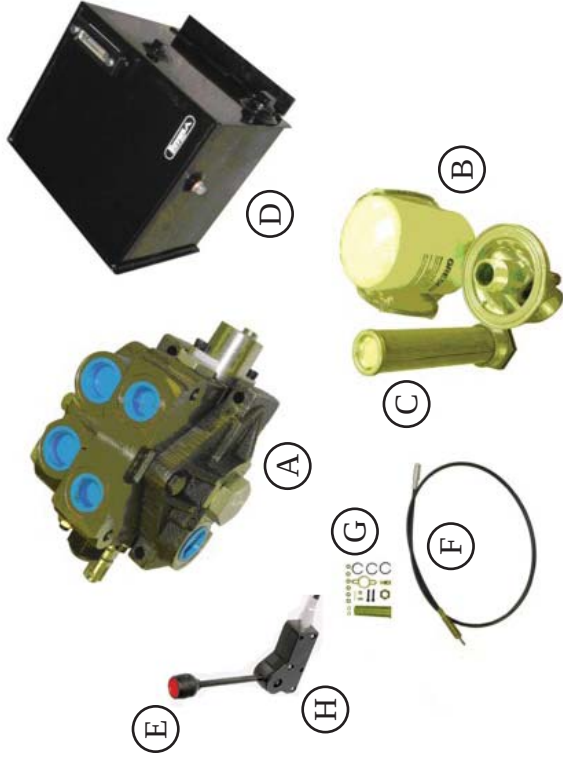 
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓		✓
 (A)  (G)  (E)  (B)  (C)  (F)					
 (1) (2) (3) (4) (5) (6) (7) (8) (9)  (10) (11) (12) (13)					
A. 720231 – Valve, Manual 3 Bank B. 720232 – Valve, Spreader C. 720233 – Filter, Head & Element D. 720235 – Strainer, Reservoir E. 722004 – Reservoir, 25 Gallon w/Gauge F. 752008 – Remote, Valve Control, Center Lock G. 752010 – Remote, Valve Control, Non-Lock (2) H. 752012 – Control Cable, 96" (3) I. 750004 – Connector Kit (3) J. 752013 – Mounting Bracket, Triple Tower 1. Return to Tank 2. Hoist Cylinder (Barrel End) 3. Plow Angle Cylinder Left 4. Return to Tank 5. Power Beyond to Spreader Control Valve 6. Plow Angle to Cylinder Right 7. Pressure from Pump 8. Hoist Cylinder (Rod End) 9. Plow Up Cylinder 10. Return to Tank 11. Auger 12. Pressure from Main Valve 13. Spinner					

725096 Manual Valve w/Mini Controls

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓		✓
 					
Parts List A. 720232 – Valve, Spreader Control B. 720233 – Filter, Head & Element C. 720235 – Strainer, Reservoir D. 720236 – Valve, Manual 1 Bank E. 722003 – Reservoir, 15 Gallon w/Gauge F. 752007 – Remote Valve Control G. 752012 – Control Cable, 8' H. 750004 – Connector Kit I. 752013 – Mini Control Bracket			1. Hoist Cylinder (Rod End) 2. Return to Tank 3. Power Beyond to Spreader Control Valve 4. Return to Tank 5. Pressure from Pump 6. Hoist Cylinder (Barrel End) 7. Return to Tank 8. Auger 9. Pressure from Valve 10. Spinner		

725097 Manual Valve w/Mini Controls

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			✓



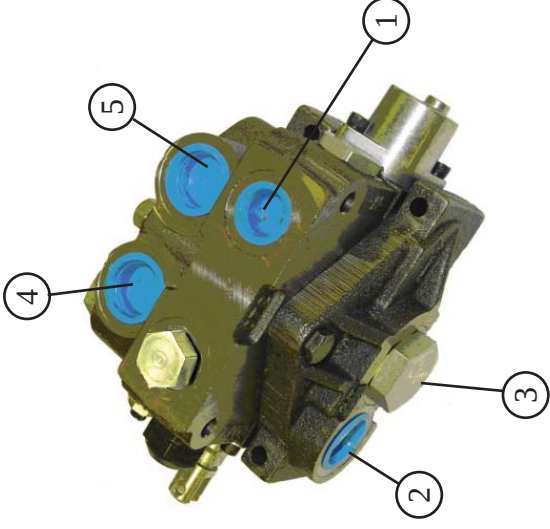 
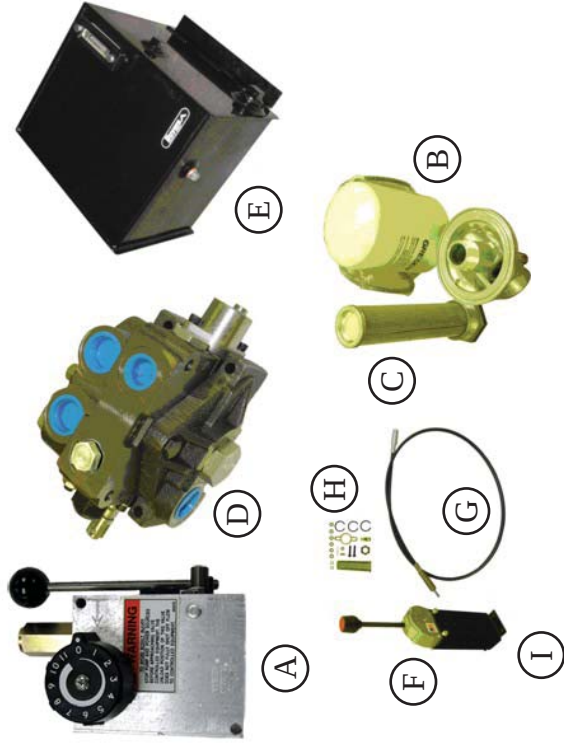 
Parts List

- A. 720231 – Valve, Manual 3 Bank
- B. 720233 – Filter, Head & Element
- C. 720235 – Strainer, Reservoir
- D. 722004 – Reservoir, 25 Gallon w/Gauge
- E. 752007 – Remote, Valve Control, Center Lock
- F. 752012 – Control Cable, 96" (3)
- G. 750004 – Connector Kit (3)
- H. 750005 – Control, Triple Tower

- 1. Hoist Cylinder (Rod End)
- 2. Return to Tank
- 3. Power Beyond to Spreader Control Valve
- 4. Return to Tank
- 5. Pressure from Pump
- 6. Hoist Cylinder (Barrel End)

725098 Manual Valve

Plow Up/Down	Plow Left/Right	S/A Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓		✓



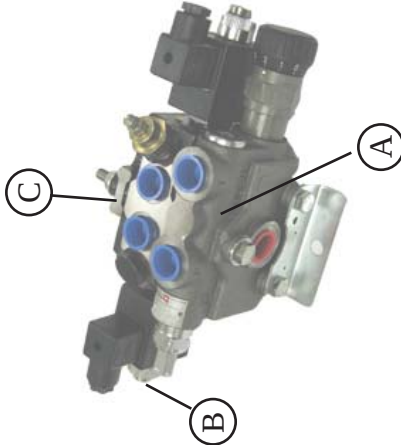 
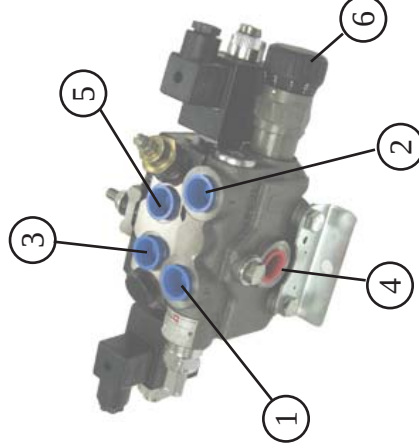 
Parts List

- A. 722006 – Valve, Single Spreader Control
- B. 720233 – Filter, Head & Element
- C. 720235 – Strainer, Reservoir
- D. 725086 – Valve, Manual 1 Bank
- E. 722003 – Reservoir, 15 Gallon w/Gauge
- F. 750001 – Remote Valve Control, Center Lock
- G. 752012 – Control Cable, 72"
- H. 750004 – Connector Kit
- I. 752001 – Control, Single Tower

Connections

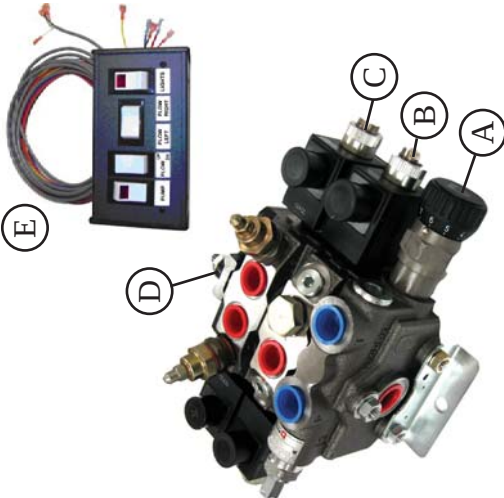 
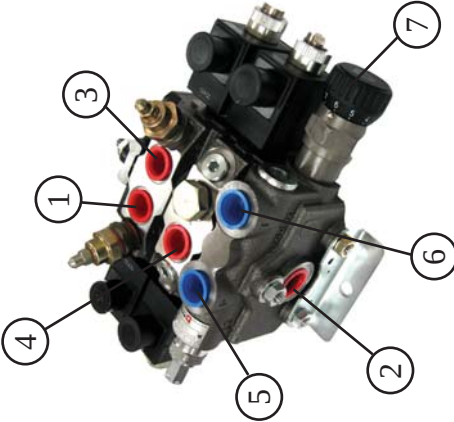 
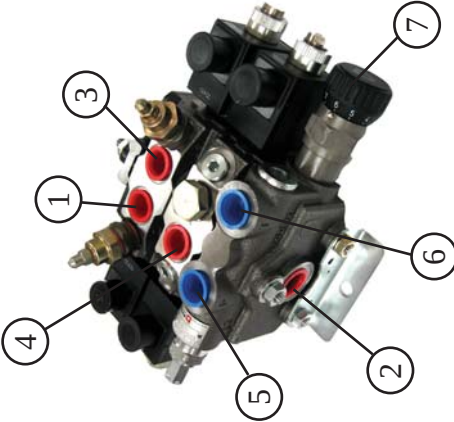 
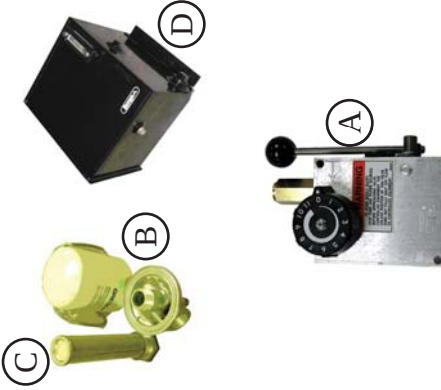 
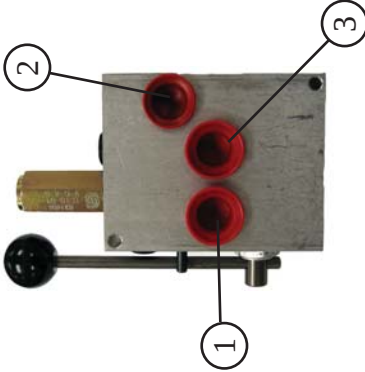 
- 1. Hoist Cylinder (Rod End)
- 2. Return to Tank
- 3. Power Beyond to Spreader Control Valve
- 4. Return to Tank
- 5. Pressure from Pump

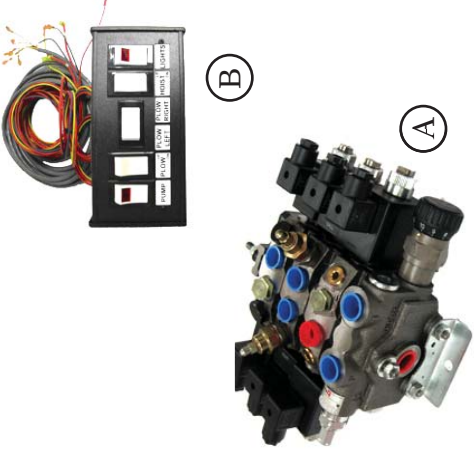 
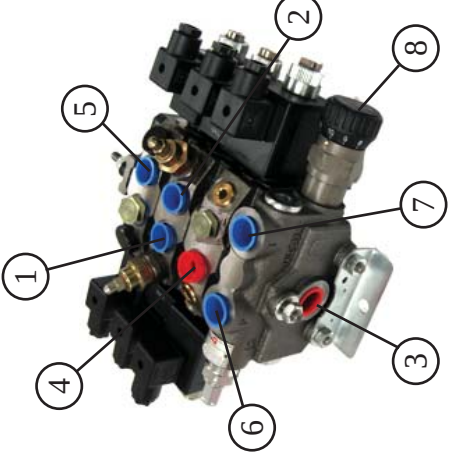 
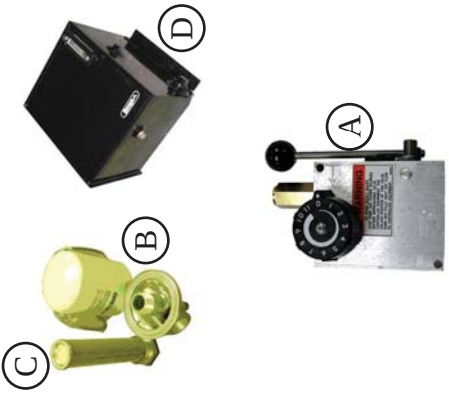 
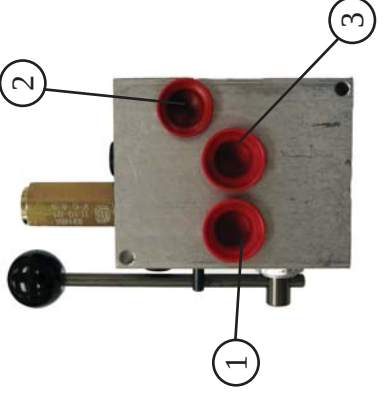 
725101 w/ Reservoir, Filter, Strainer & Spreader Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓	✓	✓
				Spreader Valve Part Number 723012	
Parts List 222017 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet with Power Beyond B. 725154 - Hoist 3-way, 4 Position Section with 500 PSI Down Relief C. 722015 - Outlet for Priority Inlet		Connections 1. Pressure from Pump 2. Return to Tank 3. Hoist Cylinder (Barrel End) 4. Power Beyond To Spreader Control Valve 5. Hoist Cylinder (Rod End) 6. Priority Valve Adjustment		Parts List B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	

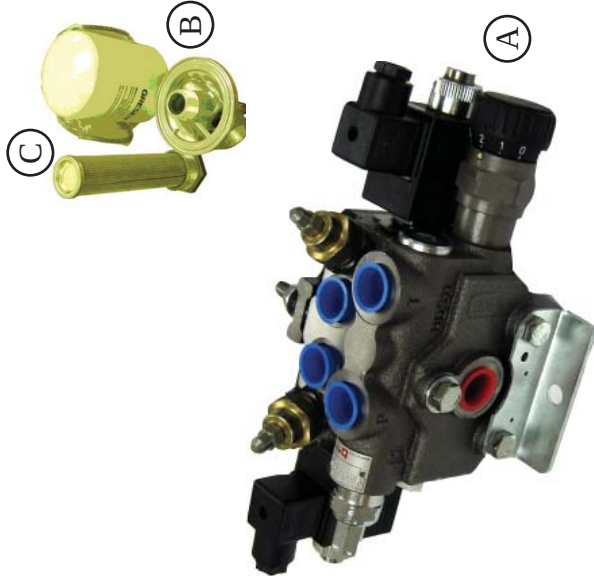 
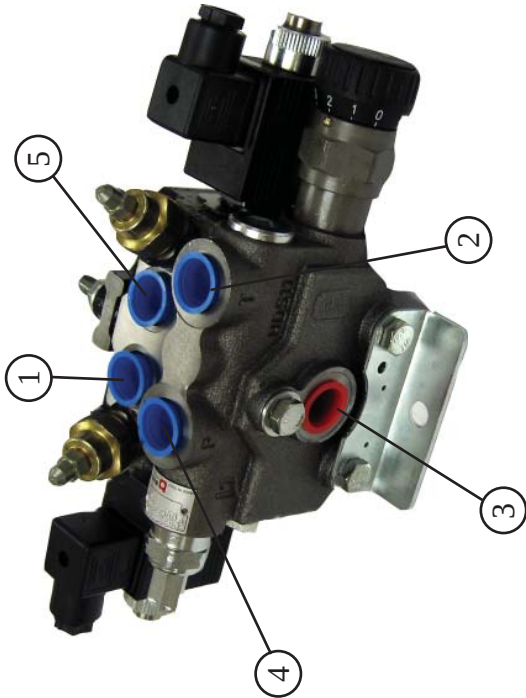 
725104 Reservoir, Filter & Electric Spreader Valve

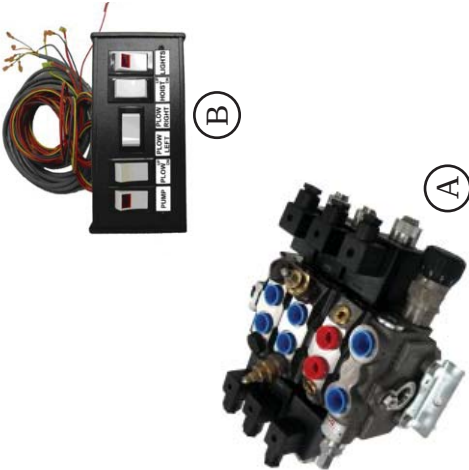 
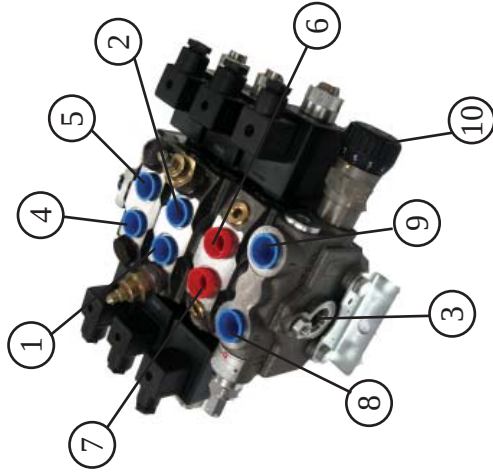 
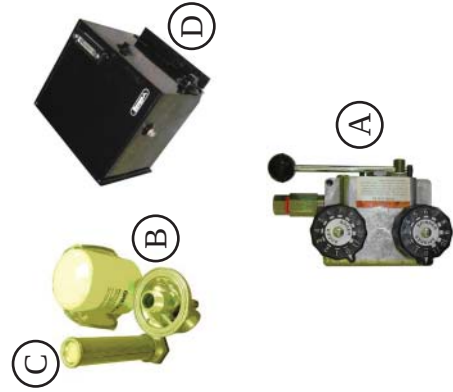 
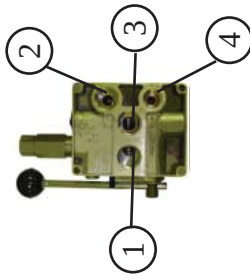 
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
			✓		
					
<u>Parts List</u> A. 720233 Filter B. 720235 Strainer C. 722003 Reservoir			<u>Spreader Valve</u> Part Number 723012		

725105 w/ Reservoir, Filter, Strainer & Spreader Valve					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓		✓	✓	✓
					
Parts List 222018 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet with Power Beyond B. 722030 - Plow Up/Down/Float Section C. 722012 - Plow Angle with Cross Over Relief D. 722015 - Outlet for Priority Inlet E. 730018 - Control Panel	Connections 1. Plow Angle Cylinder Left 2. Power Beyond to Spreader Control Valve 3. Plow Angle Cylinder Right 4. Plow Up Cylinder 5. Pressure from Pump 6. Return to Tank 7. Priority Valve Adjustment	Parts List A. 722006 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722004 Reservoir	Connections 1. Return to Tank 2. Motor 3. Pressure from Valve		

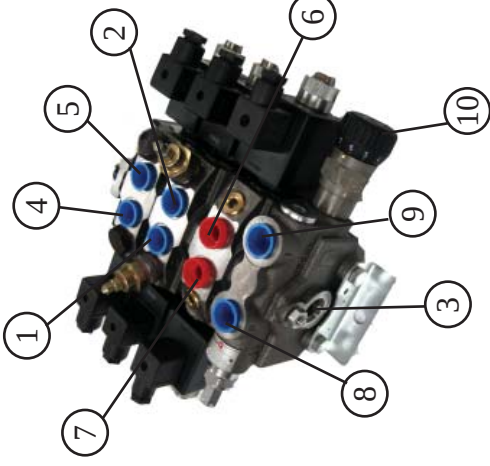 
725107 w/ Reservoir, Filter, Strainer & Spreader Valve					
Plow Up/Down	Plow Left/Right	S/A Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓	✓	✓
 (B) (A)	 1 2 3 4 5 6 7 8	 (C) (B) (A) (D)	 1 2 3	Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	Connections 1. Return to Tank 2. Motor 3. Pressure from Valve
Parts List A. 725106 - Valve 110643 - Nut 110674 - Washer 770703 - Washer 222015 - Small Mounting Feet 222019 - Tie Rod 722011 - Priority Inlet 722030 - Plow Up/Down/Float Section 722012 - Plow Angle with Cross Over Relief Section 722030 - Hoist Power Up Gravity Down Section 722015 - Outlet for Priority Inlet B. 730019 - 5 Switch Control Panel	Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Power Beyond to Spreader 4. Plow Up Cylinder 5. Hoist Cylinder 6. Pressure from Pump 7. Return to Tank 8. Priority Valve Adjustment				

725111 w/Reservoir, Filter, Strainer

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
	✓			✓	✓
					
Parts List A. 725079 – Valve, Manual 1 Bank B. 720233 – Filter, Head & Element C. 720235 – Strainer, Reservoir D. 722004 – Reservoir, 25 Gallon w/Gauge			Parts List 1. Plow Cylinder (Left Angle) 2. Return to Tank 3. Power Beyond to Spreader Control Valve 4. Pressure from Pump 5. Plow Cylinder (Right Angle)		

725113 w/ Reservoir, Filter, Strainer & Spreader Valve				
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet
✓	✓	✓	✓	✓
				
Parts List A. 725112 - Valve 110643 - Nut 110674 - Washer 110703 - Washer 222013 - 3 Pos - 4 Way Port Relief 222015 - Small Mounting Feet 222020 - Tie Rod 722011 - Priority Inlet Valve B. 730019 - 5 Switch Control Panel	Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Power Beyond to Spreader 4. Hoist Cylinder (Barrel end) 5. Hoist Cylinder (Rod end) 6. Plow Cylinder (Barrel end) 7. Plow Cylinder (Rod end) 8. Pressure from Pump 9. Return to Tank 10. Priority Valve Adjustment	Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner	

725114 - w/Reservoir, Filter, Strainer & Spreader Valve

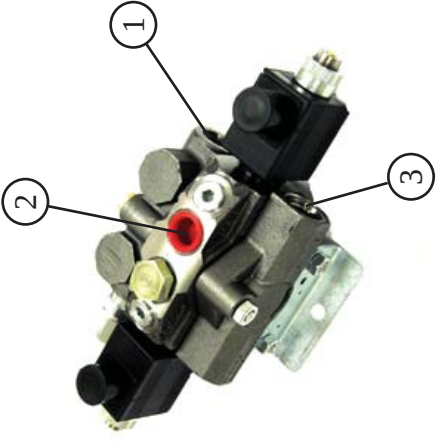 
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓	✓	✓
					
Parts List A. 725112 - Valve 110643 - Nut 110674 - Washer 110703 - Washer 222013 - 3 Pos - 4 Way Port Relief 222015 - Small Mounting Feet 222020 - Tie Rod 722011 - Priority Inlet Valve B. 730019 - 5 Switch Control Panel			Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Power Beyond to Spreader 4. Hoist Cylinder (Barrel end) 5. Hoist Cylinder (Rod end) 6. Plow Cylinder (Barrel end) 7. Plow Cylinder (Rod end) 8. Pressure from Pump 9. Return to Tank 10. Priority Valve Adjustment		
Parts List A. 725112 - Valve 110643 - Nut 110674 - Washer 110703 - Washer 222013 - 3 Pos - 4 Way Port Relief 222015 - Small Mounting Feet 222020 - Tie Rod 722011 - Priority Inlet Valve B. 730019 - 5 Switch Control Panel			Parts List A. 720233 Filter B. 720235 Strainer C. 722003 Reservoir D. 723012 - Valve, Electric Spreader		

725117 Manual Valve

Plow Up/Down	Plow Left/Right	Hoist	Side Dump	Sander/Spreader	Priority Inlet	Power Beyond
A. 725116 - Valve B. 750002 - Remote Valve Control, Non-Lock (3) C. 750006 - Remote Cable (3), 96" D. 750005- Control Triple Tower E. 750004 - Control Kit	A.	✓	✓			✓
A. 725116 - Valve B. 750002 - Remote Valve Control, Non-Lock (3) C. 750006 - Remote Cable (3), 96" D. 750005- Control Triple Tower	1. Return to Tank 2. Pressure from Pump 3. Hoist Cylinder (Rod End) 4. Side Dump Cylinder (Rod End) 5. D/A Cylinder (Rod End) 6. Power Beyond 7. Return to Tank 8. D/A Cylinder (Barrel End) 9. Side Dump Cylinder (Barrel End) 10. Hoist Cylinder (Barrel End)				A. 720233 - Filter Head and element B. 720235 - Reservoir strainer C. 722003 - 15 gallon reservoir with gauge	
Parts List		Connections			Parts List	

725119

Plow Up/Down	Plow Left/Right	S/A Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			

		
---	--	---

Parts List

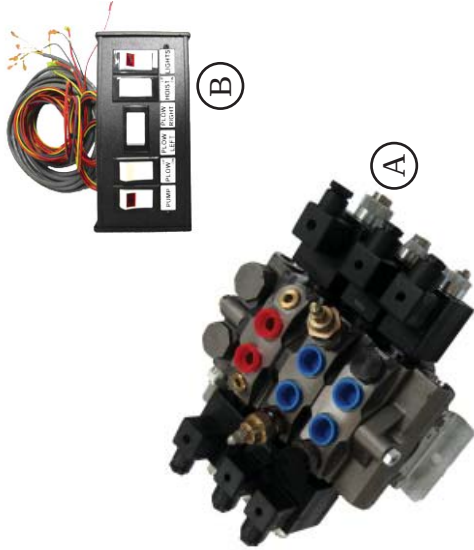 
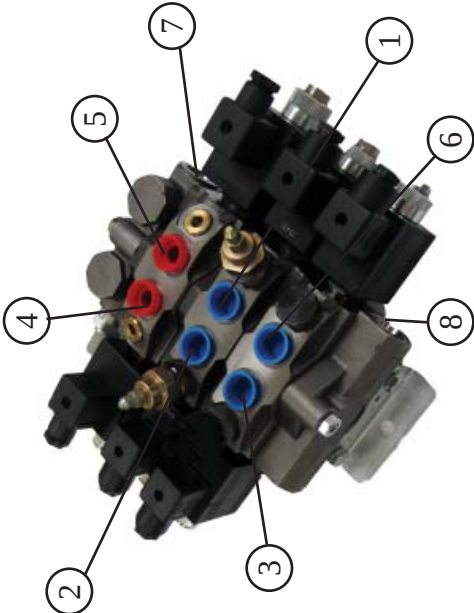 
1. 725118 - Valve

Connections

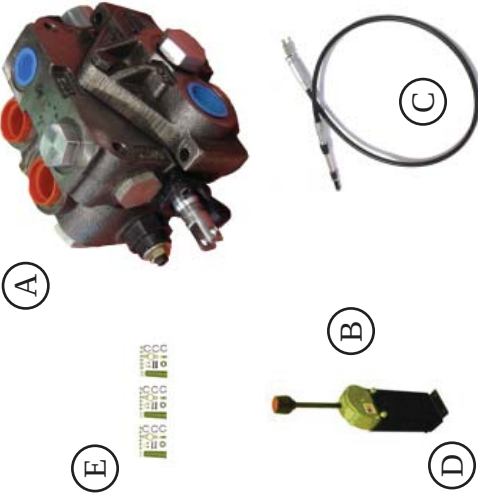 
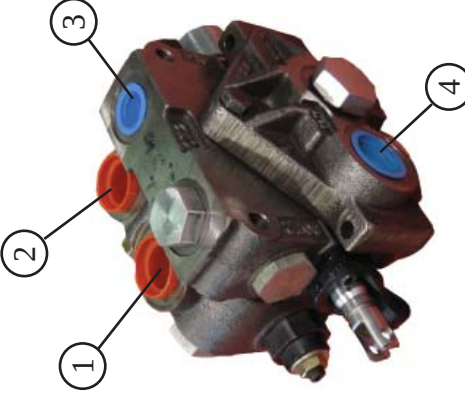 
1. Pressure from Pump
2. Hoist Cylinder (Barrel end)
3. Return to Tank

Parts List

- A. 720233 - Filter Head and element
- B. 720235 - Reservoir strainer
- C. 722003 - 15 gallon reservoir with gauge

725121 - w/Reservoir, Filter, Strainer					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓			
					
Parts List A. 725120 - Valve 110643 - Nut 110674 - Washer 110703 - Washer 222012 - Inlet 222013 - 3 Pos - 4 Way, Port Relief Valve 222014 - Outlet 222015 - Small Mounting Feet 222018 - Tie Rod 722012 - 3 Pos - 4 Way Worksection 722016 - 1 Way w/Float B. 730019 - 5 Switch Control Panel		Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Hoist Cylinder (Barrel end) 4. Plow Up Cylinder 5. Plow Down Cylinder 6. Hoist Cylinder (Rod end) 7. Pressure from Pump 8. Return to Tank		Parts List A. 720233 - Filter Head and element B. 720235 - Reservoir strainer C. 722003 - Reservoir, 15 gal. w/gauge	

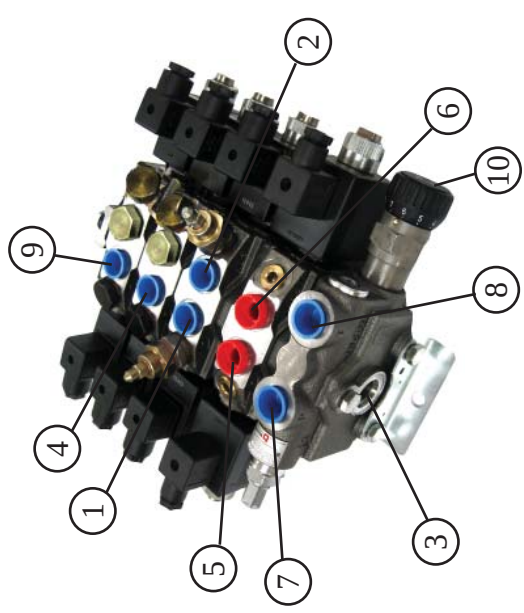 
725123 Manual Valve

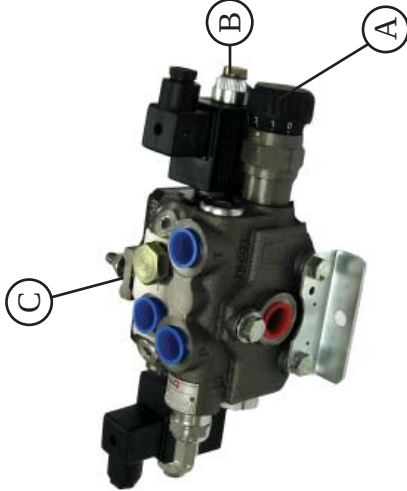 
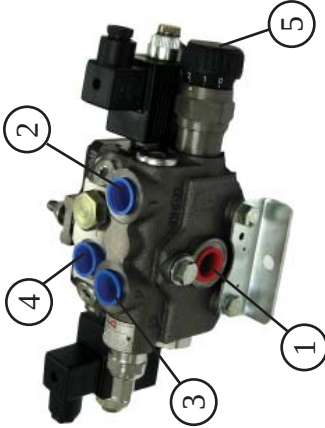 
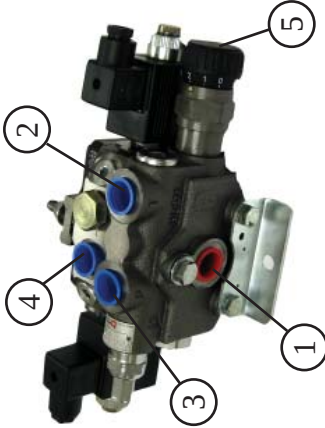 
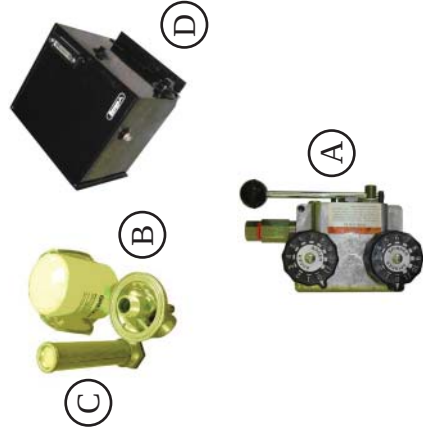 
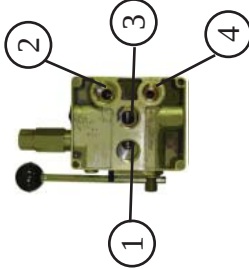 
Plow Up/Down	Plow Left/Right	S/A Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			
 (A) (B) (C) (D) (E)			 (1) (2) (3) (4)		
Parts List A. 725122 - Valve 110540 - Bolt 110672 - Washer 110826 - Nut 720263 - 3 Way Sec w/1200 Relief 720271 - Left Cover 720272, Right Cover B. 750001 - Remote Valve Control, Center Lock C. 750003 - Remote Cable, 72" D. 752001 - Control Single Tower E. 750004 - Control Kit			Connections 1. Return to Tank 2. Pressure from Pump 3. Hoist Cylinder (Barrel end) 4. Return to Tank		
Parts List A. 720233 - Filter Head and element B. 720235 - Reservoir strainer C. 722003 - 15 gallon reservoir with gauge			Parts List A. 720233 - Filter Head and element B. 720235 - Reservoir strainer C. 722003 - 15 gallon reservoir with gauge		

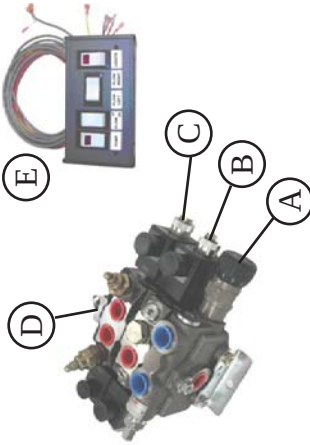 
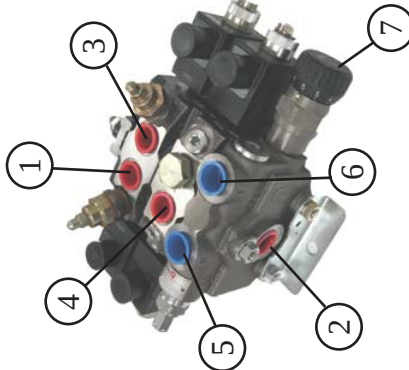 
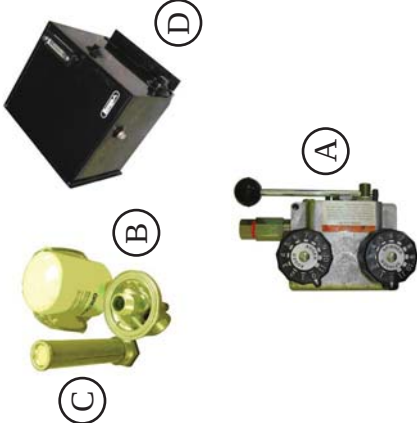 
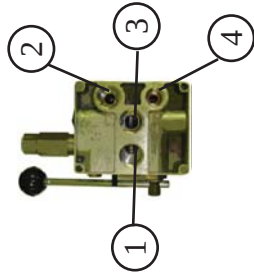 
725124 w/Reservoir, Filter, Strainer & Electric Spreader Valve

Plow Up/Down	Plow Left/Right	Hoist	Sander/ Spreader	Priority Inlet	Power Beyond			
✓	✓		✓	✓	✓			
 (B) (A)			 (C) (B) (A) (D)					
Parts List A. 725102 – Valve 110643 - Nut 110674 - Washer 110703 - Washer 222015 - Small Mounting Feet 222018 - Tie Rod 722011 - Priority Inlet Valve 722012 - 3 Pos 4 Way Worksection Valve 722015 - Outlet for Priority Inlet Valve 722030 - 3 Pos 3 Way, No Float B. 730018– 4 Switch Control Panel			Connections 1. Plow Angle Cylinder Left 2. Power Beyond to Spreader Control Valve 3. Plow Angle Cylinder Right 4. Plow up Cylinder 5. Pressure from Pump 6. Return to Tank 7. Priority Valve Adjustment			Parts List A. 723012 Valve, Electric Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir, 15 gallon		

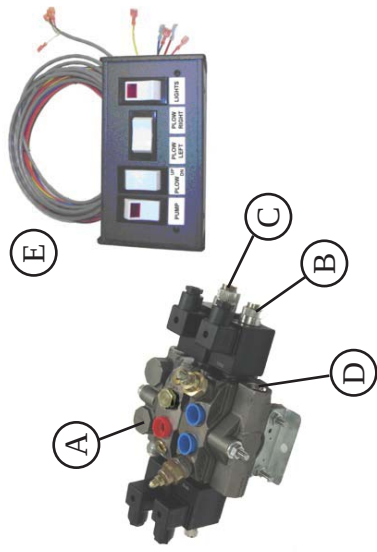 
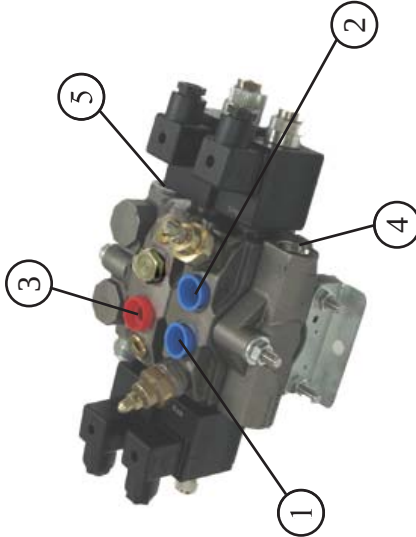 
725127 w/Reservoir, Filter, Strainer & Electric Spreader Valve

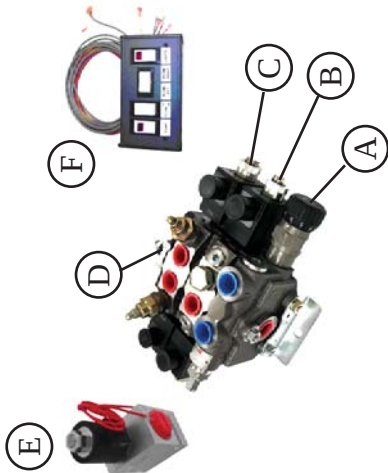 
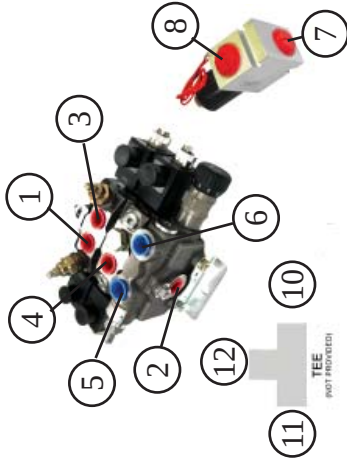 
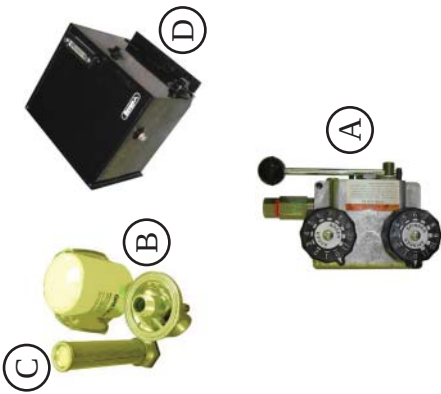 
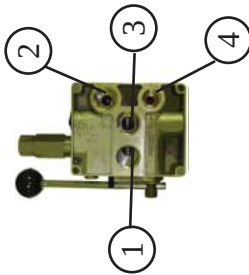 
Plow Up/Down	Plow Left/Right	S/A Hoist	S/A Side Dump	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓	✓	✓	✓
						
Parts List A. 725126 – Valve 222013 - 3 Pos - 4 way Relief Valve 722011 - Priority Inlet Valve 722015 - Outlet for Priority Inlet Valve 722016 - 1 Way w/ Float Valve 722017 - Valve Spacer 722030 - 3-Pos - 3 Way, No Float B. 730017– Panel Assembly, 6 Bank		Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Power Beyond to Spreader 4. Hoist Cylinder (Barrel End) 5. Plow Up Cylinder (Barrel End) 6. Plow Up Cylinder (Rod End) 7. Pressure from Pump 8. Return to Tank 9. Side Dump Cylinder (Barrel End) 10. Priority Valve Adjustment		Parts List A. 723012 Valve, Electric Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir, 15 gallon		

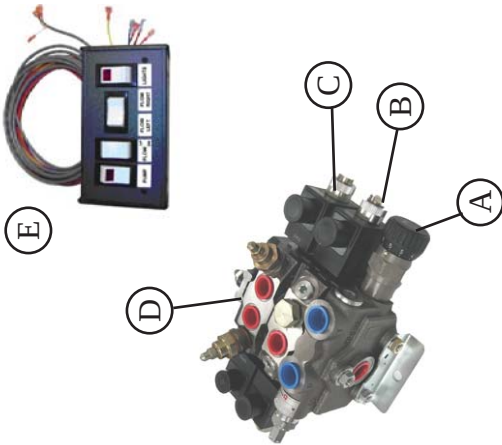 
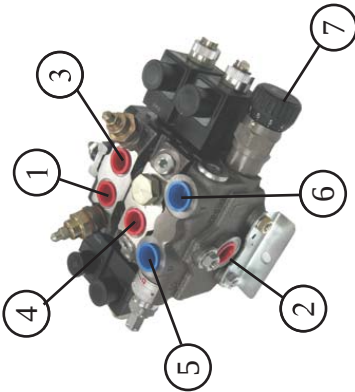 
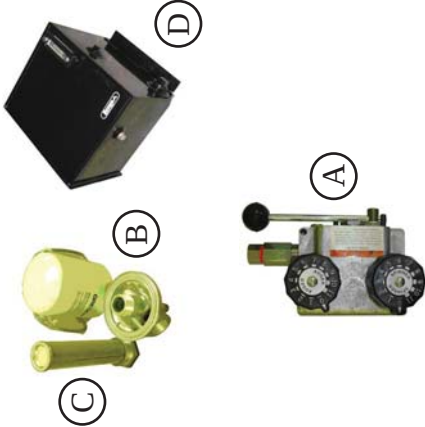 
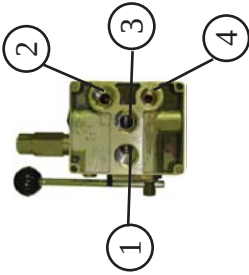 
725128 w/Reservoir, Filter, Strainer & Spreader Valve					
Plow Up/Down	Plow Left/Right	S/A Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓	✓	✓
					
Parts List 222017 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet w/Power Beyond B. 722030 - Hoist Power Up/Gravity Down Section C. 722015 - Outlet for Priority Inlet	Connections 1. Power Beyond to Spreader Control 2. Return to Tank 3. Pressure from Pump 4. Hoist Cylinder 5. Priority Valve Adjustment	Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner		

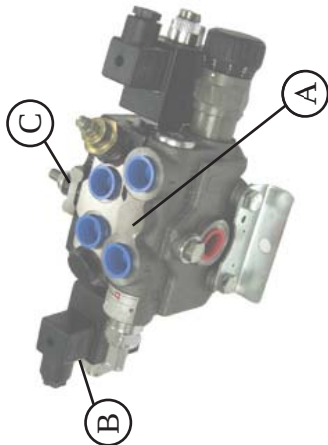 
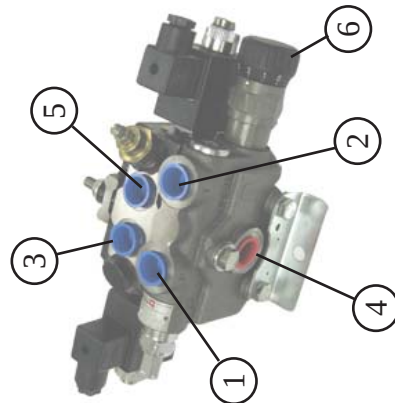 
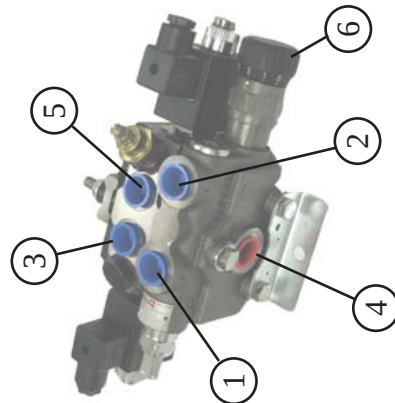 
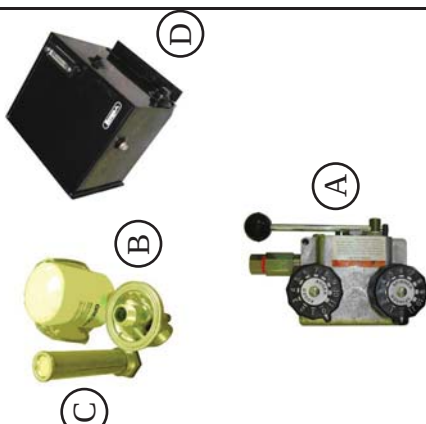 
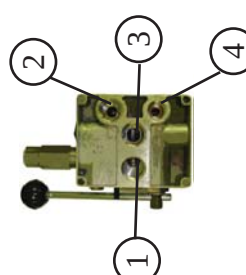 
725130 w/Reservoir, Filter, Strainer & Spreader Valve					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓		✓	✓	✓
					
Parts List 222018 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet w/Power Beyond B. 722030 - Plow Up/Down/Float Section C. 722012 - Plow Angle w/Cross Over Relief D. 722015 - Outlet for Priority Inlet E. 730018 - 4 Switch Control Panel	Connections 1. Plow Angle Cylinder Left 2. Power Beyond to Spreader Control Valve 3. Plow Angle Cylinder Right 4. Plow Up Cylinder 5. Pressure from Pump 6. Return to Tank 7. Priority Valve Adjustment	Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner		

725132 w/ Reservoir, Filter & Strainer

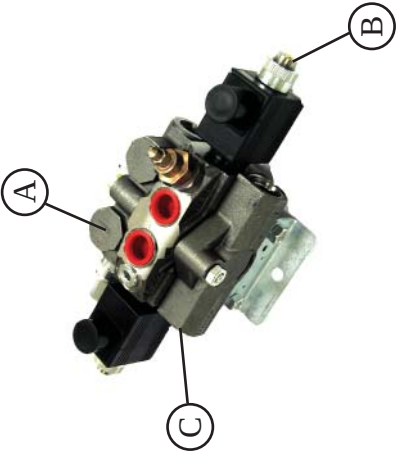 
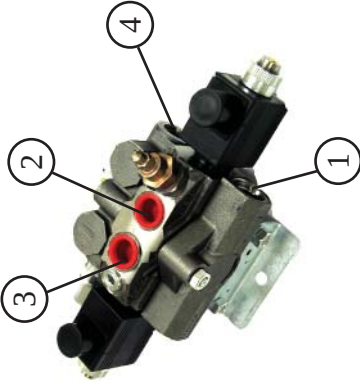 
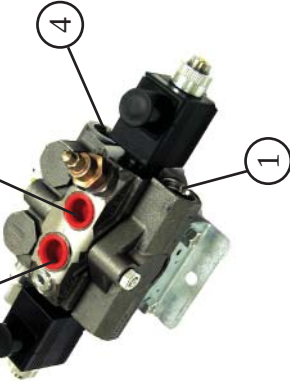 
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond	
✓	✓					
						
Parts List 222018 - Tie Rod (3) 222015 - Mounting Feet (2) A. 222012 - Inlet w/Relief B. 722012 - Plow Angle w/Cross Over Relief Section C. 722030 - Plow Up/Down/Float Section D. 222014 - Standard Outlet E. 730018 - 4 Switch Control Panel			Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Plow Up Cylinder 4. Return to Tank 5. Pressure from Pump			Parts List A. 720233 - Filter Head and element B. 720235 - Reservoir strainer C. 722003 - 15 gallon reservoir with gauge

725134 w/Reservoir, Filter, Strainer & Spreader Valve					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓		✓	✓	✓
					
Parts List 222018 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet w/Power Beyond B. 722030 - Plow/Down/Float Section C. 722012 - Plow Angle w/Cross Over Relief Section D. 722015 - Outlet for Priority Inlet E. 723008 - Spreader On/Off Valve F. 730018 - 4 Switch Control Panel	Connections 1. Plow Angle Cylinder Left 2. Power Beyond to Tee 3. Plow Angle Cylinder Right 4. Plow Up Cylinder 5. Pressure from Pump 6. Return to Tank 7. Return to Tank 8. Power Beyond from Tee 9. Priority Valve Adjustment 10. To Spreader Control Valve 11. To Spreader On/Off 12. From Main Valve	Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner		

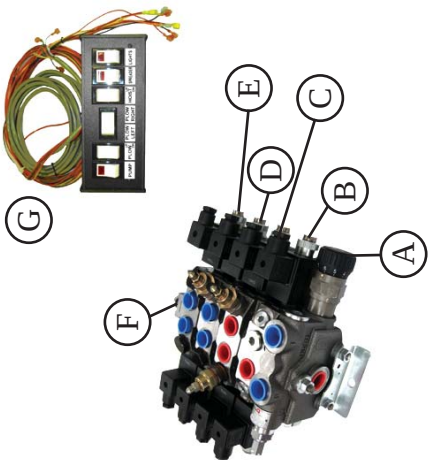 
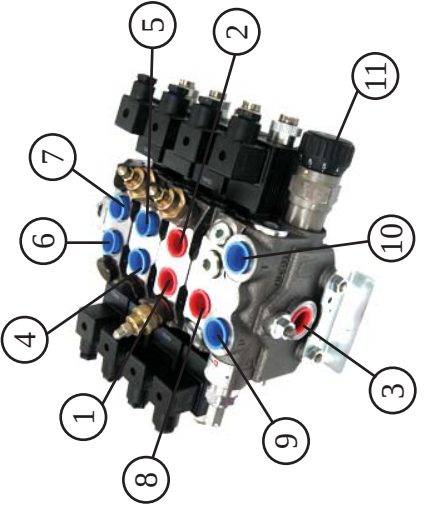 
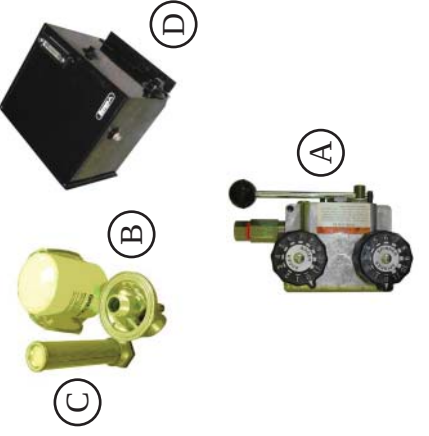 
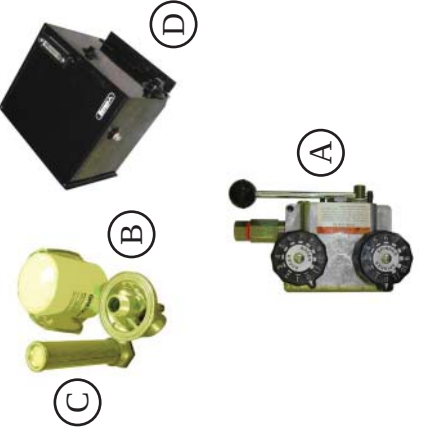 
725137 -w/Reservoir, Filter, Strainer & Spreader Valve					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓		✓	✓	✓
					
Parts List 222018 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet w/Power Beyond B. 722030 - Plow Up/Down/Float Section C. 722012 - Plow Angle w/Cross Over Relief Section D. 722015 - Outlet for Priority Inlet E. 730018 - 4 Switch Control Panel	Connections 1. Plow Angle Cylinder Left 2. Power Beyond to Spreader Control Valve 3. Plow Angle Cylinder Right 4. Plow Up Cylinder 5. Pressure from Pump 6. Return to Tank 7. Priority Valve Adjustment	Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner		

725143 -w/Reservoir, Filter, Strainer & Spreader Valve					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓	✓	✓
					
Parts List 222017 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet w/Power Beyond B. 725154 - Hoist 3 Way - 4 Position Section w/500 PSI Down Relief C. 722015 - Outlet for Priority Inlet	Connections 1. Pressure from Pump 2. Return to Tank 3. Hoist Cylinder (Barrel end) 4. Power Beyond to Spreader Control Valve 5. Hoist Cylinder (Rod end) 6. Priority Valve Adjustment	Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner		

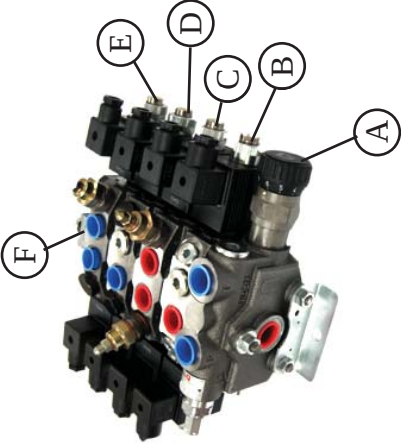 
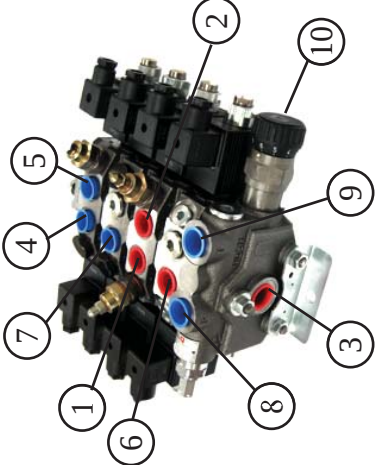 
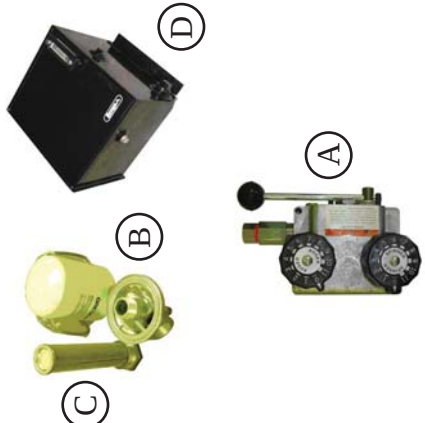 
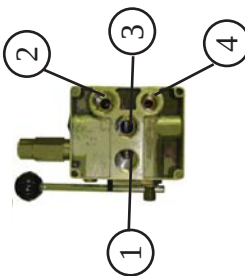 
725145- w/Reservoir, Filter & Strainer

Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
		✓			
					
Parts List 222017 - Tie Rod (3) 222015 - Mounting Feet (2) A. 222012 - Inlet w/Relief B. 725154 - Hoist Power Up/Power Down Section w/500 PSI Down Relief C. 222014- Standard Outlet			Connections 1. Return to Tank 2. Hoist Cylinder (Rod end) 3. Hoist Cylinder (Barrel end) 4. Pressure from Pump		
					
Parts List 720233 Filter B. 720235 Strainer C. 722003 Reservoir					

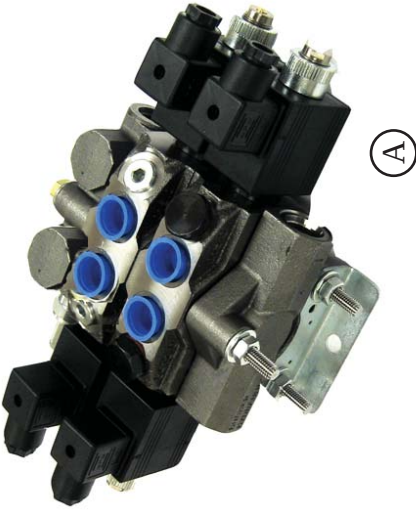 
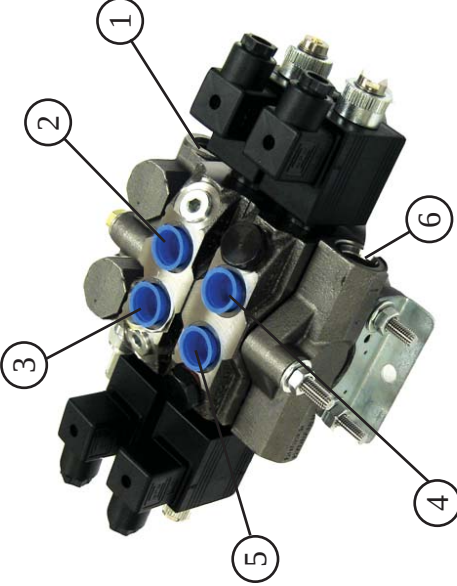 
725147 w/Reservoir, Filter, Strainer & Spreader Valve

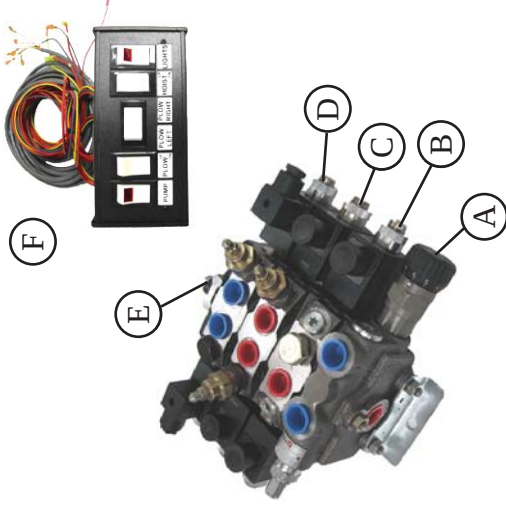 
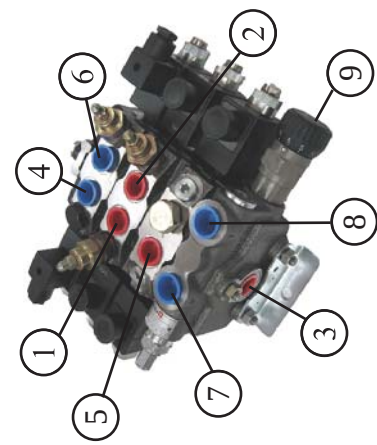 
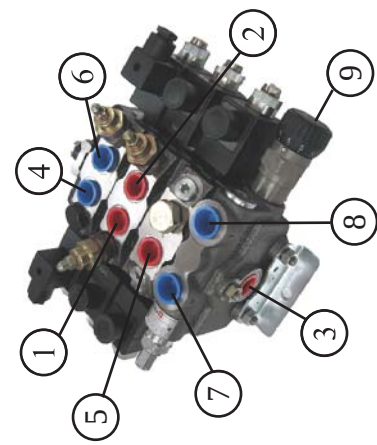 
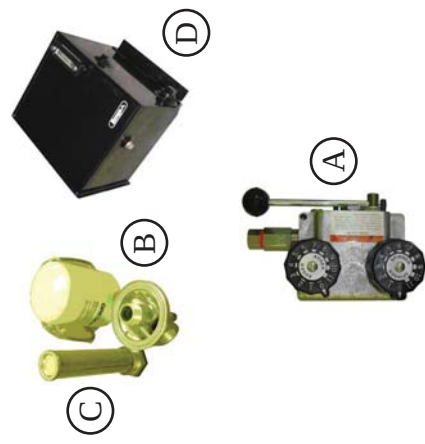 
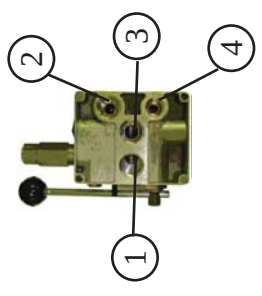 
Plow Up/Down	Plow Left/Right	Hoist	Side Dump	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓	✓	✓	✓
				Parts List 222020 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet w/Power Beyond B. 722030 - Plow Up/Down/Float Section C. 222013 - Plow Angle w/Cross Over Relief Section D. 725154 - Hoist Power Up/Power Down Section w/500 PSI Down Relief E. 722012 - Side Dump Power Up/Power Down F. 722015 - Outlet for Priority Inlet G. 730017 - 6 Switch Control Panel	Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Power Beyond to Spreader Valve 4. Hoist Cylinder (Barrel end) 5. Hoist Cylinder (Rod end) 6. Side Dump Cylinder (Barrel end) 7. Side Dump Cylinder (Rod end) 8. Plow Up Cylinder 9. Pressure from Pump 10. Return to Tank 11. Priority Valve Adjustment	Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner

725151 w/Reservoir, Filter, Strainer & Spreader Valve

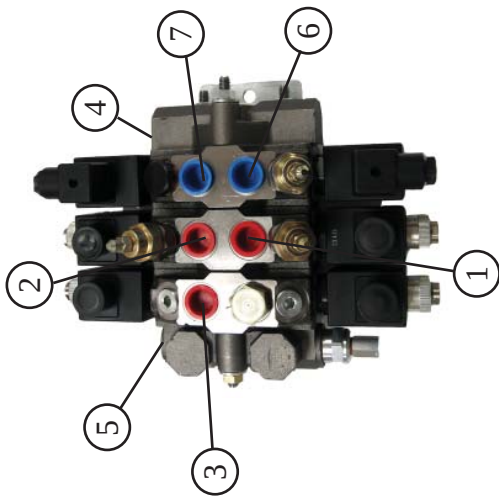 
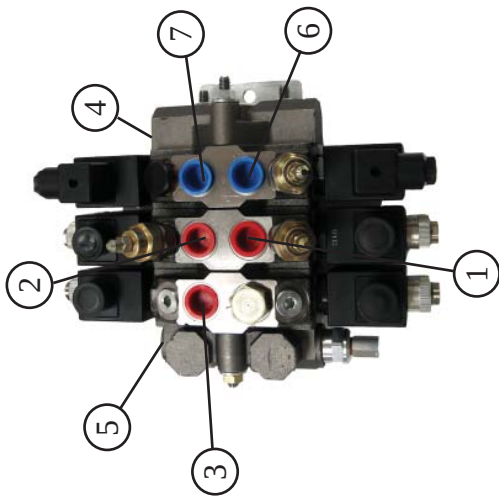 
Plow Up/Down	Plow Left/Right	Wing S/A	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓	✓	✓	✓
   						
Parts List 222020 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet w/Power Beyond B. 722030 - Plow Up/Down/Float Section C. 222013 - Plow Angle w/Cross Over Relief D. 722030 - Wing Power Up/Gravity Down Section E. 725154 - Hoist Power Up/Power Down F. 722015 - Outlet for Priority Inlet		Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Power Beyond to Spreader Valve 4. Hoist Cylinder (Barrel end) 5. Hoist Cylinder (Rod end) 6. Plow Up Cylinder 7. Wing Up Cylinder 8. Pressure from Pump 9. Return to Tank 10. Priority Valve Adjustment		Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722004 Reservoir		Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner

725153 w/Reservoir, Filter, Strainer & Spreader Valve

Plow Up/Down	Plow Left/Right	Hoist	Side Dump	Sander/Spreader	Priority Inlet	Power Beyond
		✓	✓			
  						
Parts List A. 725152 Valve, Snow Plow 110643 - Nut 110674 - Washer 110703 - Washer 222012 - Inlet 222013 - 3 Pos - 4Way Port Relief Valve 222014 - Outlet 222015 - Small Mounting Feet 222018 - Tie Rod		Connections 1. Pressure from Pump 2. Rod end of Cylinder 3. Barrel end of Cylinder 4. Rod end of Cylinder 5. Barrel end of Cylinder 6. Return to Tank		Parts List A. 720233 Filter B. 720235 Strainer C. 722003 Reservoir		

725159 w/Reservoir, Filter, Strainer & Spreader Valve					
Plow Up/Down	Plow Left/Right	Hoist	Sander/Spreader	Priority Inlet	Power Beyond
✓	✓	✓	✓	✓	✓
					
Parts List 222020 - Tie Rod (3) 222015 - Mounting Feet (2) A. 722011 - Priority Inlet w/Power Beyond B. 722030 - Plow Up/Down/Float Section C. 222013 - Plow Angle w/Cross Over Relief Section D. 725154 - Hoist Power Up/Power Down Section w/500 PSI Down Relief E. 722015 - Outlet for Priority Inlet f. 730019 - 5 Switch Control Panel	Connections 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Power Beyond to Spreader 4. Hoist Cylinder (Barrel end) 5. Plow Up Cylinder 6. Hoist Cylinder (Rod end) 7. Pressure from Pump 8. Return to Tank 9. Priority Valve Adjustment	Parts List A. 720232 Valve, Spreader B. 720233 Filter C. 720235 Strainer D. 722003 Reservoir	Connections 1. Return to Tank 2. Auger 3. Pressure from Valve 4. Spinner		

725162 w/Reservoir, Filter, Strainer

Plow Up/Down	Plow Left/Right	Hoist	Sander/ Spreader	Priority Inlet	Power Beyond
✓	✓	✓			
 (A)	 (B)	 1. Plow Angle Cylinder Left 2. Plow Angle Cylinder Right 3. Plow Up Cylinder 4. Return to Tank 5. Pressure from Pump 6. Hoist Cylinder (Rod end) 7. Hoist Cylinder (Barrel end)	 Connections	 (B) (A) (C)	 (C)
Parts List A. 725161 – Valve 110643 - Nut 110674 - Washer 110703 - Washer 222012 - Inlet 222013 - 3 Pos - 4 Way Port Relief 222014 - Outlet 222015 - Small Mounting Feet 222020 - Tie Rod 722030 - 3 Pos - 3 Way, No Float 725154 - 3 Pos/4Way w/500 PSI Relief B. 730019 - 5 Switch Control Panel			Parts List A. 720233 Filter B. 720235 Strainer C. 722003 Reservoir, 15 gallon		